

## B0CDBB3YVX

# Generic IR Replacement Remote Control User Manual

Model: B0CDBB3YVX

Compatible with Touyinger H5, MUDIX MX-2 MX-2 PRO, Akiyo O7, Salange HP10 P40 5G Wi-Fi Mini LED Portable DLP Android Projectors

## 1. INTRODUCTION

This document provides instructions for the Generic IR Replacement Remote Control. This remote is designed as a replacement for specific projector models, including Touyinger H5, MUDIX MX-2, MUDIX MX-2 PRO, Akiyo O7, Salange HP10, and Salange P40 5G Wi-Fi Mini LED Portable DLP Android Projectors.

Please verify that your projector model is listed in the compatibility section to ensure proper functionality. This remote operates using infrared (IR) technology.

## 2. PACKAGE CONTENTS

- 1 x Generic IR Replacement Remote Control
- **Note:** AAA batteries are **not included** and must be purchased separately.
- **Note:** A separate instruction manual is not included with the physical product. This document serves as the primary instruction guide.

## 3. PRODUCT OVERVIEW

The remote control features a standard button layout for easy navigation and control of compatible projectors. Familiarize yourself with the buttons as shown in the image below.



**Figure 3.1:** Front view of the remote control. Key buttons include Power (red), Settings (gear icon), Navigation (directional pad), OK (center), Home (house icon), Back (curved arrow), Menu (three horizontal lines), Volume Up/Down, and Mute (crossed-out speaker).

### Button Functions:

- **Power Button (Red):** Turns the projector on or off.
- **Settings Button (Gear Icon):** Accesses the projector's settings menu.
- **Navigation Pad (Up, Down, Left, Right):** Moves cursor or selection within menus.
- **OK Button:** Confirms selection or action.
- **Home Button (House Icon):** Returns to the projector's main home screen.
- **Back Button (Curved Arrow):** Returns to the previous screen or menu.
- **Menu Button (Three Horizontal Lines):** Opens context-sensitive menus or additional options.
- **Volume Up/Down Buttons:** Adjusts the audio volume.
- **Mute Button (Crossed-out Speaker):** Mutes or unmutes the audio.

## 4. SETUP

### 4.1 Battery Installation

The remote control requires two (2) AAA batteries for operation. Follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the remote control.
2. Gently slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two (2) AAA batteries, ensuring the positive (+) and negative (-) terminals match the diagrams inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



**Figure 4.1:** Back view of the remote control with the battery compartment open, illustrating the correct orientation for AAA battery insertion.

## 4.2 Initial Use

Since this is an IR (Infrared) remote control, no pairing is typically required. Once batteries are installed, point the remote directly at the IR receiver on your compatible projector and begin use.

## 5. OPERATING INSTRUCTIONS

To operate your projector using this remote control, ensure there is a clear line of sight between the remote's IR emitter (located at the front tip) and the projector's IR receiver. Obstructions can block the signal.

- **Turning On/Off:** Press the **Power** button once to turn the projector on. Press it again to turn the projector off.
- **Navigating Menus:** Use the **Navigation Pad** (Up, Down, Left, Right arrows) to move through menu options.
- **Selecting Items:** Press the **OK** button to confirm a selection or open a highlighted item.
- **Accessing Settings:** Press the **Settings** button to open the projector's system settings.
- **Returning Home:** Press the **Home** button to quickly return to the main interface of the projector.
- **Going Back:** Use the **Back** button to navigate to the previous screen or exit a menu.
- **Adjusting Volume:** Use the **Volume Up** and **Volume Down** buttons to control the audio output.
- **Muting Audio:** Press the **Mute** button to temporarily silence the audio. Press again to unmute.

## 6. MAINTENANCE

### 6.1 Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's surface or internal components.

### 6.2 Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent

leakage and potential damage.

### 6.3 Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both AAA batteries at the same time with new ones. Do not mix old and new batteries, or different types of batteries.

## 7. TROUBLESHOOTING

- **Remote not responding:**

- Ensure batteries are correctly installed with the correct polarity (+/-).
- Replace old batteries with new AAA batteries.
- Check for any obstructions between the remote and the projector's IR receiver.
- Ensure you are pointing the remote directly at the projector's IR receiver.

- **Limited range:**

- Ensure batteries are fresh.
- Reduce the distance between the remote and the projector.
- Remove any potential sources of IR interference (e.g., strong lights, other IR devices).

- **Some functions not working:**

- Verify that your projector model is explicitly listed as compatible. This is a replacement remote and may not offer all functions of an original remote for non-listed models.
- Some projector models may have unique functions not supported by a universal replacement remote.

## 8. SPECIFICATIONS

<b>Connectivity Technology</b>	Infrared (IR)
<b>Controller Type</b>	Button Control
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Compatible Devices</b>	Projectors (Touyinger H5, MUDIX MX-2 MX-2 PRO, Akiyo O7, Salange HP10 P40)
<b>Special Feature</b>	Replacement remote compatible only with listed models.

## 9. WARRANTY AND SUPPORT

Specific warranty information for this Generic replacement remote control is not provided in this document. For any warranty claims, technical support, or further assistance, please contact the seller directly through your purchase platform.

Ensure you have your order details available when contacting support.

