

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SINORISE](#) /

› [SINORISE SR-610 Super Mini Walkie Talkies Instruction Manual](#)

SINORISE SR-610

SINORISE SR-610 Super Mini Walkie Talkies Instruction Manual

Model: SR-610

1. PRODUCT OVERVIEW

The SINORISE SR-610 Super Mini Walkie Talkies are compact and portable two-way radios designed for clear and reliable communication in various environments. Featuring an ergonomic G-shape ear hook, smart LED display, and intelligent noise reduction technology, these walkie talkies are ideal for use in restaurants, hotels, supermarkets, hospitals, and outdoor activities.



Image: Three SINORISE SR-610 Super Mini Walkie Talkies, showcasing their compact design and included accessories.

Key Features:

- **Miniature Design:** Measuring L2*W0.84*H0.59 inches and weighing only 0.6 oz, these walkie talkies are highly portable.
- **Ergonomic G-Shape Ear Hook:** Designed for comfortable, long-term wear, fitting either the left or right ear with three sized earphone caps.
- **Smart LED Display:** Clearly shows channel, volume settings, and charge status at a glance. Includes a smart security lock to prevent accidental key presses.
- **Clear Communication:** High-performance speaker and intelligent noise reduction technology ensure clear audio.
- **Extended Range:** Offers a talking range of up to 2 miles in open, flat areas without high obstacles.

- **Type-C Charging:** USB Type-C charging for faster and safer power replenishment.
- **Long Battery Life:** Provides up to 48 hours of standby time and approximately 12 hours of continuous use.

2. PACKAGE CONTENTS

Please verify that all items are present in your package:

- 3 x Mini Walkie Talkies
- 3 x USB Type-C Cables
- 3 x G-Shape Designed Ear Hooks
- 3 x Power Adaptors
- 1 x User Manual (this document)

3. COMPONENT IDENTIFICATION

Familiarize yourself with the various parts and controls of your SINORISE SR-610 Walkie Talkie:



Image: Front view of the walkie talkie with numbered labels for its components.

1. **Power Button:** Used to turn the device on or off.
2. **P Key (Program/Lock Button):** Used to enter programming mode for channel/volume and to lock/unlock the device.
3. **Microphone:** For voice input during transmission.
4. **Earphone and Charging Hole (USB Type-C):** Multi-purpose port for connecting the ear hook and charging the device.
5. **- Key (Down/Volume Down):** Used to decrease channel number or volume level.
6. **+ Key (Up/Volume Up):** Used to increase channel number or volume level.
7. **PTT Key (Push-to-Talk):** Press and hold to transmit your voice; release to listen. Also used to save settings.



Image: The smart LED display showing the lock icon, indicating the device is locked.

4. SETUP

4.1 Charging the Device

Before first use, fully charge your walkie talkies. Use the provided USB Type-C cable and power adaptor.

1. Connect the USB Type-C cable to the charging port on the walkie talkie.
2. Connect the other end of the USB cable to the power adaptor.
3. Plug the power adaptor into a standard electrical outlet.
4. The LED display will indicate charging status. Once fully charged, disconnect the device.

The channel/volume settings, as well as the status of charge, can be clear at a glance

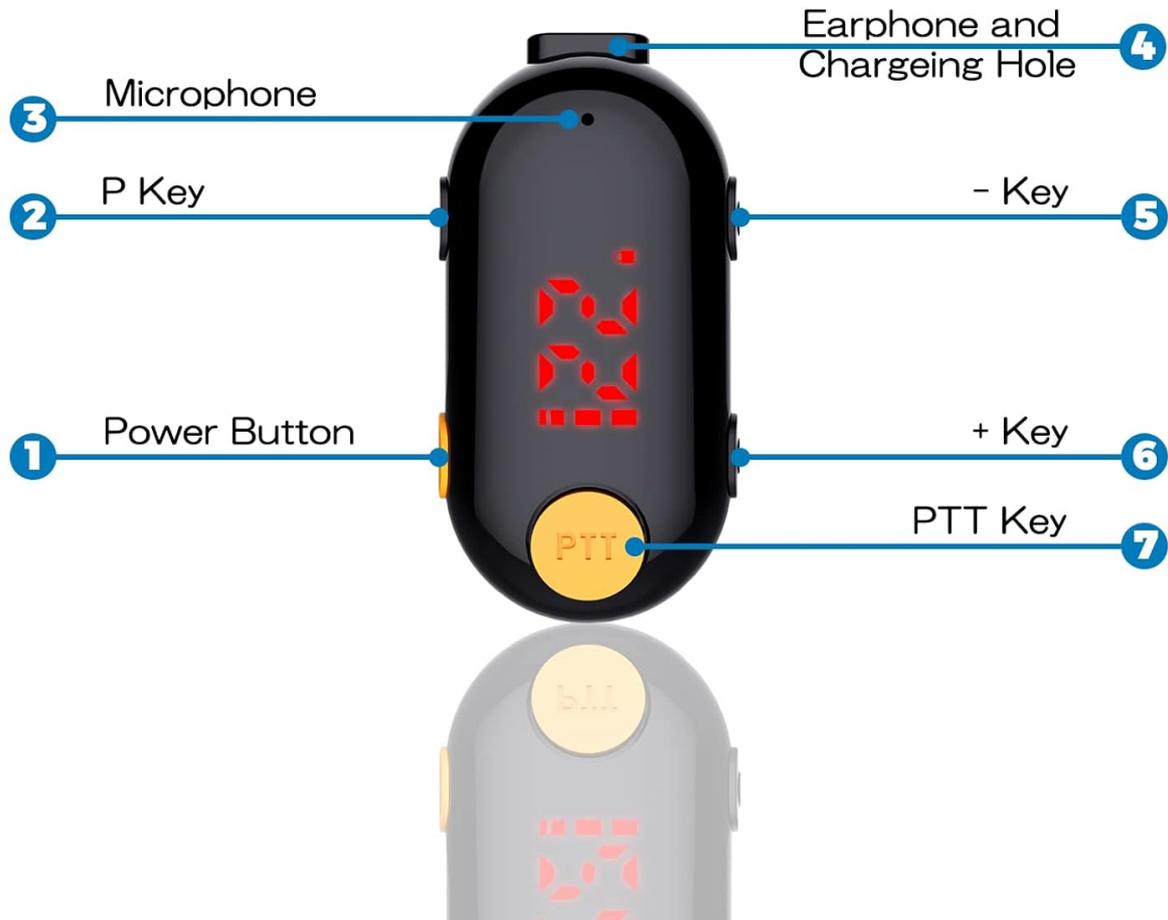


Image: The walkie talkie connected to a USB Type-C charging cable.

4.2 Attaching the Ear Hook and Clip

The G-shape ear hook and integrated clip provide comfortable and secure wearing options.

1. Rotate the earphone of the G-shape ear hook to fit either the left or right ear.
2. Adjust the angle of the inner ear hanging part so that the sound hole is positioned correctly and attached to the ear.
3. Hold down the sound head and pull the soft glue ear hang from the top direction to the back to secure it.
4. Use the convenient clip on the back of the walkie talkie to attach it to your collar or clothing.



Image: Visual guide for attaching the ear hook and clipping the device to clothing.

5. OPERATING INSTRUCTIONS

5.1 Power On/Off

- To power on, press and hold the **Power Button** until the LED display illuminates.
- To power off, press and hold the **Power Button** until the LED display turns off.

5.2 Channel Selection

The walkie talkies support 22 channels. To communicate, all devices must be on the same channel.

1. Press the **P Key** once. The LED display will show 'CH' followed by the current channel number.
2. Use the **+ Key** or **- Key** to navigate through the channels (1-22).
3. Once your desired channel is displayed, press the **PTT Key** to save the setting and exit channel selection mode. The device will enter standby.

5.3 Volume Adjustment

The walkie talkies offer 8 volume levels.

1. First, ensure you are not in channel selection mode. If you are, press the **PTT Key** to save and exit.
2. Long press the **+ Key** or **- Key**. The LED display will show 'VL' followed by the current volume level.
3. Use the **+ Key** or **- Key** to adjust the volume level (1-8).
4. Once your desired volume is displayed, press the **PTT Key** to save the setting and exit volume adjustment mode. The device will enter standby.

5.4 Lock/Unlock Function

To prevent accidental changes to settings, you can lock the device.

- To lock the device, press and hold the **P Key**. A lock icon will appear on the LED display.
- To unlock the device, press and hold the **P Key** again. The lock icon will disappear.

5.5 Transmitting and Receiving

- To transmit your voice, press and hold the **PTT Key**. A small red icon will appear on the display, indicating transmission. Speak clearly into the microphone.
- Release the **PTT Key** to stop transmitting and return to receiving mode.
- When receiving a transmission, the device will automatically play the incoming audio.

Your browser does not support the video tag.

Video: A demonstration of the basic operations of the SINORISE SR-610 Walkie Talkie, including power on/off, channel and volume adjustment, and the lock/unlock function.

6. MAINTENANCE

Proper care will extend the life of your walkie talkies.

- **Cleaning:** Wipe the device with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Storage:** Store the walkie talkies in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** Avoid fully discharging the battery frequently. For long-term storage, charge the battery to about 50% and recharge every few months.
- **Water Resistance:** The device is water repellent, but not fully waterproof. Avoid submerging it in water.

7. TROUBLESHOOTING

If you encounter issues with your walkie talkies, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Device does not power on	Low battery; Power button not pressed correctly	Charge the battery; Press and hold the Power button firmly.

Problem	Possible Cause	Solution
No sound or poor audio quality	Volume too low; Incorrect channel; Obstructions; Ear hook not properly connected	Adjust volume; Ensure all devices are on the same channel; Move to an open area; Reconnect ear hook securely.
Unable to change channel/volume	Device is locked	Unlock the device by long pressing the P Key.
Limited communication range	Environmental factors (buildings, terrain); Low battery	Move to a more open area; Ensure batteries are fully charged.

8. SPECIFICATIONS

Feature	Detail
Brand	SINORISE
Model Number	SR-610
Item Weight	0.6 ounces
Product Dimensions	0.59 x 0.84 x 2 inches
Batteries	1 Lithium Polymer battery required (included)
Color	Black
Number of Channels	22
Special Feature	Noise Reduction
Frequency Range	462.56-467.71 MHZ
Talking Range Maximum	2 Mile (in open, flat areas)
Tuner Technology	FM
Voltage	3.8 Volts
Water Resistance Level	Water Repellent

9. WARRANTY AND SUPPORT

Your SINORISE SR-610 Walkie Talkies come with a **2-year warranty** from the date of purchase.

For technical support, warranty claims, or any questions regarding your product, please contact SINORISE

customer service through the retailer where you purchased the product or visit the official SINORISE store on Amazon.

SINORISE Store: <https://www.amazon.com/stores/SINORISE/page/6D7E3DC2-D497-4759-9CB3-6AC49FEC09C>