Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- , PDP /
- > PDP Gaming AIRLITE Stereo Headset User Manual for Nintendo Switch/Lite/OLED

PDP AIRLITE HEADSET (Model 500-162-MNBK)

PDP Gaming AIRLITE Stereo Headset User Manual

Model: AIRLITE HEADSET (500-162-MNBK)

Brand: PDP

Introduction

This manual provides comprehensive instructions for the setup, operation, maintenance, and troubleshooting of your PDP Gaming AIRLITE Stereo Headset. Designed for immersive gaming, this headset is compatible with Nintendo Switch, Nintendo Switch Lite, and Nintendo Switch - OLED Model consoles. Please read this manual thoroughly to ensure optimal performance and longevity of your device.

Figure 1: PDP Gaming AIRLITE Stereo Headset (Moonlight Black/Blue)

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- PDP Gaming AIRLITE Stereo Headset
- User Manual (this document)

PRODUCT FEATURES

The PDP Gaming AIRLITE Stereo Headset offers several key features for an enhanced gaming experience:

- Lightweight Construction: Weighing approximately 7 oz, designed for extended gaming sessions without discomfort.
- Powerful Audio: Equipped with 40mm drivers, engineered to deliver clear and immersive in-game sound.

- Comfortable Earcups: Soft padded earcups provide maximum comfort during use.
- Noise-Canceling Microphone: Features a sleek, noise-canceling microphone for clear communication.
- Flip-to-Mute Function: Easily mute the microphone by flipping it up.
- Official Nintendo License: Officially licensed by Nintendo for guaranteed compatibility and quality.

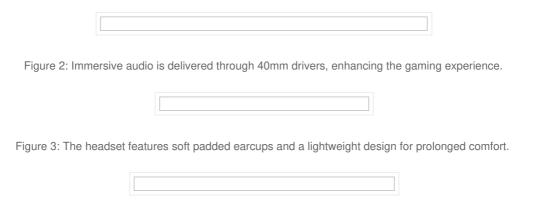


Figure 4: The noise-canceling microphone can be flipped up to mute, ensuring clear communication.

SETUP INSTRUCTIONS

Follow these steps to connect your PDP Gaming AIRLITE Stereo Headset to your Nintendo Switch console:

- 1. Locate the Audio Jack: Identify the 3.5mm audio jack on your Nintendo Switch, Switch Lite, or Switch OLED Model. This is typically located on the top or bottom edge of the console.
- 2. **Connect the Headset:** Insert the 3.5mm audio plug from your PDP Gaming AIRLITE Stereo Headset firmly into the console's audio jack.
- 3. Verify Connection: Once connected, audio from your console should now play through the headset.
- 4. **Adjust Volume:** Use the volume control on the headset (located on the back left earcup) to adjust the audio level to your preference.
- 5. **Position Microphone:** Lower the microphone boom arm to activate the microphone for voice chat.



Figure 5: The headset connected and in use during a gaming session.

OPERATING INSTRUCTIONS

Understanding the basic controls of your headset will enhance your gaming experience.

- **Volume Control:** A volume roller is located on the back of the left earcup. Rotate the roller up to increase volume and down to decrease volume.
- Microphone Mute: The microphone features a flip-to-mute function.
 - To activate the microphone, lower the microphone boom arm into the speaking position.
 - To mute the microphone, flip the microphone boom arm upwards until it clicks into the upright position.

MAINTENANCE

To ensure the longevity and optimal performance of your headset, follow these maintenance guidelines:

- Cleaning: Use a soft, dry cloth to wipe down the headset. Avoid using harsh chemicals or abrasive cleaners.
- Storage: Store the headset in a cool, dry place away from direct sunlight and extreme temperatures.
- Cable Care: Avoid sharply bending or twisting the cable. Do not pull on the cable to disconnect the headset; always grasp the plug.
- Moisture: The headset is not water-resistant. Avoid exposure to liquids.

TROUBLESHOOTING

If you encounter issues with your headset, refer to the following common problems and solutions:

· No Sound from Headset:

- Ensure the 3.5mm audio plug is fully inserted into the console's audio jack.
- Check the volume roller on the headset and ensure it is turned up.
- Verify that the console's audio output settings are correctly configured to output sound through the headphone jack.
- Test the headset with another device to confirm functionality.

• Microphone Not Working:

- Ensure the microphone boom arm is fully lowered into the speaking position (not muted).
- Check in-game or console communication settings to ensure the microphone input is enabled and correctly selected.
- Test the microphone with another device or application to confirm functionality.

· Sound Distortion or Static:

- Ensure the audio plug is clean and free of debris.
- Try connecting the headset to a different audio source to rule out interference from the console.

SPECIFICATIONS

Feature	Detail
Model Name	AIRLITE HEADSET
Item Model Number	500-162-MNBK
Connectivity Technology	Wired (3.5 mm Jack)
Compatible Devices	Nintendo Switch, Nintendo Switch Lite, Nintendo Switch - OLED Model
Audio Driver Size	40 Millimeters

Feature	Detail
Frequency Range	20 Hz - 20,000 Hz
Control Type	Volume Control (Remote)
Microphone	Noise-Canceling, Flip-to-Mute
Material	Plastic
Item Weight	Approx. 7 oz (0.018 ounces listed in some specifications, but 7 oz is more accurate for a headset)
Water Resistance Level	Not Water Resistant

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the official PDP website or contact their customer service department. Keep your proof of purchase for any warranty claims.

Online Support: www.pdp.com/support

© 2025 PDP. All rights reserved. Nintendo Switch is a trademark of Nintendo.

Related Documents - AIRLITE HEADSET (Model 500-162-MNBK)



PDP AIRLITE Wired Headset for Nintendo Switch: Quick Start Guide

Get started quickly with the PDP AIRLITE Wired Headset for Nintendo Switch. This guide covers initial setup, connecting the headset, mic mute, audio controls, and warranty information.



PDP REMATCH Wired Controller for Nintendo Switch: Quick Start Guide

Concise guide to setting up and using the PDP REMATCH Wired Controller for Nintendo Switch, covering initial setup, audio, volume, and back button programming.

