



[Manuals.plus](#) /

> [BOGASING](#) /

> BOGASING M6 Bluetooth Speaker User Manual

BOGASING M6

BOGASING M6 Bluetooth Speaker User Manual

Model: M6

INTRODUCTION

Thank you for purchasing the BOGASING M6 Bluetooth Speaker. This manual provides detailed instructions for setting up, operating, and maintaining your speaker. Please read this manual carefully before use to ensure optimal performance and longevity of your device. Keep this manual for future reference.

PACKAGE CONTENTS

Please check the package contents upon unboxing. If any items are missing or damaged, contact customer support.

- BOGASING M6 Bluetooth Speaker
- Type-C Charging Cable
- 3.5mm Audio Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the speaker's buttons and ports.

Extended Playtime

With the top-of-the-line rechargeable li-ion battery, long enough for any outdoor activities.



Figure 1: Top Panel Buttons and Rear Ports

Top Panel Buttons:

- **Power Button:** Press and hold to power on/off.
- **Mode Switch (M):** Press to cycle through input modes (Bluetooth, TF Card, AUX).
- **Play/Pause Button:** Press to play or pause audio.
- **Volume Down (-)/Previous Track:** Press to decrease volume. Press and hold to go to the previous track.
- **Volume Up (+)/Next Track:** Press to increase volume. Press and hold to go to the next track.
- **Phone Assistant Button:** Press to activate your device's voice assistant.

Rear Ports:

- **USB-C Charging Port:** For charging the speaker.
- **TF Card Slot:** For playing audio from a TF (MicroSD) card.
- **AUX-IN Port:** For connecting external audio devices via a 3.5mm audio cable.

SETUP

1. Charging the Speaker

Before first use, fully charge the speaker. Connect the provided USB-C charging cable to the speaker's USB-C port and the other end to a USB power adapter (not included) or a computer's USB port. The charging indicator light will show the charging status.

2. Power On/Off

- **To Power On:** Press and hold the Power button for 2-3 seconds. You will hear an audible prompt.
- **To Power Off:** Press and hold the Power button for 2-3 seconds. You will hear an audible prompt.

3. Bluetooth Pairing


The speaker will automatically enter Bluetooth pairing mode when powered on for the first time or if no device is connected.

1. Power on the BOGASING M6 speaker. The Bluetooth indicator will flash, indicating it's in pairing mode.
2. Enable Bluetooth on your device (smartphone, tablet, laptop).
3. Search for "BOGASING M6" in the list of available Bluetooth devices.
4. Select "BOGASING M6" to connect. Once connected, you will hear a confirmation sound, and the Bluetooth indicator will remain solid.

The speaker will automatically reconnect to the last paired device when powered on, if available.

4. True Wireless Stereo (TWS) Pairing

You can pair two BOGASING M6 speakers together for a true stereo sound experience.

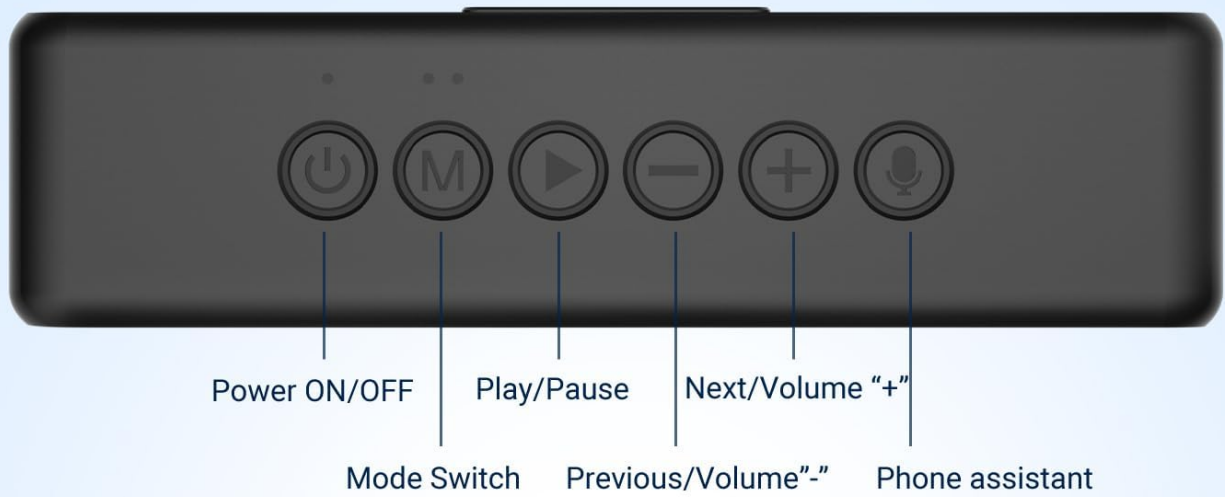

EASY TO USE

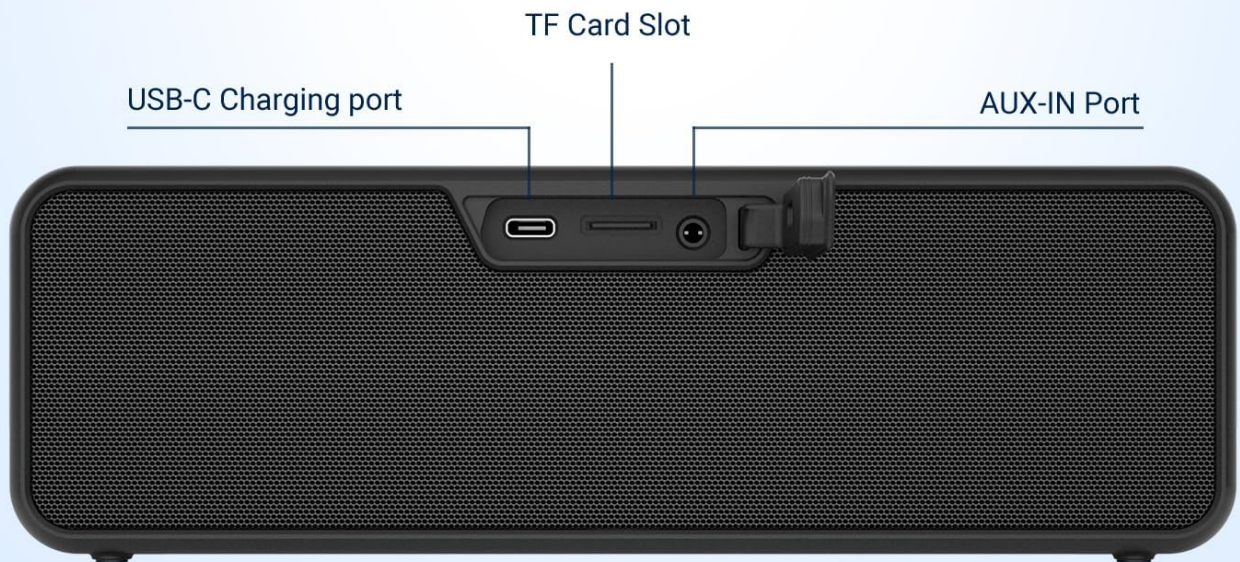


Figure 2: True Wireless Stereo (TWS) Pairing

1. Ensure both BOGASING M6 speakers are powered on and not connected to any Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the Play/Pause button for 2-3 seconds until you hear a pairing tone.
3. The two speakers will automatically connect to each other. You will hear a confirmation sound once TWS pairing is successful.
4. Now, connect your device to the primary speaker via Bluetooth as described in the "Bluetooth Pairing" section. The audio will play in stereo through both speakers.

5. Other Input Modes (AUX, TF Card)

- **AUX Mode:** Insert the 3.5mm audio cable into the AUX-IN port of the speaker and connect the other end to your audio device. The speaker will automatically switch to AUX mode.
- **TF Card Mode:** Insert a TF (MicroSD) card with audio files into the TF Card slot. The speaker will automatically switch to TF Card mode and begin playing.
- **Switching Modes:** Press the 'M' (Mode Switch) button to cycle between Bluetooth, AUX, and TF Card modes.

OPERATING INSTRUCTIONS

Basic Controls

- **Play/Pause:** Press the Play/Pause button.
- **Volume Adjustment:** Press the '+' button to increase volume, and the '-' button to decrease volume.
- **Next Track:** Press and hold the '+' button.
- **Previous Track:** Press and hold the '-' button.
- **Answer/End Call:** Press the Play/Pause button during an incoming call.
- **Reject Call:** Press and hold the Play/Pause button during an incoming call.
- **Activate Voice Assistant:** Press the Phone Assistant button.

EQ Modes

The BOGASING M6 offers three distinct EQ sound modes to enhance your listening experience.



Figure 3: Three Audio Modes

To switch between EQ modes, press the EQ button (often integrated with the Mode Switch or a dedicated button, refer to your specific model's button layout if different from Figure 1). The available modes are:

- **Vocal:** Optimizes sound for clear vocals, ideal for podcasts or acoustic music.
- **Bass:** Enhances low frequencies for a richer, deeper bass experience.
- **3D Stereo:** Creates a wider, more immersive soundstage.

MAINTENANCE

Proper care ensures the longevity of your BOGASING M6 speaker.

- **Cleaning:** Wipe the speaker with a soft, damp cloth. Do not use harsh chemicals or abrasive cleaners.
- **Water Resistance:** The speaker is IPX6 waterproof, meaning it can withstand powerful water jets. Do not submerge it in water for extended periods. Ensure the charging port cover is securely closed before exposure to water.

THREE AUDIO MODES

EQ function for switch three sound modes, to meet your various listening preference.



Deep Bass



3D Stereo



Vocal



Figure 4: IPX6 Waterproof Feature

- **Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.

- **Battery Care:** To preserve battery life, charge the speaker regularly, even if not in use for extended periods. Avoid fully discharging the battery frequently.

TROUBLESHOOTING

If you encounter issues with your speaker, refer to the following common problems and solutions.

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker fully.
Cannot pair via Bluetooth.	Speaker not in pairing mode; Bluetooth disabled on device; already connected to another device.	Ensure speaker is in pairing mode (flashing indicator). Enable Bluetooth on your device. Disconnect from other devices. Try restarting both speaker and device.
No sound.	Volume too low; incorrect input mode; device not playing audio.	Increase speaker and device volume. Press 'M' to select correct input mode. Ensure audio is playing on your connected device.
TWS pairing fails.	Speakers already connected to other devices; too far apart.	Ensure both speakers are disconnected from other devices. Place speakers within 10 meters of each other. Repeat TWS pairing steps.
Poor sound quality.	Low battery; interference; source audio quality.	Charge the speaker. Move speaker closer to the connected device. Try different audio sources or EQ modes.

SPECIFICATIONS

Detailed technical specifications for the BOGASING M6 Bluetooth Speaker.

- **Model:** M6
- **Brand:** BOGASING
- **Output Power:** 30W
- **Bluetooth Version:** 5.3
- **Waterproof Rating:** IPX6
- **Audio Modes:** Vocal, Bass, 3D Stereo
- **Connectivity:** Bluetooth, TF Card, AUX-IN
- **Battery:** 1 Lithium Ion battery (included)
- **Product Dimensions:** 7.5 x 16 x 7 cm
- **Weight:** 760 g
- **Signal-to-Noise Ratio:** 75 dB
- **Compatible Devices:** TV, Tablet, Smartphone, Laptop

WARRANTY

The BOGASING M6 Bluetooth Speaker comes with a limited warranty. Please refer to the warranty card included in your package or contact BOGASING customer support for specific terms and conditions.

SUPPORT

For further assistance, technical support, or warranty claims, please contact BOGASING customer service through the contact information provided on the product packaging or the official BOGASING website. Please have your model number (M6) and purchase details ready when contacting support.

