

[Manuals.plus](#) /

> [Acoyer](#) /

> Acoyer Roku TV Remote and Remote Cover Instruction Manual

Acoyer Roku TV Remote and Remote Cover

Acoyer Roku TV Remote and Remote Cover Instruction Manual

Model: Roku TV Remote & Remote Cover

1. INTRODUCTION AND OVERVIEW

Thank you for choosing the Acoyer Roku TV Remote and Remote Cover set. This product provides reliable replacement remote controls for your compatible Roku TV, along with durable silicone protective covers. The covers are designed to enhance visibility, provide protection against drops, and prevent loss, ensuring a more convenient and worry-free viewing experience.



Image: The Acoyer Roku TV Remote and Remote Cover set, featuring two black remote controls and two brightly colored silicone protective covers (green and blue).

2. PACKAGE CONTENTS

Your Acoyer Roku TV Remote and Remote Cover package includes the following items:

- 2 x Acoyer Roku TV Remote Controls
- 2 x Acoyer Remote Control Sleeves (Green and Blue)

3. COMPATIBILITY

The Acoyer Remote Control is designed for broad compatibility with Roku Series TVs. Please review the compatibility information below:

3.1 Compatible Devices

This remote control is compatible with the following Roku TV brands and models:

- Roku TV
- Hisense Roku TV
- Onn Roku TV
- Sharp Roku TV
- Element Roku TV
- Westinghouse Roku TV
- Philips Roku TV

- Insignia Roku TV
- JVC Roku TV
- RCA Roku TV
- Hitachi Roku TV
- Sanyo Roku TVs

3.2 Non-Applicable Devices

The Acoyer Remote is **NOT** compatible with the following Roku devices:

- Roku Stick
- Roku Streaming Stick
- Roku Box 1/2/3/4 (HD/LT/XS/XD)
- Roku Ultra
- Roku Express
- Roku Premiere
- Roku Player



Image: Visual guide illustrating the types of Roku remotes that are compatible (standard TV remotes) and incompatible (remotes with headphone jacks or for streaming sticks/boxes).

4. SETUP

The Acoyer Roku TV Remote is designed for easy setup. No complex programming or settings are required for most compatible Roku TVs.

4.1 Initial Setup (Pairing)

1. **Insert Batteries:** Open the battery compartment on the back of the remote. Insert two AAA batteries (not included), ensuring correct polarity (+/-).
2. **Automatic Pairing:** For most compatible Roku TVs, the remote should automatically pair with your TV once batteries are inserted and the TV is on.
3. **Manual Pairing (If Needed):** If the remote does not respond, ensure your Roku TV is powered on. Press and hold the pairing button located inside the battery compartment (or on the back of some Roku TVs) for 5 seconds. A pairing message should appear on your TV screen. Follow any on-screen prompts.
4. **Test Functionality:** Once paired, test all buttons to ensure full functionality.

5. OPERATING INSTRUCTIONS

The Acoyer Roku TV Remote provides intuitive control over your Roku TV. The included remote covers offer additional features for convenience and protection.

5.1 Remote Control Functions

The remote features standard Roku TV controls, including:

- **Power Button:** Turns the TV on or off.
- **Directional Pad (D-Pad) with OK Button:** Navigates menus and selects options.
- **Back Button:** Returns to the previous screen.
- **Home Button:** Returns to the Roku Home screen.
- **Volume Up/Down:** Adjusts TV volume.
- **Mute Button:** Mutes or unmutes TV audio.
- **Instant Replay:** Jumps back a few seconds in video playback.
- **Rewind/Fast Forward/Play/Pause:** Controls media playback.
- **Direct Access Buttons:** Dedicated buttons for popular streaming services like Netflix, Hulu, YouTube, and Disney+ for quick access.

5.2 Remote Control Cover Features

The silicone remote covers are designed with several user-friendly features:

- **Enhanced Visibility:** The bright green and blue colors make your remote easier to spot, reducing the chance of it getting lost between cushions or in dark rooms.
- **Glow-in-the-Dark Functionality:** The green and blue covers glow in the dark after being exposed to light. For optimal glow, place the cover under strong light for a period.
- **Full Protection:** The durable silicone material provides protection against drops, impacts, and daily wear and tear.
- **Precise Cutouts:** Customized openings ensure all buttons and functions, including infrared signals, are fully accessible and usable without obstruction.
- **Anti-Slip Design:** The textured surface of the cover provides a better grip, preventing accidental slips.
- **Lanyard Included:** Each cover features a lanyard for added security, allowing you to attach it to a

convenient location or wear it around your wrist to prevent loss.

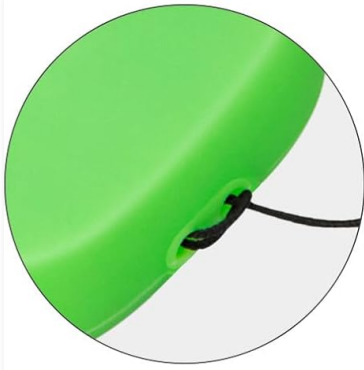 


Image: The green remote cover absorbing light, demonstrating the glow-in-the-dark feature.


Glow in the dark




Image: Both the green and blue remote covers glowing in a dark environment, making them easy to locate.



 Lanyard included

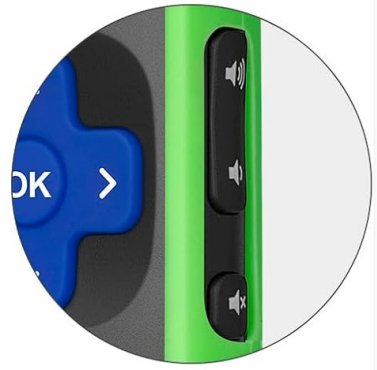

Volume button

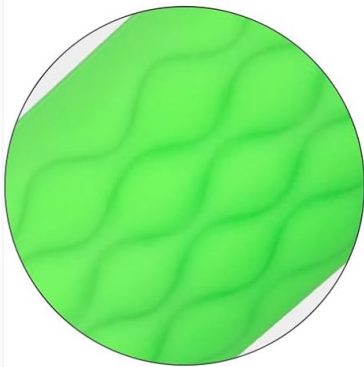 

Anti-slip design



Signal Window

Image: Detailed view of the remote cover's design, showcasing the lanyard, precise cutouts for buttons, anti-slip texture, and signal window.

Powerful protection



Image: Illustration of the remote cover's protective capabilities, showing a remote on a cracked surface with an arrow indicating impact absorption.

6. MAINTENANCE

Proper care and maintenance will extend the life of your Acoyer Roku TV Remote and its protective cover.

- **Cleaning the Remote:** Use a soft, dry cloth to wipe down the remote control. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Cleaning the Cover:** The silicone cover can be removed and washed with mild soap and water. Ensure it is completely dry before placing the remote back inside.
- **Battery Replacement:** Replace batteries when the remote's performance degrades. Always use new, high-quality AAA batteries and dispose of old batteries responsibly.
- **Storage:** Store the remote in a cool, dry place away from direct sunlight and extreme temperatures.

7. TROUBLESHOOTING

If you encounter issues with your Acoyer Roku TV Remote, try the following troubleshooting steps:

Problem	Solution
---------	----------

Problem	Solution
Remote is not responding.	<ul style="list-style-type: none"> ◦ Check if the batteries are inserted correctly and are not depleted. Replace with fresh AAA batteries if necessary. ◦ Ensure there are no obstructions between the remote and the TV's infrared receiver. ◦ Attempt to re-pair the remote with your Roku TV (refer to Section 4.1).
Glow-in-the-dark feature is weak or not working.	<ul style="list-style-type: none"> ◦ The covers need to absorb light to glow. Expose them to bright light (natural or artificial) for at least 15-30 minutes. ◦ The intensity and duration of the glow depend on the amount and type of light absorbed.
Buttons feel stiff or unresponsive with the cover on.	<ul style="list-style-type: none"> ◦ Ensure the remote is properly seated within the silicone cover and that the cutouts align perfectly with the buttons. ◦ Remove the cover and test the remote directly to determine if the issue is with the remote or the cover alignment.

8. SPECIFICATIONS

Feature	Detail
Brand	Acoyer
Model	Roku TV Remote (Replacement)
Controller Type	Button Control
Special Feature	Ergonomic design for comfortable grip
Remote Cover Material	Silicone
Remote Cover Colors	Black, Green, Blue (covers)
Compatible Devices	Roku Series TVs (TCL, Hisense, Onn, Sharp, Element, Westinghouse, Philips, Insignia, JVC, RCA, Hitachi, Sanyo)

9. WARRANTY AND SUPPORT

Acoyer is committed to providing high-quality products and excellent customer service.

9.1 Return and Refund Service

Acoyer Products come with an unlimited return and refund service for 60 days from the date of purchase.

9.2 Customer Support

If you have any questions, concerns, or require assistance regarding your order or product, please do not hesitate to reach out to Acoyer customer support. You can typically find contact information on the product packaging or through the retailer's website where you made your purchase.
