

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

- › [MASS APPEAL RECORDS](#) /
- › Magic 2 Explicit Lyrics

## MASS APPEAL RECORDS B0CDCJXFQK

# Instruction Manual: Magic 2 Explicit Lyrics Audio CD

Model: B0CDCJXFQK | Brand: MASS APPEAL RECORDS

## INTRODUCTION

This manual provides comprehensive instructions for the proper use, care, and maintenance of your **Magic 2 Explicit Lyrics Audio CD**. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. This Audio CD features the sixteenth studio album by rapper Nas, serving as a sequel to his 2021 album Magic.

## PRODUCT OVERVIEW



Figure 1: Magic 2 Audio CD and Album Art

This image displays the 'Magic 2' Audio CD. The album cover features a dark background with a blurred, distorted image of a person's face, suggesting movement or a dreamlike state. The title 'Magic 2' is subtly visible at the bottom. To the right, the physical Audio CD is shown, reflecting light and displaying the artist's name 'Nas' and 'Magic 2' on its surface.

The Magic 2 Audio CD is a standard compact disc designed for playback on compatible CD players. It contains audio

tracks of the album "Magic 2" by Nas.

## SETUP

---

To set up your Magic 2 Audio CD for playback, follow these steps:

1. **Unpack the CD:** Carefully remove the Audio CD from its packaging. Avoid touching the reflective surface of the disc.
2. **Prepare your CD Player:** Ensure your CD player is connected to a power source and audio output (e.g., speakers, headphones, amplifier).
3. **Open the CD Tray/Slot:** Depending on your player, either press the eject button to open the disc tray or locate the disc slot.
4. **Insert the CD:** Hold the CD by its edges and gently place it into the disc tray with the label side facing up. If it's a slot-loading player, carefully slide the disc in until the player pulls it in automatically.
5. **Close the CD Tray/Slot:** Press the eject button again to close the tray, or allow the slot-loading player to fully retract the disc.

## OPERATING

---

Once the CD is inserted, you can begin playback:

- **Power On:** Turn on your CD player and any connected audio equipment.
- **Select Play:** Press the **PLAY** button on your CD player or remote control. The first track of the album should begin playing.
- **Track Navigation:**
  - Press **NEXT** or **SKIP FORWARD** to advance to the next track.
  - Press **PREVIOUS** or **SKIP BACKWARD** to go to the beginning of the current track or the previous track.
- **Pause/Stop:** Press **PAUSE** to temporarily stop playback, and **STOP** to end playback.
- **Volume Control:** Adjust the volume using the controls on your CD player, amplifier, or speakers.
- **Ejecting the CD:** When finished, press the **EJECT** button to remove the CD. Handle the disc by its edges.

## MAINTENANCE

---

Proper maintenance ensures the longevity and optimal performance of your Audio CD:

- **Handling:** Always hold the CD by its outer edges or the center hole. Avoid touching the reflective playback surface.
- **Cleaning:** If the CD becomes dirty or smudged, gently wipe it with a soft, lint-free cloth (e.g., microfiber) from the center outwards in a straight line. Do not wipe in circular motions. Use a specialized CD cleaning solution if necessary, applied to the cloth, not directly to the disc.
- **Storage:** Store the CD in its original jewel case or a protective sleeve when not in use. Keep it away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Scratches:** Do not place the CD on rough surfaces or allow it to come into contact with sharp objects. Scratches can impair playback quality.

## TROUBLESHOOTING

---

If you encounter issues with your Audio CD, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
CD skips or stutters during playback.	Dust, fingerprints, or scratches on the disc surface.	Clean the disc using a soft, lint-free cloth. Inspect for deep scratches. If heavily scratched, the disc may be permanently damaged.
CD does not play or is not recognized.	Disc inserted incorrectly; CD player malfunction; disc is severely damaged.	Ensure the disc is inserted label-side up. Try the CD in another player to rule out player issues. Check for visible damage.
No sound from CD.	Volume too low; audio cables disconnected; incorrect input selected on amplifier/receiver.	Increase volume. Check all audio cable connections. Ensure the correct input source is selected on your audio system.

If problems persist after attempting these solutions, consult your CD player's manual or contact the manufacturer of your audio equipment.

## SPECIFICATIONS

---

- **Product Type:** Audio CD
- **Album Title:** Magic 2 Explicit Lyrics
- **Artist:** Nas
- **Model Number:** B0CDCJXFQK
- **Manufacturer/Label:** MASS APPEAL RECORDS
- **Original Release Date:** 2023
- **Number of Discs:** 1
- **Product Dimensions:** 5.1 x 5 x 0.2 inches
- **Weight:** 0.8 ounces
- **Language:** English

## WARRANTY AND SUPPORT

---

As an Audio CD, this product typically does not come with a direct manufacturer's warranty beyond its initial functional state. If the disc is found to be defective upon purchase (e.g., physically damaged, unplayable), please contact your retailer for a replacement within their return policy period.

For issues related to your CD player or audio equipment, please refer to the respective manufacturer's warranty and support information.

