

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Westinghouse](#) /
- › [Westinghouse 43 inch Full HD Smart Roku TV User Manual](#)

## Westinghouse WR43FX2212

# Westinghouse 43 inch Full HD Smart Roku TV User Manual

Model: WR43FX2212

## INTRODUCTION

This manual provides essential information for setting up, operating, maintaining, and troubleshooting your Westinghouse 43 inch Full HD Smart Roku TV (Model WR43FX2212). Please read this manual thoroughly before using your television to ensure proper and safe operation.

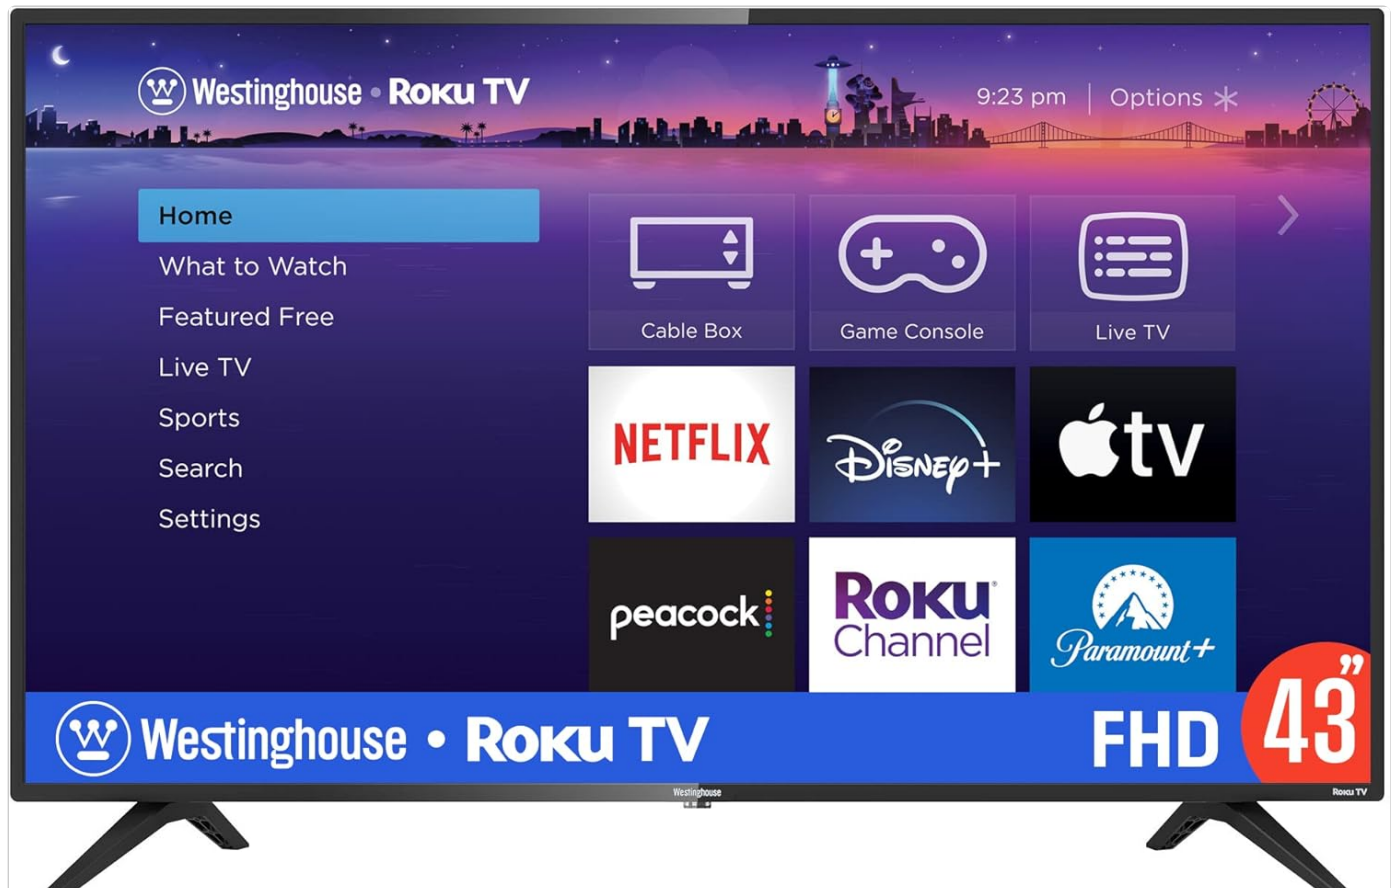


Image: Front view of the Westinghouse 43 inch Full HD Smart Roku TV, showcasing its user interface with various streaming application icons.

## SETUP

### 1. Unpacking and Inspection

Carefully remove the TV from its packaging. Inspect the TV and all included components for any signs of damage. If any damage is found, do not proceed with setup and contact customer support.

#### Included Components:

- Westinghouse Roku TV
- TV Stands (2)
- Power Cable
- Roku Remote with Batteries
- Quick Start Guide (this manual serves as a detailed guide)



Image: A diagram illustrating the dimensions of the 43-inch TV with and without its stand, and a list of items included in the box, such as the TV, stand, power cable, remote, and quick start guide.

## 2. Attaching the Stand

1. Place the TV face down on a soft, clean surface to prevent scratches.
2. Align each stand with the corresponding screw holes on the bottom of the TV.
3. Secure the stands using the provided screws. Ensure they are firmly attached.

Alternatively, you can mount the TV to a wall using a VESA-compatible wall mount (sold separately). Refer to your wall mount's instructions for installation.

## 3. Connecting Power

Plug the power cable into the TV's power input, then plug the other end into a standard electrical outlet. The TV will enter standby mode.

## 4. Initial Setup (Roku Activation)

1. Press the power button on the remote control to turn on the TV.
2. Follow the on-screen instructions to select your language, connect to your Wi-Fi network, and activate your Roku account. An internet connection and a Roku account are required for full functionality.
3. During activation, you will be prompted to link your TV to a Roku account. If you don't have one, you can create one during this process.

## 5. Connecting External Devices


Your Westinghouse Roku TV offers various input ports for connecting external devices such as cable boxes, game consoles, Blu-ray players, and soundbars.



# Westinghouse

# Roku TV

# 43"

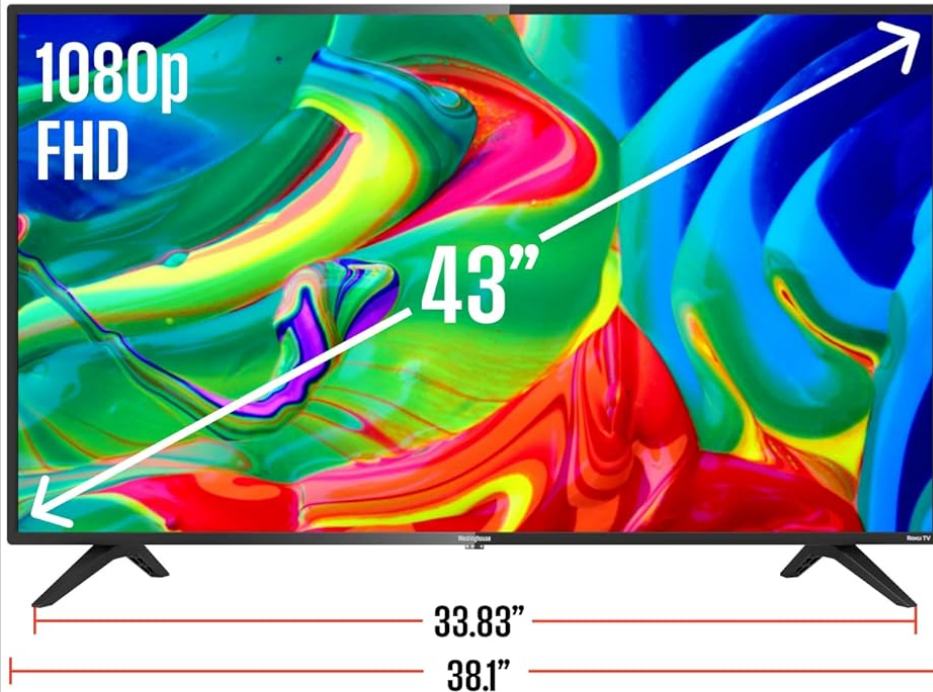

## Dimensions:

With Stand: 38.1" x 24" x 8.2"

Without Stand: 38.1" x 22.3" x 3.3"

## What's in the box:

- Westinghouse Roku TV
- TV Stands
- Power Cable
- Roku Remote with Batteries
- Quick Start Guide



Image: A detailed view of the TV's side and rear input/output ports, including three HDMI ports, one USB 5V port, optical audio out, composite video and audio, antenna/cable input, and a headphone output.

- **HDMI (x3):** For high-definition devices like Blu-ray players, game consoles, and cable/satellite boxes.
- **USB 5V:** For connecting USB storage devices to play media.
- **Composite Video (RCA):** For older devices using red, white, and yellow cables.
- **Optical Digital Audio:** For connecting to soundbars or home theater systems for digital audio output.
- **Antenna/Cable:** For connecting an HDTV antenna or cable TV feed for local channels.
- **Headphone Output:** For connecting headphones for private listening.

To switch between inputs, press the **HOME** button on your Roku remote and select the desired input tile from the home screen.

## OPERATING YOUR ROKU TV

### 1. Roku TV Interface

The Roku TV home screen provides easy access to all your entertainment. It features a customizable grid of streaming channels (apps), input tiles for connected devices, and options for Live TV.



**ROKU**

# America's #1 TV streaming platform.

Shadow and Bone on Netflix

The Mandalorian on Disney+

Ted Lasso on Apple TV+

Magnolia Table with Joanna Gaines on discovery+

Pinkfong on HappyKids

**500,000+ movies and TV episodes**

NETFLIX   DISNEY+   Apple TV   Roku Channel   discovery+   ESPN   HBO MAX   prime video

Based on hours streamed - April 2021 (Hypothesis Group)

Image: The Roku TV home screen, showing a menu on the left (Home, What to Watch, Live TV, etc.) and a grid of streaming service icons on the right, including Netflix, Disney+, and Apple TV+.

You can add or remove channels, rearrange them, and access the Roku Channel Store to discover new content. The Roku platform offers access to thousands of free and paid streaming channels, including popular services like Netflix, Prime Video, Disney+, and more.

# Make moments bigger

## Easily cast to TV

Share photos, videos, and music from your mobile device to the TV

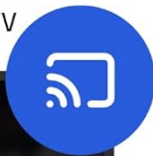


Image: A graphic promoting Roku as America's #1 TV streaming platform, displaying logos of numerous streaming services available on the platform, such as Netflix, Disney+, and HBO Max.

## 2. Remote Control

The included Roku remote is designed for simplicity. Key functions include:

- **HOME:** Returns to the Roku TV home screen.
- **Directional Pad (D-Pad):** Navigates menus and selects items.
- **OK:** Confirms selections.
- **BACK:** Returns to the previous screen.
- **STAR (\*):** Accesses options menu for selected content or channel.
- **Volume Up/Down:** Adjusts TV volume.
- **Mute:** Mutes TV audio.
- **Instant Replay:** Jumps back a few seconds in video playback.
- **Play/Pause, Fast Forward, Rewind:** Media playback controls.
- **Channel Shortcut Buttons:** Direct access to popular streaming services.

### 3. Casting Content

You can easily share photos, videos, and music from your mobile device to your TV using the free Roku Mobile App or Apple AirPlay2.

# Catch every game, every time



Roku's got all the top sports apps.

Image: A group of friends enjoying content on the TV, with an overlay demonstrating how to cast content from a mobile device to the TV screen.

- **Roku Mobile App:** Download the Roku Mobile App from your device's app store. Connect your phone to the same Wi-Fi network as your TV. Use the "Cast" feature within the app to send content.
- **Apple AirPlay2:** For Apple devices, ensure your device and TV are on the same Wi-Fi network. Select the AirPlay icon from a compatible app (e.g., Photos, Music, Safari) and choose your Roku TV.

### 4. Voice Control and Smart Home Integration

Your Roku TV is compatible with popular smart home assistants, allowing you to control your TV using voice commands.



Image: A graphic showing the Roku mobile app's remote interface, highlighting features like voice control, private listening via headphones, and keyboard search. It also indicates compatibility with Google Assistant, Amazon Alexa, and Apple HomeKit.

- **Compatible Assistants:** Amazon Alexa, Google Assistant, Apple HomeKit (via Siri).
- **Functions:** Find and play entertainment, control streaming, turn the TV on/off, change channels, and more.
- **Setup:** Link your Roku account to your smart home assistant app (e.g., Amazon Alexa app, Google Home app).

## 5. Live TV (Antenna/Cable)

If you have connected an HDTV antenna or cable TV feed to the "Antenna/Cable" input, you can access local broadcast channels.

- From the Roku TV home screen, select the "Live TV" input tile.
- The first time you select Live TV, the TV will guide you through a channel scan to find available channels.
- You can also access the Live TV Channel Guide for program listings.

## MAINTENANCE

## 1. Cleaning Your TV

- Always unplug the TV before cleaning.
- Use a soft, lint-free cloth to gently wipe the screen and cabinet.
- For stubborn marks, dampen the cloth with a small amount of water or a mild, non-abrasive screen cleaner. Do not spray cleaner directly onto the screen.
- Avoid using harsh chemicals, abrasive pads, or solvents as they can damage the TV's finish.

## 2. Software Updates

Your Roku TV automatically receives software updates when connected to the internet. These updates provide new features, performance improvements, and bug fixes. Ensure your TV remains connected to the internet for optimal performance.

- To manually check for updates: Go to **Settings > System > Software update**.

## TROUBLESHOOTING

If you encounter issues with your TV, refer to the following common troubleshooting steps:

Problem	Possible Solution
No Power	Ensure the power cable is securely plugged into the TV and the electrical outlet. Try a different electrical outlet. Check if the power indicator light on the TV is on.
No Picture, But Sound is Present	Check the input source. Ensure the correct HDMI/Composite input is selected. Try a different HDMI cable or port. Restart the connected device.
No Sound, But Picture is Present	Check the TV's volume level and ensure it is not muted. If using external audio devices (soundbar, receiver), ensure they are powered on and correctly connected. Check audio settings on the TV and connected device.
Cannot Connect to Wi-Fi	Ensure your Wi-Fi router is on and functioning correctly. Re-enter your Wi-Fi password carefully (passwords are case-sensitive). Move the TV closer to the router or reduce interference from other devices. Restart your router and modem.
Streaming Apps Not Working	Check your internet connection. Restart the app (highlight the app on the home screen, press <b>STAR (*)</b> , then select "Remove channel", then re-add it from the Channel Store). Restart the TV (Go to <b>Settings &gt; System &gt; Power &gt; System restart</b> ).
Remote Control Not Responding	Replace the batteries in the remote control. Ensure there are no obstructions between the remote and the TV's IR sensor.

If the issue persists after trying these steps, please refer to the Warranty and Support section for further assistance.

## SPECIFICATIONS

Feature	Detail
Model Number	WR43FX2212
Screen Size	42.5 inches (diagonal) / 43 inches (visible screen diagonal)
Resolution	Full HD 1080p (1920 x 1080)
Aspect Ratio	16:9
Display Technology	LED
Refresh Rate	60Hz
Audio Features	Dolby Audio, Built-In Speakers
Connectivity	3 x HDMI, 1 x USB 5V, 1 x Composite Video, 1 x Optical Digital Audio, 1 x Antenna/Cable, Wi-Fi
Smart Features	Roku TV Platform, Voice Command (via compatible assistants), Apple AirPlay2, Roku Mobile App
Power Consumption (On-mode)	74 watts
Voltage	240 Volts
Product Dimensions (with stand)	38.01 x 8.2 x 24 inches (W x D x H)
Product Dimensions (without stand)	38.1 x 3.3 x 22.3 inches (W x D x H)
Item Weight	20.2 pounds

## WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation included with your purchase or visit the official Westinghouse customer support website. Keep your proof of purchase for warranty claims.

**Legal Disclaimer:** All product names, logos, and brands mentioned are property of their respective owners.

