

B0CDCP6HN3

Replacement Remote Control User Manual

FOR SKYWORTH 4K UHD HDTV ANDROID TV MODELS

Introduction

This manual provides instructions for the replacement remote control compatible with various Skyworth 4K UHD HDTV Android TV models. This remote is designed to offer essential functionality for your television, serving as a direct replacement for your original remote.

Product Overview

This replacement remote control is designed to operate specific Skyworth television models. It features standard navigation, volume, channel, and dedicated app buttons.



This image displays the front of the replacement remote control, showing its buttons including number pad, navigation, volume, channel, and dedicated buttons for streaming services like Netflix and Prime Video.

With
Vioce



This image shows both the front and back of the replacement remote control, highlighting its ergonomic design and the smooth rear casing.

Setup and Initial Use

Installing Batteries

The remote control requires two AAA batteries (not included).

1. Open the battery compartment cover on the back of the remote control.
2. Insert two AAA batteries, ensuring correct polarity (+ and -).
3. Close the battery compartment cover securely.

Pairing (Bluetooth Models)

If your original remote was a Bluetooth voice remote, this replacement may require pairing with your TV. Refer to your TV's user manual for specific Bluetooth pairing instructions. Generally, this involves:

1. Ensure your TV is powered on.
2. Navigate to the TV's settings menu (usually "Remotes & Accessories" or "Bluetooth Settings").
3. Select "Add device" or "Pair new remote".
4. Follow the on-screen prompts to put the remote into pairing mode (often by holding specific buttons like "OK" and "Home" simultaneously for a few seconds).

5. Once paired, the TV will confirm the connection.

Note: This is a replacement remote. Some advanced functions, especially voice control or specific smart TV features, may not be fully supported or may require specific TV settings.

Operating the Remote Control

The remote control provides standard functions for navigating your Skyworth TV.

Basic Functions

- **Power Button:** Turns the TV on or off.
- **Number Buttons (0-9):** Directly select channels.
- **Volume Up/Down (+/-):** Adjusts the audio volume.
- **Channel Up/Down (P+/-):** Changes the TV channel.
- **Navigation Pad (Up, Down, Left, Right, OK):** Navigates through menus and confirms selections.
- **Back Button:** Returns to the previous screen or menu.
- **Home Button:** Accesses the TV's main home screen.
- **Menu Button:** Opens the TV's main menu.
- **Source Button:** Changes the input source (HDMI, AV, etc.).

Dedicated App Buttons

The remote includes dedicated buttons for popular streaming services:

- **Netflix:** Launches the Netflix application.
- **Prime Video:** Launches the Amazon Prime Video application.
- **YouTube:** Launches the YouTube application.
- **Google Play:** Launches the Google Play Store or Google Play Movies & TV.

Functionality of these buttons may depend on your TV's software version and internet connectivity.

Maintenance

Cleaning

To clean the remote control, gently wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops functioning. Always replace both batteries at the same time with new ones of the same type. Dispose of used batteries responsibly according to local regulations.

Storage

Store the remote control in a dry place, away from direct sunlight and extreme temperatures.

Troubleshooting

Remote Not Responding

- **Check Batteries:** Ensure batteries are inserted correctly and are not depleted. Replace if necessary.
- **Line of Sight:** For IR functionality, ensure there is a clear line of sight between the remote and the

TV's IR receiver.

- **Re-pair Remote:** If it's a Bluetooth remote, try re-pairing it with your TV (refer to the "Setup" section).
- **TV Power Cycle:** Turn off your TV, unplug it from the power outlet for a few minutes, then plug it back in and turn it on.

Specific Buttons Not Working

- **Compatibility:** As a replacement remote, some specific or advanced functions (e.g., certain voice commands, very specific smart TV features) may not be fully compatible with all TV models.
- **App Availability:** Ensure the corresponding app is installed and updated on your TV for dedicated app buttons to function correctly.

Specifications

Feature	Detail
Brand	Generic
Model Compatibility	Skyworth 49U5A, 43U5A, 32TB2100, 42TB2100, 32TB2050, 40TB2050, 32TB2000 (and other compatible 4K UHD HDTV Android TV models)
Power Source	2 x AAA Batteries (not included)
Color	Black/White (color may vary)
Material	ABS plastic
Special Feature	Ergonomic design

Warranty and Support

This product is a replacement remote control. For any issues or support inquiries, please contact the seller directly through your purchase platform. Please note that specific warranty terms may vary and are typically provided by the seller.

It's recommended to retain your purchase receipt for any support claims.