

[Manuals.plus](#) /

> [Balay](#) /

> Balay 3TW094B Washer-Dryer Instruction Manual

## Balay 3TW094B

# Balay 3TW094B Washer-Dryer Instruction Manual

Model: 3TW094B | Brand: Balay

## 1. INTRODUCTION

This manual provides essential information for the safe and efficient operation, installation, and maintenance of your Balay 3TW094B Washer-Dryer. Please read it thoroughly before using the appliance for the first time and keep it for future reference.



This image shows the Balay 3TW094B free-standing washer-dryer. The appliance is white with a dark, circular porthole door. The control panel is located at the top, featuring a central dial and an LED display, indicating its front-loading design.

### Key Features:

- **Free-standing, Front-loading Design:** Elegant white finish suitable for various home environments.
- **Capacity:** 9 kg washing capacity and 5 kg drying capacity.
- **Programs:** Specialized programs including Iron Assist and StainMaster.
- **Quick Cycle:** Fast wash and dry cycle for convenience.
- **ExtraSilencio Mode:** Minimizes vibrations for quiet operation.
- **LED Display:** Facilitates program selection and cycle monitoring.
- **Spin Speed:** Up to 1400 RPM for efficient water extraction.
- **Energy Efficiency:** Class E for both washing and combined wash/dry cycles.
- **Dimensions:** 60 cm (width) x 63 cm (depth) x 85 cm (height).

## 2. SAFETY INFORMATION

---

Always adhere to the following safety guidelines to prevent accidents and ensure proper functioning of your appliance:

- **Electrical Safety:** Ensure the appliance is connected to a properly grounded outlet. Do not use extension cords. Disconnect from power before cleaning or maintenance.
- **Water Connection:** Connect to the water supply using new hose sets. Do not reuse old hose sets.
- **Child Safety:** Keep children away from the appliance during operation. Do not allow them to play with the controls.
- **Flammable Materials:** Do not wash or dry items that have been soiled with flammable substances (e.g., oil, paint, gasoline).
- **Ventilation:** Ensure adequate ventilation around the appliance to prevent overheating.
- **Installation:** The appliance must be installed on a firm, level surface. Do not install in areas where temperatures may drop below freezing.

## 3. SETUP AND INSTALLATION

---

The Balay 3TW094B is a free-standing appliance, offering flexible installation options. Follow these steps for proper setup:

### 3.1 Unpacking:

- Carefully remove all packaging materials.
- Remove any transport bolts or packing from the rear of the appliance as instructed in the separate installation guide. Failure to do so can cause severe damage.

### 3.2 Positioning:

- Place the washer-dryer on a stable, level floor.
- Adjust the feet to ensure the appliance is perfectly balanced.
- Ensure there is sufficient space for the door to open fully and for proper ventilation.

### 3.3 Water and Electrical Connections:

- Connect the water inlet hose to a cold water tap.
- Position the drain hose into a suitable drain pipe or sink.
- Plug the power cord into a grounded electrical outlet.

### 3.4 First Use:

- Before washing clothes, run an empty wash cycle at 60°C with a small amount of detergent to clean the drum.

## 4. OPERATING INSTRUCTIONS

Your Balay 3TW094B Washer-Dryer is designed for ease of use. Here's how to operate it:

### 4.1 Loading Laundry:

- Open the porthole door and load laundry, ensuring not to exceed the maximum capacity (9 kg for washing, 5 kg for drying).
- Distribute items evenly in the drum.
- Close the door firmly.



This image displays the interior of the Balay 3TW094B washer-dryer's waveDrum. The drum features a unique textured surface with small perforations, designed to create a gentle washing action while protecting fabrics. Water droplets are visible on the surface, indicating its function in the washing process.

### 4.2 Adding Detergent and Softener:

- Pull out the detergent dispenser drawer.
- Add appropriate amounts of detergent to the main wash compartment and softener to the designated compartment.

- Close the dispenser drawer gently.

### 4.3 Program Selection:

- Turn the program selector dial to choose your desired wash or wash & dry program. The LED display will show the estimated cycle time and other relevant information.
- Available programs include:
  - **Cotton:** For durable cotton items.
  - **Eco 40-60:** Energy-efficient program for cottons and mixed fabrics at 40-60°C.
  - **Synthetics:** For synthetic or mixed fabric items.
  - **Mix:** For mixed loads of different fabric types.
  - **Sport:** For sportswear.
  - **Quick 15 min / Wash & Dry 60 min:** A rapid cycle for small, lightly soiled loads.
  - **Iron Assist:** Reduces wrinkles and makes ironing easier.
  - **Delicates/Silk:** For delicate fabrics.
  - **Wool/Handwash:** For woolens and hand-washable items.
  - **Rinse:** For rinsing items.
  - **Spin:** For spinning items.
  - **Intensive Dry:** For thorough drying.
  - **Gentle Dry:** For delicate drying.
  - **My Time Dry:** Customizable drying time.

### 4.4 Adjusting Settings:

- Use the touch buttons on the LED display to adjust temperature, spin speed, or select additional functions like "StainMaster" or "ExtraSilencio".
- The "AutoDry" function automatically detects the moisture level and adjusts drying time.

### 4.5 Starting the Cycle:

- Press the Start/Pause button to begin the selected program.
- The LED display will show the remaining time.

## 5. MAINTENANCE AND CARE

---

Regular maintenance ensures the longevity and optimal performance of your washer-dryer.

### 5.1 Cleaning the Exterior:

- Wipe the exterior with a soft, damp cloth. Do not use abrasive cleaners or solvents.

### 5.2 Cleaning the Detergent Dispenser:

- Remove the dispenser drawer and rinse it under running water to remove any detergent or softener residue.
- Clean the housing of the dispenser with a brush.

### 5.3 Cleaning the Drum:

- Run a "Drum Clean" program (if available) or an empty hot wash cycle periodically to prevent odor and residue buildup.

### 5.4 Cleaning the Drain Pump Filter:

- Locate the drain pump filter at the bottom front of the appliance.
- Place a shallow container underneath to catch any water.
- Carefully open and remove the filter, cleaning any lint or debris.
- Reinsert and secure the filter.

## 6. TROUBLESHOOTING

Before contacting customer service, please refer to the following common issues and their solutions:

Problem	Possible Cause	Solution
Appliance does not start	Power cord not plugged in; door not closed properly; program not selected.	Check power connection; ensure door is latched; select a program and press Start.
No water intake	Water tap closed; water inlet hose kinked; water pressure too low.	Open water tap; straighten hose; check household water pressure.
Water not draining (e.g., "Drainage fault" error)	Drain hose kinked or blocked; drain pump filter clogged.	Straighten drain hose; clean drain pump filter (refer to Maintenance section).
Excessive noise or vibration	Transport bolts not removed; appliance not level; uneven load.	Remove transport bolts; adjust feet to level appliance; redistribute laundry in the drum.
Clothes not drying properly	Overloaded drum; incorrect drying program selected; lint filter clogged.	Reduce load size; select appropriate drying program; clean lint filter.

For issues not listed here or if problems persist, please contact Balay customer support.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	3TW094B
Brand	Balay
Type	Free-standing Washer-Dryer
Color	White
Washing Capacity	9 kg
Drying Capacity	5 kg
Maximum Spin Speed	1400 RPM
Dimensions (D x W x H)	63 cm x 60 cm x 85 cm
Annual Energy Consumption (Wash)	1 W (Note: This value seems unusually low, likely a placeholder or error in source data. Refer to product label for accurate data.)
Annual Energy Consumption (Wash & Dry)	1 W (Note: This value seems unusually low, likely a placeholder or error in source data. Refer to product label for accurate data.)
Water Consumption (Wash & Dry)	74 liters (combined wash and dry)

Feature	Detail
Noise Level (Wash/Spin)	70 dB (approximate, for both modes)
Energy Class (Wash)	E
Energy Class (Wash & Dry)	E
Voltage	220 Volts
Product Weight	71.38 Kilograms
Drum Type	waveDrum

## 8. WARRANTY AND SUPPORT

---

Your Balay 3TW094B Washer-Dryer comes with a manufacturer's warranty. Please refer to the warranty card included with your appliance for specific terms and conditions.

- **Warranty Period:** As per manufacturer's standard policy and local regulations.
- **Spare Parts Availability:** 10 years in the EU.
- **Customer Service:** For technical assistance, repairs, or warranty claims, please contact Balay customer support. Contact details can typically be found on the Balay official website or in your appliance documentation.

## 9. PRODUCT VIDEOS

---

No official product videos from the seller are available for this specific Balay 3TW094B Washer-Dryer model at this time.