

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Midea](#) /

› [Midea MT100W220/W-MX 22kg Semi-Automatic Twin Tub Washing Machine User Manual](#)

Midea MT100W220/W-MX

Midea MT100W220/W-MX 22kg Semi-Automatic Twin Tub Washing Machine

User Manual

1. INTRODUCTION

Thank you for choosing the Midea MT100W220/W-MX Semi-Automatic Twin Tub Washing Machine. This manual provides essential information for the safe and efficient use, installation, operation, maintenance, and troubleshooting of your appliance. Please read it thoroughly before use and keep it for future reference.



Figure 1: Front view of the Midea MT100W220/W-MX washing machine.

2. SAFETY INSTRUCTIONS

To prevent injury to the user or other people and property damage, the following instructions must be followed. Incorrect operation due to ignoring instructions may cause harm or damage.

- Always ensure the washing machine is properly grounded.
- Do not allow children to play with or operate the appliance.
- Unplug the machine before cleaning or performing any maintenance.
- Do not wash items that are soiled with gasoline, dry-cleaning solvents, or other flammable or explosive substances.
- Ensure the power cord is not damaged and avoid placing heavy objects on it.
- Do not open the spin tub lid until the tub has completely stopped.

3. PRODUCT OVERVIEW

Components



Figure 2: Side view with control panel and tubs.

The Midea MT100W220/W-MX features two tubs: one for washing and rinsing, and another for spinning. The control panel is located on the top right side.

Key Features

- **Dual Force Pulsator:** Washes, rinses, and spins simultaneously. Provides a deeper wash with its dual-force motor.



Figure 3: Dual Force Pulsator technology.

- **Magic Pro Filter:** An effective lint trap filter, easy to remove and clean, ensuring your clothes are free of residue.

Dual Force Pulsator

Potente y eficiente, nuestra lavadora cuenta con un sistema de lavado por impulsor de doble fuerza siendo la elección perfecta para mantener tu ropa impecable.



Figure 4: Magic Pro Filter for lint collection.

- **Air Fresh Spin:** The exclusive cover design enhances spinning efficiency, allowing the cycle to complete in less than 5 minutes by circulating air.



Figure 5: Air Fresh Spin feature.

- **2 Wash Cycles:** Normal and Strong, for versatile cleaning.
- **4 Large Ergonomic Knobs:** Designed for easy and comfortable grip and control.

4. SETUP

Unpacking

Carefully remove the washing machine from its packaging. Inspect for any damage during transit. Keep packaging materials until you are satisfied with the product.

Location

Place the washing machine on a firm, level surface. Ensure there is adequate space around the machine for ventilation and operation. Avoid direct sunlight or excessively humid environments.

Water Connection

Connect the water inlet hose to a cold water tap. Ensure the connection is secure to prevent leaks. The machine has a single water inlet for both wash and rinse cycles.

Drainage

Position the drain hose to allow for proper water discharge. The hose should be placed in a sink or a floor drain, ensuring it is not kinked or blocked.



Figure 6: Rear view with water inlet and drain hose.

Power Connection

Plug the power cord into a grounded 127V AC electrical outlet. Do not use extension cords or adapters.

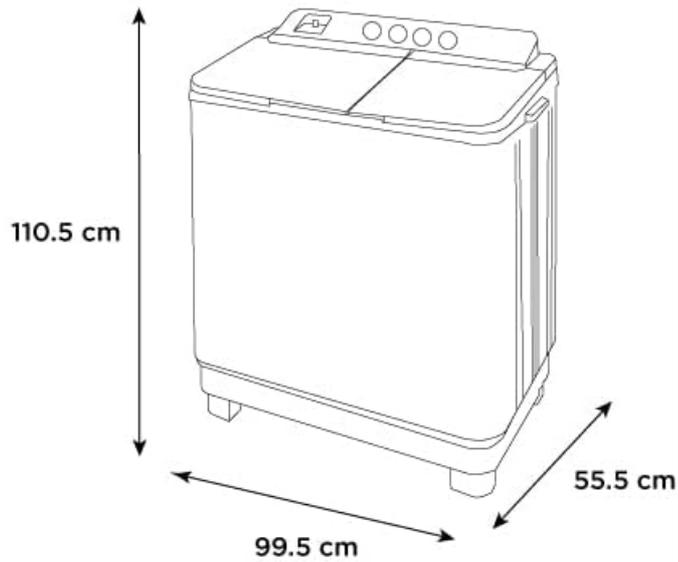


Figure 7: Product dimensions for placement reference.

5. OPERATING INSTRUCTIONS

Control Panel Overview

Medidas Sin empaque



Medidas Con empaque

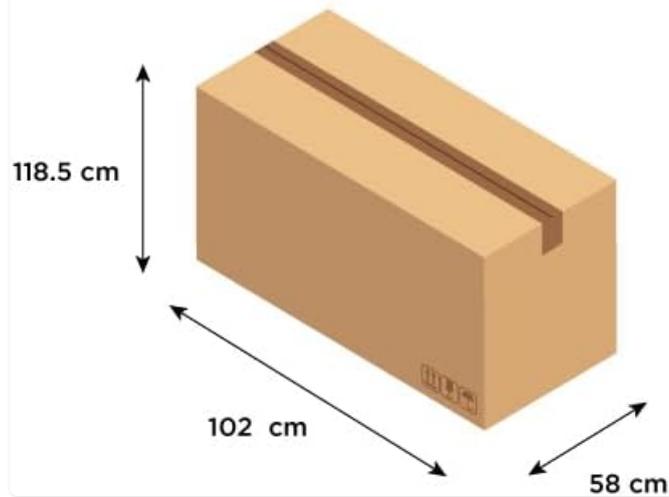


Figure 8: Control panel with wash timer, wash selector, drain selector, and spin timer.

The control panel features four large ergonomic knobs:

1. **Wash Timer:** Sets the duration of the wash cycle.
2. **Wash Selector:** Choose between 'Normal' and 'Strong' wash cycles.
3. **Drain Selector:** Controls water drainage.
4. **Spin Timer:** Sets the duration of the spin cycle.

Washing Procedure

1. **Load Laundry:** Open the wash tub lid and place clothes loosely into the tub. Do not overload. The maximum capacity is 22kg.
2. **Add Detergent:** Add the appropriate amount of detergent directly into the wash tub.
3. **Fill with Water:** Turn on the water tap to fill the wash tub to the desired level.

4. **Select Wash Cycle:** Turn the 'Wash Selector' knob to either 'Normal' or 'Strong' depending on the fabric type and soil level.
5. **Set Wash Timer:** Turn the 'Wash Timer' knob to the desired wash duration. The machine will start automatically.
6. **Drain Water:** Once the wash cycle is complete, turn the 'Drain Selector' knob to drain the water.

Rinsing Procedure

1. **Refill with Water:** After draining, refill the wash tub with clean water.
2. **Rinse:** You can either perform a short wash cycle (e.g., 2-3 minutes) or manually agitate the clothes for rinsing.
3. **Drain Water:** Drain the rinse water by turning the 'Drain Selector' knob. Repeat rinsing if necessary.

Spinning Procedure

1. **Transfer Laundry:** Carefully transfer the wet clothes from the wash tub to the spin tub. Distribute them evenly to prevent imbalance.
2. **Close Spin Lid:** Ensure the spin tub lid is securely closed.
3. **Set Spin Timer:** Turn the 'Spin Timer' knob to the desired spin duration (e.g., 1-5 minutes). The machine will start spinning.
4. **Wait for Stop:** Do not open the spin tub lid until the tub has completely stopped rotating.

6. MAINTENANCE

Cleaning the Magic Pro Filter

The Magic Pro Filter should be cleaned regularly to maintain optimal performance and prevent lint buildup on clothes.

1. **Remove Filter:** Gently pull out the Magic Pro Filter from its housing in the wash tub.
2. **Clean Lint:** Remove any accumulated lint and debris from the filter. You can rinse it under running water.
3. **Reinstall Filter:** Ensure the filter is clean and dry, then securely reinsert it into its original position.

Cleaning the Exterior

Wipe the exterior of the washing machine with a soft, damp cloth. Do not use abrasive cleaners or solvents that could damage the surface.

Winter Storage (if applicable)

If the machine is to be stored in an area where it might freeze, drain all water from the hoses and tubs to prevent damage.

7. TROUBLESHOOTING

Before contacting customer service, please refer to the following table for common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Machine does not start	Power cord unplugged; Power outage; Lid not closed properly.	Check power connection; Check household fuse/breaker; Ensure wash/spin tub lid is fully closed.
Water does not drain	Drain hose kinked or blocked; Drain selector not set to 'Drain'.	Straighten drain hose, clear blockage; Turn drain selector to 'Drain'.
Excessive vibration/noise during spin	Laundry unevenly distributed in spin tub; Machine not level.	Rearrange clothes evenly; Adjust machine's feet to level it.
Water leaks	Water inlet hose loose; Drain hose improperly positioned.	Tighten water inlet hose connections; Ensure drain hose is secure and not leaking.

8. SPECIFICATIONS

Specification	Detail
Brand	Midea
Model Number	MT100W220/W-MX
Color	White
Product Dimensions (D x W x H)	55.5 x 99.5 x 110.5 cm
Capacity	22 Kilograms
Voltage	127 Volts (AC)
Material	Polypropylene
Special Features	2 independent motors, Air Fresh, Magic Pro Filter
Product Weight	37.5 Kilograms
Access Location	Top Load
Cycle Options	Normal, Strong

9. WARRANTY AND SUPPORT

Warranty Information

This Midea washing machine comes with the following warranty:

- **1-Year Warranty:** Covers parts and labor.
- **3-Year Warranty:** Covers the transmission.



Figure 9: Warranty details.

If you are not satisfied with the performance of your Midea product, registered on time in the program, you may call the contact center within a maximum of 60 days after the product is delivered to your home to request an exchange.

Air Fresh

Gracias al exclusivo diseño Air Fresh de la cubierta, el agua se puede eliminar fácilmente de la ropa mediante la circulación de aire interior y exterior.

Figure 10: Quality guarantee and support information.

Customer Support

For technical assistance, warranty claims, or any questions regarding your Midea washing machine, please contact Midea customer service. Refer to your purchase documentation or the official Midea website for contact details specific to your region.