Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- Anderic /
- Anderic EzWipe Smart TV Universal Remote Control RR1003 Instruction Manual

Anderic RR1003

Anderic EzWipe Smart TV 1-Device Universal Remote Control (RR1003) Instruction Manual

Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your Anderic EzWipe Smart TV 1-Device Universal Remote Control (Model RR1003). This remote is designed for simplified control of televisions, featuring a durable, easy-to-clean membrane surface, making it ideal for hospitality settings or any environment requiring robust and hygienic control.

PACKAGE CONTENTS

- Anderic RR1003 Universal Remote Control
- · Battery Cover Opening Tool
- Instruction Manual with Code Database

PRODUCT OVERVIEW

The Anderic RR1003 remote control is engineered for ease of use and durability. Its key features include:

- Easy-Wipe Membrane Surface: A flat, sealed surface designed for effortless cleaning and spill resistance.
- Simplified Control: Features oversized buttons for essential TV functions, reducing complexity.
- Universal Compatibility: Pre-programmed for Samsung TVs and programmable for most major TV brands.
- Learning Capability: Allows programming of additional functions from other remote controls.
- Essential Functions: Includes buttons for Dash, Sleep, Closed Captioning (CC), and Previous Channel.



Figure 1: Front view of the Anderic RR1003 remote control, showcasing its simplified button layout and membrane surface.

GETTING STARTED

1. Battery Installation

The Anderic RR1003 remote requires two (2) AAA batteries (not included).

- 1. Locate the battery compartment on the back of the remote control.
- 2. Use the provided battery cover opening tool (or a coin) to carefully open the battery compartment.
- 3. Insert two AAA batteries, ensuring correct polarity (+ and -) as indicated inside the compartment.
- 4. Close the battery compartment securely.



Figure 2: Back view of the Anderic RR1003 remote control, showing the battery compartment and the required AAA battery type.

2. Programming the Remote Control

The RR1003 is pre-programmed for Samsung TVs. For other brands, use one of the following programming methods:

Method A: Direct Code Entry

- 1. Turn on the TV you wish to program.
- 2. Press and hold the TV button on the remote until the indicator light illuminates.
- 3. Refer to the included instruction manual for the 3-digit code corresponding to your TV brand.
- 4. Enter the 3-digit code using the number buttons on the remote. If the code is valid, the indicator light will turn off.
- 5. Test the remote's functions (e.g., Power, Volume, Channel). If functions do not work correctly, repeat the process with the next code listed for your brand.

Method B: Auto Code Search

- 1. Turn on the TV you wish to program.
- 2. Press and hold the TV button on the remote until the indicator light illuminates.
- Point the remote at the TV and press the Power button repeatedly (approximately every 2 seconds) until the TV turns off.
- 4. Once the TV turns off, immediately press the TV button to save the code. The indicator light will turn off.
- 5. Test the remote's functions. If functions do not work correctly, repeat the process.

Method C: Learning Function

The remote has a learning function to copy commands from your original TV remote.

- 1. Place the RR1003 and your original remote head-to-head on a flat surface, approximately 1-2 inches apart.
- 2. Press and hold the TV button on the RR1003 until the indicator light illuminates.
- 3. Press the button on the RR1003 that you wish to program (e.g., Volume Up). The indicator light will flash slowly.
- 4. Press and hold the corresponding button on your original remote. The indicator light on the RR1003 will flash rapidly, then turn solid, indicating successful learning.
- 5. Repeat for other buttons as needed.
- 6. Press the TV button on the RR1003 to exit learning mode.

OPERATING YOUR REMOTE CONTROL

The Anderic RR1003 features a simplified button layout for essential TV functions. Refer to Figure 3 for button locations.

- Power (Red Button): Turns the TV on or off.
- Input (Button with Arrow): Cycles through video input sources.
- Home (House Icon): Accesses the Smart TV home screen or main menu.
- Directional Pad (Blue Arrows & OK): Navigates menus and confirms selections.
- Menu (Button with Lines): Opens the TV's main menu.
- Back (Curved Arrow): Returns to the previous screen or menu.
- Volume Up/Down (VOL +/-): Adjusts the TV volume.
- Mute (Speaker with X): Mutes or unmutes the TV audio.
- Channel Up/Down (CH ^/v): Changes TV channels.
- Number Keys (0-9): Direct channel entry.
- Dash (-/-): Used for sub-channels (e.g., 7-1).
- Enter: Confirms number entries or selections.
- Sleep: Activates the TV's sleep timer function.

- Exit: Exits current menu or application.
- CC (Closed Captioning): Toggles closed captions on/off.
- Previous Channel (Curved Arrow with TV): Returns to the previously viewed channel.



Figure 3: Front view of the Anderic RR1003 remote control, positioned on its stand, providing a clear view of all buttons and the brand logo.

MAINTENANCE AND CARE

Cleaning Instructions

The EzWipe membrane surface allows for easy cleaning:

- 1. Ensure the battery cover is securely closed to maintain water resistance.
- 2. Wipe the remote's surface with a damp cloth or disinfectant wipe.
- 3. Avoid using abrasive cleaners or solvents.
- 4. Allow the remote to air dry completely before use.

Battery Replacement

Replace batteries when the remote's performance diminishes or the indicator light does not respond. Always use fresh AAA batteries.

TROUBLESHOOTING

- Remote not responding: Check battery installation and ensure batteries are fresh. Point the remote directly at the TV's infrared sensor.
- Specific functions not working after programming: Try a different code for your TV brand from the manual, or use the auto code search/learning function.
- Accidental de-programming: The remote is designed to prevent accidental de-programming by requiring two buttons to be pressed simultaneously to enter setup mode. If issues persist, re-program the remote.

SPECIFICATIONS

• Model: RR1003

• Dimensions: 7 x 2 x 1.25 inches

• Item Weight: 2.39 ounces

• Batteries: 2 AAA batteries (not included)

• Connectivity Technology: Infrared

• Max Number of Supported Devices: 1 (Television)

• Special Features: Spillproof, Easy Wipe Membrane Surface, Universal for Smart TVs, Learning Ability

SUPPORT AND WARRANTY


For technical support or warranty inquiries, please contact Anderic:

Website: www.Anderic.comPhone: 1-855-573-6683

Please refer to the official Anderic website for the most current warranty information.

© 2023 Anderic. All rights reserved.

Related Documents - RR1003

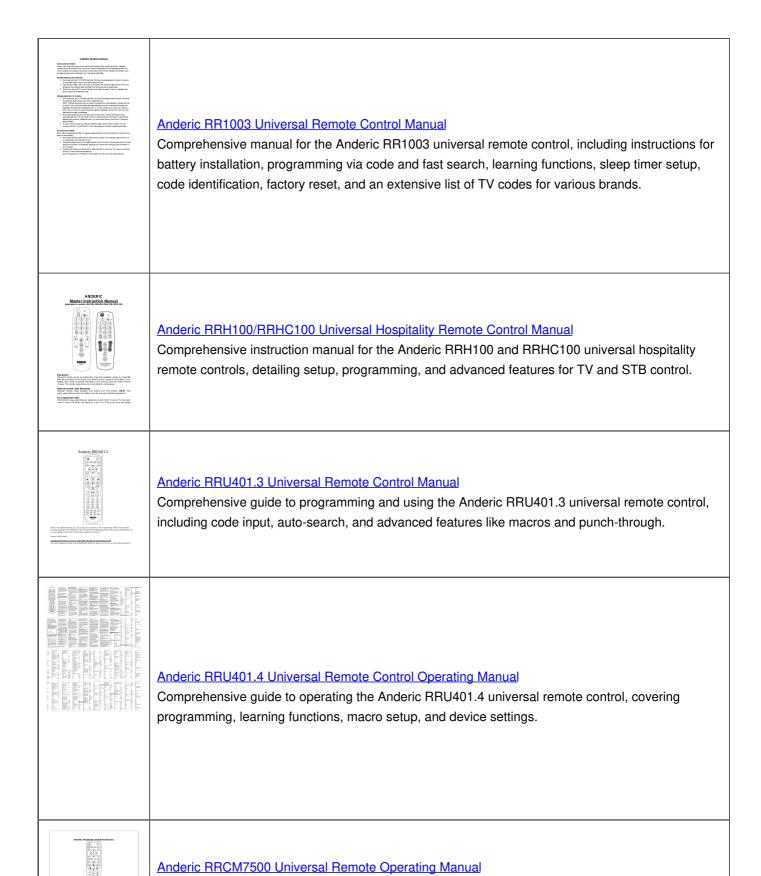

Comprehensive operating manual for the Anderic RRCM7500 universal remote control, detailing

installation, programming methods, special features like input lock and volume lock, code

protection, and a vast list of device codes for various brands.



Anderic RRU401 Universal Remote Control User Manual

Comprehensive user manual for the Anderic RRU401 universal remote control, detailing programming methods, features like device lock and punch-through, and extensive code lists for various audio and video devices.