

Logitech 910-007165

Logitech POP Mouse Wireless Mouse User Manual

Model: 910-007165

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Logitech POP Mouse. The POP Mouse is a compact, wireless mouse designed for multi-device use with customizable features.



Image: The Logitech POP Mouse in Graphite, showcasing its compact and ergonomic design.

2. PACKAGE CONTENTS

- Logitech POP Wireless Mouse
- 1x AA Battery (pre-installed)
- User documentation

In the box



**Responsible
Packaging**

Image: The Logitech POP Mouse and a single AA battery, representing the items included in the product package.

3. SETUP INSTRUCTIONS

3.1. Battery Installation

1. Gently remove the top cover of the mouse. The cover is magnetically attached.
2. Insert the included AA battery, ensuring correct polarity (+/-).
3. Replace the top cover, ensuring it snaps securely into place.

3.2. Connecting via Bluetooth

1. Turn on the mouse using the power switch located on the bottom.
2. Press and hold one of the Easy-Switch buttons (1, 2, or 3) on the bottom of the mouse until the LED indicator starts blinking rapidly. This indicates pairing mode.
3. On your device (computer, tablet, or phone), open Bluetooth settings.
4. Select "Logitech POP Mouse" from the list of available devices to complete the pairing process.
5. The LED indicator will glow solid for a few seconds, then turn off, confirming a successful connection.



Image: The underside of the POP Mouse, highlighting the Easy-Switch buttons for multi-device pairing.

4. OPERATING INSTRUCTIONS

4.1. Basic Functions

- **Left Click:** Primary selection and interaction.
- **Right Click:** Accesses contextual menus.
- **Scroll Wheel:** Navigates vertically through documents and web pages.

4.2. SilentTouch Technology

The POP Mouse features SilentTouch Technology, which significantly reduces click noise, providing a quieter user experience without compromising tactile feedback.

Make a big impression on the quiet

With Silent Touch Technology

Image: A hand operating the POP Mouse, illustrating the quiet operation provided by SilentTouch Technology.

4.3. SmartWheel Scrolling

The SmartWheel automatically switches between two modes:

- **Precision Mode:** For detailed, line-by-line navigation.
- **Speed Scroll Mode:** For rapid scrolling through long documents or web pages.

Get where you need to go, fast



With SmartWheel speed scroll

Image: A user's hand demonstrating the use of the SmartWheel for efficient navigation.

5. CUSTOMIZATION

5.1. Customizable Top Button (Emoji Button)

The top button, located below the scroll wheel, is customizable. By default, it can be configured to open an emoji menu or assign other shortcuts.

1. Download and install the Logitech Options+ Software from the official Logitech website (logitech.com/optionsplus).
2. Open the Logitech Options+ Software.
3. Select your POP Mouse from the detected devices.
4. Navigate to the button customization settings.
5. Assign your desired function to the top button, such as an emoji shortcut, Snip Screen, Mic Mute, or Voice-to-Text.



Image: A visual representation of the customizable top button on the POP Mouse, showing its function to access an emoji menu on a connected computer.

6. MULTI-DEVICE CONNECTIVITY

The Logitech POP Mouse can connect to up to three different devices simultaneously using Bluetooth. You can easily switch between these devices.

6.1. Switching Devices

To switch between paired devices, press the Easy-Switch button (1, 2, or 3) on the bottom of the mouse corresponding to the desired device. The LED indicator will briefly light up to confirm the selected channel.

6.2. Logitech FLOW (Advanced Feature)

For seamless control across multiple computers, install Logitech Options+ Software on all devices. With Logitech FLOW enabled, you can move your mouse cursor across screens as if they were a single desktop, even copying and pasting text, images, and files between them.



Image: A diagram showing how the POP Mouse can control multiple devices, illustrating the FLOW feature for cross-device interaction.

7. MAINTENANCE

7.1. Battery Replacement

The POP Mouse operates on a single AA battery with an estimated life of up to 24 months. When the battery is low, the LED indicator on the bottom of the mouse may flash. Replace the battery by following the steps in Section 3.1.

7.2. Cleaning

To clean your mouse, use a soft, lint-free cloth. For stubborn dirt, slightly dampen the cloth with water. Avoid using harsh chemicals or abrasive materials.

8. TROUBLESHOOTING

Problem	Solution
Mouse does not turn on.	Ensure the power switch on the bottom of the mouse is in the 'ON' position. Check and replace the AA battery if necessary.
Mouse not connecting via Bluetooth.	Ensure the mouse is in pairing mode (LED blinking rapidly). Verify Bluetooth is enabled on your device. Remove "Logitech POP Mouse" from your device's Bluetooth list and attempt to re-pair. Try connecting to a different Easy-Switch channel (1, 2, or 3).
Cursor movement is erratic or unresponsive.	Ensure the mouse sensor on the bottom is clean and free of debris. Use the mouse on a suitable surface (not highly reflective or transparent). Check battery level and replace if low.
Custom button not working.	Ensure Logitech Options+ Software is installed and running on your computer, and the button is correctly configured.

9. SPECIFICATIONS

Feature	Detail
Model Number	910-007165
Connectivity	Bluetooth 5.1
Wireless Range	Up to 10 meters (32.81 ft)
Sensor Technology	Logitech High Precision Optical Tracking
Number of Buttons	4 (Left/Right click, Scroll wheel click, Top customizable button)
Battery Type	1 x AA battery
Battery Life	Up to 24 months (may vary based on usage)
Dimensions (LxWxH)	14.12 x 2.34 x 1.38 inches (35.86 x 5.94 x 3.51 cm)
Weight	2.89 ounces (82g with battery)
Operating System Compatibility	Windows 10 or later, macOS 10.15 or later, iPadOS, Chrome OS, Android


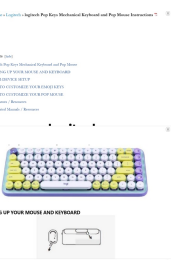 
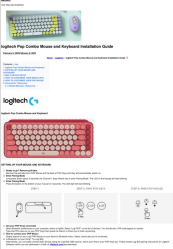 

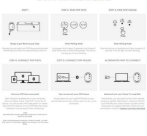 



Image: Technical drawing displaying the length, width, and height measurements of the Logitech POP Mouse.

10. WARRANTY AND SUPPORT

For warranty information and technical support, please visit the official Logitech support website or refer to the user documentation included in your product package.

- **Online Support:** support.logi.com
- **Product Registration:** Registering your product can help you receive faster support and updates.

	<p>Logitech POP Keys and POP Mouse Setup and Customization Guide</p> <p>A comprehensive guide to setting up, pairing, and customizing your Logitech POP Keys keyboard and POP Mouse, including multi-device setup and emoji key customization.</p>
	<p>Logitech POP Keys Mechanical Keyboard and POP Mouse Setup and Customization Guide</p> <p>Comprehensive guide to setting up, pairing, and customizing your Logitech POP Keys mechanical keyboard and POP Mouse. Learn about multi-device setup, emoji key customization, and OS layout selection.</p>
	<p>Logitech Pop Combo Mouse and Keyboard: Installation and Setup Guide</p> <p>Comprehensive guide to installing, setting up, and customizing your Logitech Pop Combo Mouse and Keyboard, including multi-device pairing and emoji keycap personalization.</p>
	<p>Logitech POP Keys and POP Mouse Setup and Customization Guide</p> <p>A comprehensive guide to setting up and customizing your Logitech POP Keys keyboard and POP Mouse, including pairing, multi-device setup, and emoji key customization.</p>
	<p>Setting Up and Customizing Your Logitech POP Mouse and Keys</p> <p>A guide to setting up, pairing, and customizing your Logitech POP Mouse and POP Keys, including multi-device setup and emoji key customization.</p>
	<p>Logitech POP Keys and POP Mouse Setup and Customization Guide</p> <p>A comprehensive guide to setting up and customizing your Logitech POP Keys keyboard and POP Mouse, including pairing, multi-device setup, and emoji key customization.</p>