

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

> [GOODTEL](#) /

> [GOODTEL G10 10-inch Android 13 Tablet User Manual](#)

GOODTEL G10

GOODTEL G10 10-inch Android 13 Tablet User Manual

Model: G10

1. INTRODUCTION

This manual provides essential instructions for setting up, operating, maintaining, and troubleshooting your GOODTEL G10 10-inch Android 13 Tablet. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your user experience.

2. PACKAGE CONTENTS

Upon opening the package, please verify that all items are present and in good condition. The standard package includes:

- GOODTEL G10 10-inch Android 13 Tablet
- USB Type-C Cable
- Power Adapter
- Protective Case
- Bluetooth Keyboard
- Wireless Mouse
- User Manual (this document)

3. SETUP GUIDE

3.1 Charging the Tablet

Before initial use, fully charge the tablet's 8000mAh battery. Connect the provided USB Type-C cable to the tablet's Type-C port and the power adapter, then plug the adapter into a wall outlet.

Large Capacity Long Lasting Battery



Type C



Large Capacity



Long Lasting



Image: The GOODTEL G10 tablet highlighting its 8000mAh battery capacity and Type-C charging port.

3.2 Powering On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the screen illuminates.
- **To Power Off:** Press and hold the Power button until a menu appears on the screen. Select "Power off" and confirm.
- **To Restart:** From the power menu, select "Restart" and confirm.

3.3 Initial Setup

The first time you power on your tablet, you will be guided through an initial setup process:

1. Select your preferred language.
2. Connect to a Wi-Fi network.
3. Sign in with your Google Account or create a new one. This is necessary for downloading apps from the Google Play Store and accessing Google services.
4. Review and accept the terms and conditions.
5. Set up screen lock (PIN, pattern, or password) for security.

3.4 Inserting a MicroSD/TF Card

The GOODTEL G10 supports storage expansion up to 1TB via a MicroSD/TF card. Locate the card slot on the side of the

tablet. Gently insert the MicroSD card with the gold contacts facing down until it clicks into place.

128 GB ROM + 4GB-1TB MicroSD/TF Card Expansion

G10 tablet is equipped with 128GB ROM and supports 4GB - 1TB SD/TF card memory expansion, Provide ample space for desktop study materials, work files, pictures, video, movies, music and applications, etc. (SD/TF card needs to be purchased separately).



Image: The GOODTEL G10 tablet illustrating its 128GB internal storage and support for up to 1TB MicroSD/TF card expansion.

3.5 Connecting Accessories (Keyboard & Mouse)

Your tablet comes with a Bluetooth keyboard and a wireless mouse for enhanced productivity.

3.5.1 Bluetooth Keyboard

1. Ensure the keyboard is charged and powered on.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Turn on Bluetooth and scan for devices.
4. Select the keyboard from the list of available devices and follow any on-screen pairing instructions.

3.5.2 Wireless Mouse

The wireless mouse typically connects via a USB dongle. If your mouse uses a dongle, you will need an OTG (On-The-Go) adapter (not included) to connect the dongle to the tablet's Type-C port. Alternatively, if it's a Bluetooth mouse, follow the same steps as for the Bluetooth keyboard.

4. OPERATING INSTRUCTIONS

4.1 Basic Navigation

The GOODTEL G10 tablet uses a touch-sensitive screen for navigation. Common gestures include:

- **Tap:** To select an item or open an app.
- **Tap & Hold:** To access contextual menus or move icons.
- **Swipe:** To scroll through pages or lists.
- **Pinch-to-Zoom:** To zoom in or out on images and web pages.

4.2 Wi-Fi Connectivity

Your tablet supports both 2.4GHz and 5GHz Wi-Fi for faster internet access.

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Turn on Wi-Fi.
3. Select your desired network from the list and enter the password if prompted.



Image: The GOODTEL G10 tablet demonstrating its capability for 2.4GHz and 5GHz Wi-Fi connectivity.

4.3 Bluetooth Pairing

To connect Bluetooth devices like headphones or speakers:

1. Ensure the Bluetooth device is in pairing mode.
2. On your tablet, go to **Settings > Connected devices > Bluetooth**.
3. Turn on Bluetooth and scan for devices.
4. Select the device from the list and follow any on-screen pairing instructions.

4.4 Using the Camera

The tablet features an 8MP rear camera and a 5MP front camera. Open the Camera app from your home screen or app drawer.

- Tap the shutter button to take a photo.
- Tap the video icon to record a video.
- Use the switch camera icon to toggle between front and rear cameras.

4.5 Installing and Managing Apps

You can download and install applications from the Google Play Store.

- **Install:** Open the **Play Store** app, search for your desired app, and tap "Install".
- **Uninstall:** Tap and hold the app icon on the home screen or in the app drawer, then drag it to "Uninstall" or select "App info" and then "Uninstall". Alternatively, go to **Settings > Apps**, select the app, and tap "Uninstall".

4.6 GPS Functionality

The tablet includes GPS for navigation and location-based services. Ensure location services are enabled in **Settings > Location** for apps to utilize GPS.

4.7 OTG (On-The-Go) Functionality

The Type-C port supports OTG, allowing you to connect USB devices such as flash drives, external hard drives, or certain peripherals (like a wired mouse) using an appropriate OTG adapter (sold separately).

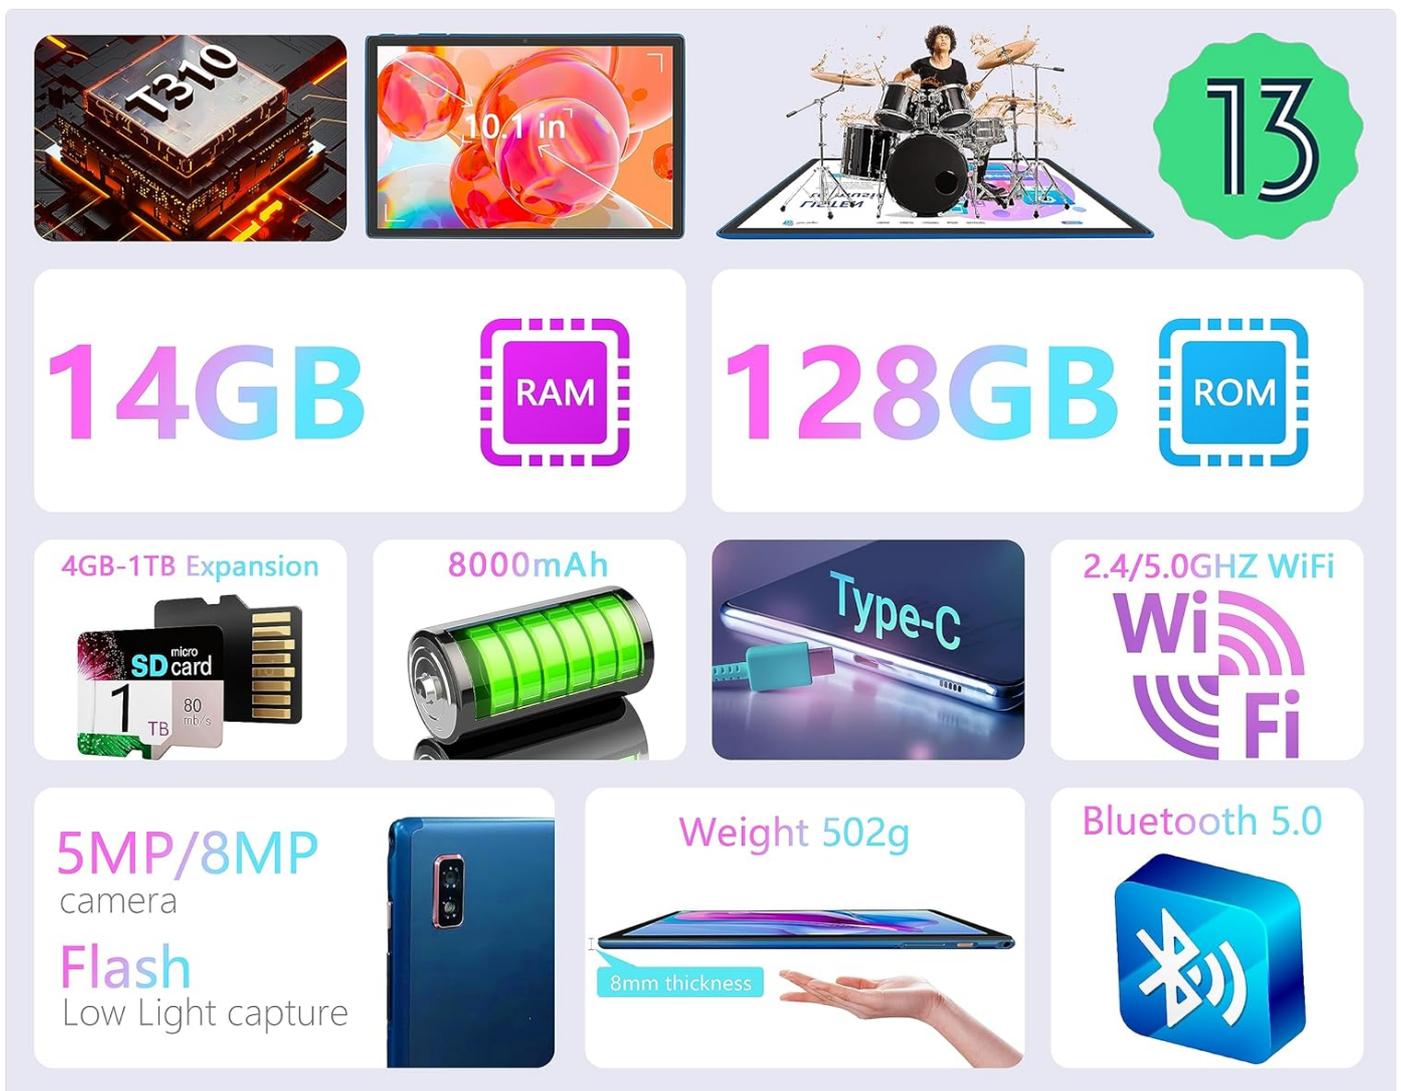


Image: An overview of the GOODTEL G10 tablet's features, including the Type-C port which supports OTG functionality.

5. MAINTENANCE

5.1 Cleaning the Tablet

- Use a soft, lint-free cloth to clean the screen and body of the tablet.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner designed for electronics.
- Avoid using harsh chemicals, abrasive materials, or excessive moisture.

5.2 Battery Care

- Avoid exposing the tablet to extreme temperatures (hot or cold), as this can degrade battery life.
- Do not leave the tablet fully discharged for extended periods.
- Use only the provided charger or a certified compatible charger.

5.3 Software Updates

Periodically check for system updates to ensure optimal performance and security. Go to **Settings > System > System update**.

5.4 Storage Management

To maintain performance, regularly manage your tablet's storage:

- Delete unnecessary apps and files.
- Move large files (photos, videos) to the MicroSD card or cloud storage.
- Clear app cache regularly via **Settings > Apps > select app > Storage & cache > Clear cache**.

6. TROUBLESHOOTING

6.1 Common Issues and Solutions

Issue	Possible Solution
Tablet won't turn on	Ensure the battery is charged. Connect the charger and wait a few minutes before attempting to power on again. If still unresponsive, perform a forced restart by holding the power button for 10-15 seconds.
Wi-Fi connection issues	Check if Wi-Fi is enabled in settings. Restart your router and the tablet. Forget the network and reconnect. Ensure you are within range of the Wi-Fi signal.
Slow performance	Close unused apps. Clear app caches. Free up storage space. Restart the tablet. Consider a factory reset if the issue persists after other steps.
Apps crashing or freezing	Clear the app's cache and data (Settings > Apps > [App Name] > Storage & cache). Update the app to the latest version. Uninstall and reinstall the app.
Touchscreen unresponsive	Restart the tablet. Ensure the screen is clean and free of debris. If the issue persists, contact support.

6.2 Factory Reset

A factory reset will erase all data from your tablet and restore it to its original factory settings. **Backup all important data before proceeding.**

1. Go to **Settings > System > Reset options**.
2. Select **Erase all data (factory reset)**.
3. Confirm your decision and enter your PIN/pattern/password if prompted.
4. The tablet will restart and begin the reset process.

7. SPECIFICATIONS

Detailed technical specifications for the GOODTEL G10 Tablet:

Feature	Specification
Model	G10
Operating System	Android 13
Processor	Octa-Core (T310, 2.0 GHz Cortex-A55)
RAM	14GB (6GB physical + 8GB virtual expansion)
Internal Storage (ROM)	128GB

Feature	Specification
Expandable Storage	Up to 1TB via MicroSD/TF Card (card not included)
Screen Size	10.1 Inches IPS
Screen Resolution	<i>Not explicitly stated, typically 1280x800 or 1920x1200.</i>
Peak Brightness	350 nits
Rear Camera	8MP
Front Camera	5MP
Battery Capacity	8000mAh
Connectivity	Wi-Fi (2.4GHz/5GHz), Bluetooth 5.0, GPS
Ports	USB Type-C (supports OTG), MicroSD/TF Card Slot
Dimensions	8mm thickness
Weight	502g
GMS Certified	Yes

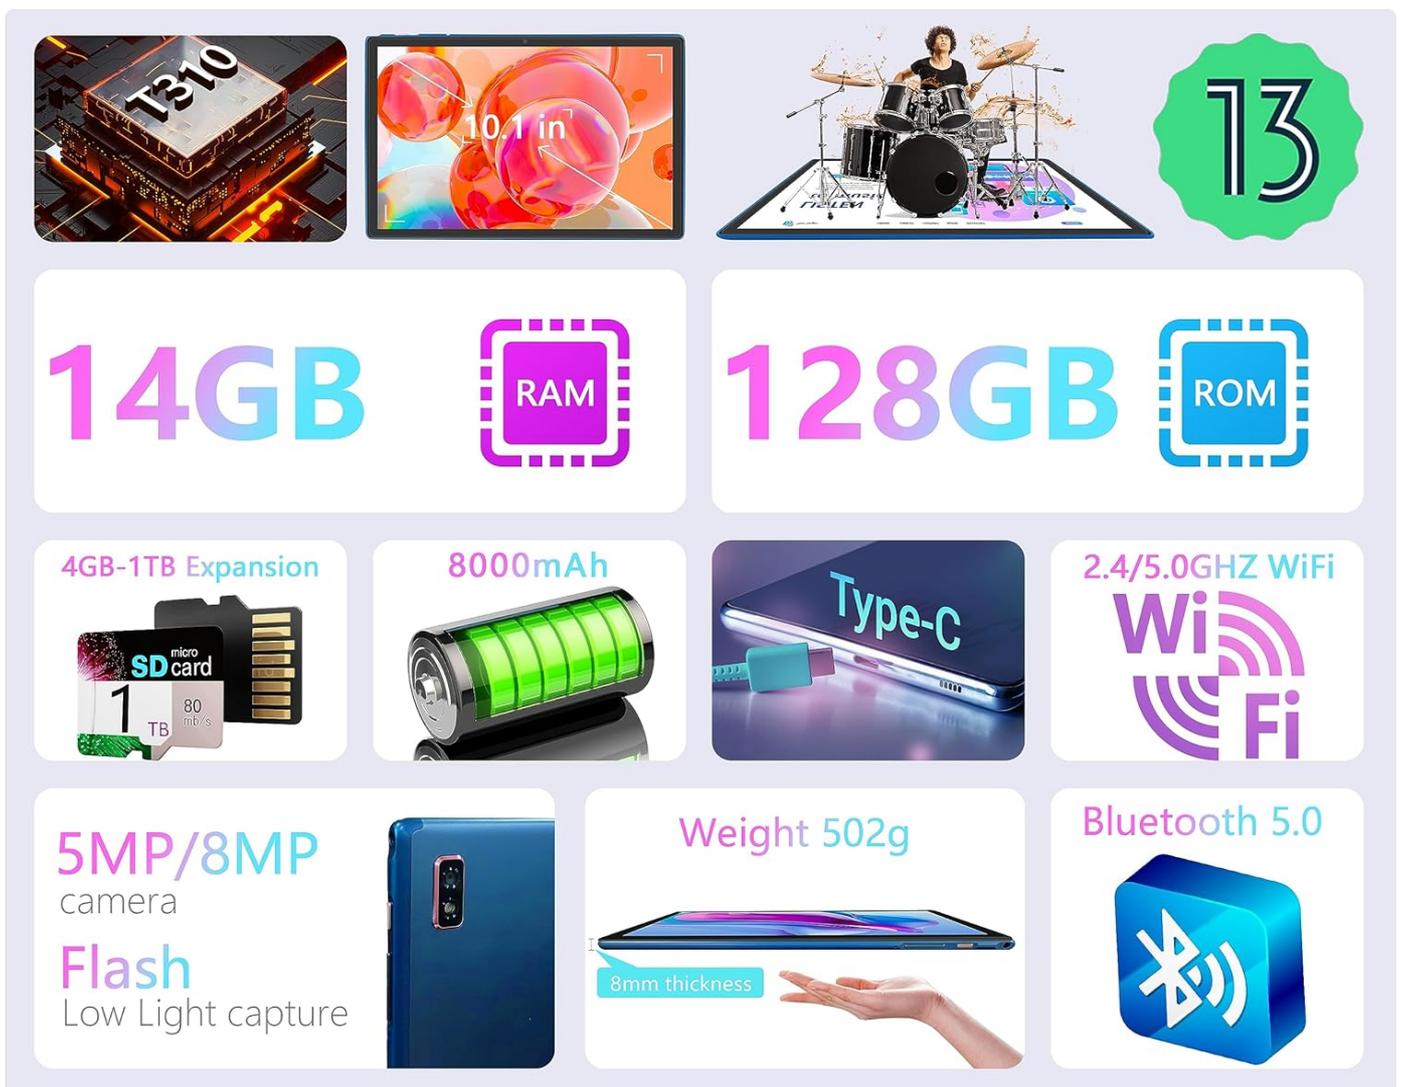


Image: A visual summary of the GOODTEL G10 tablet's main specifications, including 14GB RAM, 128GB ROM, 8000mAh battery, 8MP+5MP cameras, and 5G WiFi.

Gran velocidad de ejecución

14(6+8)GB RAM



14GB Running Space

Potente y eficiente



2.0 Ghz

Cortex-A55 multifuncional



T310

CPU de alto rendimiento



Android 13

Certificación GMS



Android 13

Personal OS



Privacy

Security & device control



Play Store

Millions of apps




Image: Details on the GOODTEL G10 tablet's T310 Octa-Core CPU, Android 13 operating system, GMS certification, and privacy features.

Large 10.1-inch screen

Get creative on the 10.1-inch IPS display. Let your creative vision run wild on the display, perfect for high-brightness high-contrast photos or videos

502g Light

 8mm Thickness

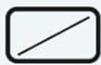

10.1 inch IPS

Screen size



16:9

Screen ratio



350nits

Peak Brightness



Image: Information about the GOODTEL G10 tablet's 10.1-inch IPS display, 502g weight, 8mm thickness, and 350 nits peak brightness.

8. WARRANTY AND SUPPORT

Your GOODTEL G10 Tablet is covered by a limited warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, warranty claims, or general inquiries, please contact GOODTEL customer service through the retailer where you purchased the product or visit the official GOODTEL website for contact information.

Please retain your proof of purchase for warranty purposes.