

[manuals.plus](#) /› [VOCOO](#) /› [VOCOO Magnetic Digital Kitchen Timer User Manual \(Model VC5268\)](#)**VOCOO VC5268**

VOCOO Magnetic Digital Kitchen Timer User Manual (Model VC5268)

Your guide to efficient time management in the kitchen, classroom, and beyond.

1. INTRODUCTION

Thank you for choosing the VOCOO Magnetic Digital Kitchen Timer (Model VC5268). This versatile timer is designed for ease of use, featuring a large, bright display, adjustable sound and brightness, and multiple placement options. It is ideal for various activities including cooking, studying, fitness, and classroom management. This manual will guide you through the setup, operation, and maintenance of your new timer.



Figure 1: VOCOO Magnetic Digital Kitchen Timer (Model VC5268)

2. SETUP

2.1 Battery Installation

Your VOCOO Digital Timer requires three (3) AAA batteries (included). To install or replace batteries:

1. Locate the kickstand on the back of the timer.
2. Flip up the kickstand.
3. Slide open the battery compartment cover.
4. Insert three AAA batteries, ensuring correct polarity (+/-).
5. Close the battery compartment cover and fold the kickstand back into place if not in use.

A low power icon will appear on the display to remind you when batteries need to be changed.

99 Minutes 59 Seconds Count Up/Countdown



Figure 2: Rear view showing battery compartment and kickstand.


2.2 Placement Options

The VOCOO timer offers versatile placement options:

- **Magnetic:** The strong magnetic back with rubber pads allows you to attach the timer securely to metal surfaces like refrigerators, ovens, or whiteboards without scratching.
- **Desktop Stand:** Utilize the sturdy, foldable kickstand for convenient placement on any flat surface, such as a countertop, desk, or table.
- **Hanging:** A small hanging hole is provided for hanging the timer on a hook.

Easy to Use

4 large buttons on top

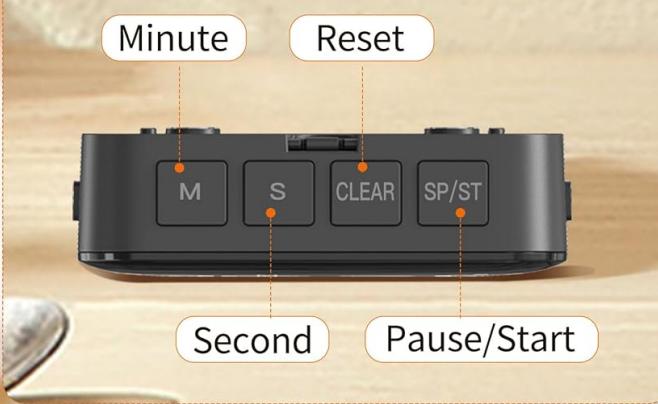

Low Battery icon

Remind you to charge new batteries



2 Levels of Brightness



High Brightness Mode

The display will keep on bright when timer is running



ECO Mode

The display will dim after 5s.
It is recommended to set it to ECO for extended battery life



Figure 3: Various placement methods for the timer.

3. OPERATING INSTRUCTIONS

The timer features intuitive buttons for easy operation:

2-Levels Volume and Mute



Figure 4: Top view of the timer with clearly marked buttons.

- **M (Minute) Button:** Press to set minutes. Each press increases the minute count by one.
- **S (Second) Button:** Press to set seconds. Each press increases the second count by one.
- **CLEAR Button:** Press to reset the timer to 00:00.
- **SP/ST (Start/Pause) Button:** Press to start or pause the timer.

3.1 Count Down Function

1. Press the **M** and **S** buttons to set your desired countdown time (up to 99 minutes and 59 seconds).
2. Press the **SP/ST** button to start the countdown.
3. To pause the countdown, press **SP/ST** again. Press **SP/ST** to resume.
4. When the countdown reaches zero, the alarm will sound (if not muted) and the display will blink.
5. Press the **CLEAR** button to stop the alarm and reset the timer.

Memory Function: The timer remembers the last set countdown time. If you press **CLEAR** after an alarm, the display will return to the last set time, allowing for quick reuse.

3.2 Count Up Function (Stopwatch)

1. Ensure the timer is reset to 00:00 by pressing the **CLEAR** button.
2. Press the **SP/ST** button to start counting up from 00:00.

3. To pause the count-up, press **SP/ST** again. Press **SP/ST** to resume.
4. To reset the stopwatch, press the **CLEAR** button.

4. FEATURES

4.1 Large Display

The timer features a large 4-inch screen with 1.3-inch tall bright numbers, ensuring excellent visibility from a distance and various angles.

4.2 Brightness Levels

A slide switch on the side of the timer allows you to select between two brightness modes:

- **Bright Mode:** The display remains continuously bright while the timer is running.
- **ECO Mode:** The display will dim after 5 seconds of inactivity to conserve battery life. It will brighten again when a button is pressed or the alarm sounds.

It is recommended to use ECO mode for extended battery life.



Figure 5: Side view illustrating brightness and volume control switches.

4.3 Volume Levels

Another slide switch on the side controls the alarm volume:

- **Loud:** 80-90dB, suitable for noisy environments.
- **Soft:** 60-75dB, for quieter settings.
- **Mute:** The display will only blink when the timer reaches zero, with no audible alarm.

Note: When set to Loud or Soft, the timer will also beep when setting the time. Slide to Mute if silent operation is desired.

5. MAINTENANCE

5.1 Battery Replacement

Replace the three AAA batteries when the low power icon appears on the display to ensure optimal performance. Refer to Section 2.1 for detailed battery installation instructions.

5.2 Cleaning

Wipe the timer with a soft, dry cloth. Avoid using abrasive cleaners or submerging the device in water.

6. TROUBLESHOOTING

- **Display is dim or off:**
 - Check battery level and replace if necessary.
 - Ensure the brightness switch is not set to ECO mode if a continuously bright display is desired.
- **Alarm is not sounding:**
 - Check the volume switch on the side of the timer and ensure it is not set to Mute.
- **Timer not responding to button presses:**
 - Ensure batteries are correctly installed and have sufficient power.
 - Press buttons firmly.

7. SPECIFICATIONS

Brand	VOCOO
Model Number	VC5268
Product Dimensions	0.94"D x 3.54"W x 2.64"H
Item Weight	4.6 ounces
Material	Acrylonitrile Butadiene Styrene
Screen Size	4 Inches
Power Source	3 x AAA Batteries (Included)
Brightness Levels	2 (Bright, ECO)
Volume Levels	3 (Loud, Soft, Mute)



Figure 6: Product dimensions.

8. WARRANTY AND SUPPORT

For any questions, concerns, or support needs regarding your VOCOO Magnetic Digital Kitchen Timer, please contact our customer support team.

Email: support@vocoo.vip.com

Please have your model number (VC5268) available when contacting support for faster service.