

[Manuals.plus](#) /

> [Topyond](#) /

> Topyond Digital Kitchen Timer User Manual

## Topyond B0CDGGV5K9

# Topyond Digital Kitchen Timer User Manual

Model: B0CDGGV5K9

## 1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Topyond Digital Kitchen Timer. Please read this manual thoroughly before operating the device and retain it for future reference.



Image 1.1: Front view of the Topyond Digital Kitchen Timer, displaying a clear LED screen with minutes and seconds.

## 2. PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Topyond Digital Kitchen Timer
- 1 x User Manual (this document)

## 3. SPECIFICATIONS

<b>Item Type</b>	Kitchen Timer
<b>Material</b>	ABS (Acrylonitrile Butadiene Styrene)
<b>Gross Weight</b>	79g / 2.8oz

<b>Product Dimensions</b>	Approx. 7.7 x 7.7 x 3cm (3.0 x 3.0 x 1.2in)
<b>Color</b>	Black
<b>Batteries</b>	3 x AAA batteries (not included)
<b>Timing Range</b>	00~99 minutes, 00~55 seconds
<b>Volume Levels</b>	Silent (0dB), Low (60~75dB), Loud (80~90dB)



Image 3.1: The timer shown with its approximate dimensions of 3 inches by 3 inches by 1.2 inches.

## 4. SETUP

### 4.1 Battery Installation

1. Locate the battery compartment on the back of the timer.
2. Open the battery cover.
3. Insert 3 AAA batteries, ensuring correct polarity (+/-).
4. Close the battery cover securely.



Image 4.1: Rear view of the timer, highlighting the battery compartment for AAA batteries.

## 4.2 Placement

The timer features a magnetic back, allowing it to be attached to metal surfaces such as refrigerators, ovens, or whiteboards for convenient access.



Image 4.2: The timer attached magnetically to the side of an oven, demonstrating its magnetic suction feature.

## 5. OPERATING INSTRUCTIONS

### 5.1 Power On/Off

The timer automatically powers on when batteries are inserted. It enters a low-power standby mode when not in use.

### 5.2 Setting the Countdown Timer

1. **Rotate the outer ring:** Turn the outer ring clockwise to increase the time and counter-clockwise to decrease the time. The display shows minutes (M) and seconds (S).
2. **Start/Pause:** Press the button on the front of the timer once to start the countdown. Press it again to pause.
3. **Reset:** To reset the timer to 00:00, press and hold the button on the front for approximately 3 seconds.

# One key operation

Easy to operate, grandma and 5 year old children can easily use



Image 5.1: The timer displaying a countdown, illustrating its simple one-key operation for starting and pausing.

## 5.3 Adjusting Volume

The timer offers three volume settings: Silent, Low, and Loud. To adjust the volume, locate the small switch or button on the side/back of the timer (refer to Image 4.1 for general location of controls if not explicitly shown). Cycle through the settings to select your preferred volume level.

- **Silent (0dB):** No audible alarm.
- **Low (60-75dB):** Moderate alarm sound.
- **Loud (80-90dB):** High volume alarm.

## 6. MAINTENANCE

### 6.1 Cleaning

Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.

### 6.2 Battery Replacement

Replace batteries when the display dims or the timer functions inconsistently. Always use new AAA batteries and dispose of old batteries responsibly.

## 7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Timer does not turn on.	Batteries are dead or incorrectly installed.	Replace batteries with new AAA batteries, ensuring correct polarity.
Display is dim.	Low battery power.	Replace batteries.
Alarm is not audible.	Volume set to Silent mode.	Adjust the volume setting to Low or Loud.
Timer does not respond to rotation.	Internal malfunction.	Contact customer support if troubleshooting steps do not resolve the issue.

## 8. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided with your purchase or visit the official Topyond website.

