

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [PEACHAR](#) /

› [PEACHAR Dog Training Collar User Manual](#)

PEACHAR XA-200

PEACHAR Dog Training Collar User Manual

Model: XA-200

INTRODUCTION

The PEACHAR Dog Training Collar with Remote (Model XA-200) is designed to assist pet owners in training their dogs effectively and humanely. This device offers multiple training modes, including beep, vibration, and static stimulation, to help correct undesirable behaviors and reinforce positive commands. Its robust design ensures durability and reliability for both indoor and outdoor training environments.

SAFETY INFORMATION

Please read and understand all safety instructions before using the training collar. Improper use can lead to physical or psychological harm to your pet.

- This training collar is intended for dogs at least 6 months old and weighing over 10 lbs.
- Do not leave the collar on your dog for more than 12 hours per day. Prolonged wear can cause skin irritation.
- Regularly check your dog's neck for any signs of irritation or sores. If found, discontinue use until the skin heals.
- The static stimulation feature should be used responsibly and only when necessary. Always start with the lowest effective level.
- Ensure the collar fits snugly but not too tightly. You should be able to fit two fingers comfortably under the strap.
- Only responsible family members should operate the training collar.
- This device is not a toy. Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in your package:

- 1 x Remote Transmitter
- 1 x Receiver Collar
- 1 x Test Light Tool
- 1 x Charger Cable (USB)
- 1 x User Manual (this document)
- 2 x Contact Points (long)

- 2 x Silicone Caps

PRODUCT COMPONENTS

The PEACHAR Dog Training Collar system consists of a handheld remote transmitter and a receiver collar worn by your dog. The remote allows you to control the training modes and intensity levels, while the receiver delivers the stimulation.



Image: The PEACHAR remote transmitter and receiver collar. The remote features a digital display and control buttons, while the receiver is a compact unit attached to an adjustable collar strap.

SETUP GUIDE

1. Charging the Devices

Before first use, fully charge both the remote transmitter and the receiver collar. Use the provided USB charger cable.

- Connect the charger cable to the charging port on both the remote and the receiver.
- Plug the USB end into a standard USB power adapter (not included) or a computer USB port.
- Charging time is approximately **1.5 hours** for a full charge.
- The remote display will show battery status, and the receiver will indicate charging status (e.g., LED light).
- Once fully charged, the receiver can last up to **7 days**, and the transmitter up to **35 days** on a single charge.



Image: Illustration of the remote and receiver collar being charged via USB. The image highlights the fast charging time and extended battery life for both devices.

2. Fitting the Receiver Collar

Proper fit of the receiver collar is essential for effective and safe operation. The collar is adjustable and can be cut to size.

- Ensure the contact points are making direct contact with your dog's skin.
- The collar should be snug enough that it does not move around on the dog's neck, but loose enough to allow two fingers to fit between the strap and the dog's neck.
- The total length of the collar strap is **27.56 inches**, suitable for dogs weighing between **25 lbs and 120 lbs**.
- If the strap is too long, you can trim the excess after ensuring the correct fit.

Suitable for dogs **25-120Lbs**

27.56 inch
total length



Image: A visual guide demonstrating the adjustable nature of the collar and its suitability for various dog sizes, ranging from 25 lbs to 120 lbs. The total length of the collar is shown as 27.56 inches.

3. Attaching Contact Points and Silicone Caps

Select the appropriate contact points based on your dog's coat length. For dogs with shorter coats, shorter contact points may suffice. For longer coats, longer contact points are recommended to ensure proper skin contact.

- Screw the chosen contact points firmly into the receiver.
- Place the silicone caps over the contact points. These caps provide comfort and help prevent skin irritation.

4. Pairing the Remote and Receiver

The remote and receiver are typically pre-paired from the factory. If they lose connection or you are setting up for the first time, follow these steps:

1. Ensure both the remote and receiver are fully charged and turned on.
2. On the remote, select the desired channel (1, 2, or 3) if training multiple dogs.
3. Press and hold the power button on the receiver until the indicator light flashes rapidly.
4. Within 10 seconds, press any stimulation button (Beep, Vibration, or Shock) on the remote.
5. The receiver light will stop flashing and remain solid, indicating successful pairing.

OPERATING THE TRAINING COLLAR

Training Modes

The PEACHAR training collar offers four effective and safe training modes:

- **Beep Tone:** Delivers an audible tone. Useful for warning or positive reinforcement.
- **Vibration:** Provides a non-harmful vibration. Adjustable from **1 to 8 levels** of intensity.
- **Safe Shock:** Delivers a static stimulation. Adjustable from **1 to 18 levels** of intensity. Use with caution and at the lowest effective level.
- **Shock Boost:** Provides a **10% higher** static stimulation than the current Safe Shock level. Use for urgent situations or stubborn behaviors.

4 Effective Training Modes



Image: Visual representation of the four training modes: Beep Tone, Vibration (1-8 levels), Safe Shock (1-18 levels), and Shock Boost (10% higher). The image emphasizes the safe, humane, and professional aspects of the training collar.

Remote Control Functions

The remote transmitter is designed for user-friendly operation, featuring large buttons and a clear digital screen for visibility day and night.

- Digital Screen:** Displays current mode, intensity level, battery status for both remote and receiver, and selected dog channel.
- Mode Buttons:** Dedicated buttons for Beep, Vibration, and Shock modes.
- Intensity Adjustment:** Use the side buttons to increase or decrease the vibration or shock levels.
- Keypad Lock:** The remote features a security keypad lock function to prevent accidental activation. Slide the lock switch to the 'Lock' position when not in use or carrying the remote. Slide to 'Unlock' to operate.
- Remote Range:** The remote offers a stable connection up to **2300 feet** in open areas, allowing for extensive outdoor training.

2300FT REMOTE RANGE (Open Space)



One-Key Locking, No Accidental Shock



Image: Depicts the remote control in use, highlighting its 2300ft range in open spaces. A detailed inset shows the one-key locking mechanism on the remote, designed to prevent accidental shocks.

Multi-Dog Training

The remote supports training up to 3 dogs simultaneously without needing to reset settings. Use the channel selection button on the remote to switch between individual dog receivers (channels 1, 2, or 3).

MAINTENANCE AND CARE

Waterproofing

The receiver collar features an **IP68 waterproof design**, allowing your dog to enjoy water-related activities such as swimming or playing in the rain without damaging the device. The remote is not waterproof and should be kept dry.

IP68 Waterproof Receiver Collar



Your pet can enjoy water-related activities freely



Image: Shows the receiver collar submerged in water, illustrating its IP68 waterproof capability. Smaller images depict dogs enjoying various water activities like swimming and playing in the rain while wearing the collar.

Cleaning and Storage

- Clean the receiver collar and contact points regularly with a damp cloth to remove dirt and debris.
- Ensure the charging port cover is securely closed when not charging to maintain waterproofing.
- Store the device in a dry place when not in use.

TROUBLESHOOTING

If you encounter issues with your PEACHAR Dog Training Collar, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Collar not responding to remote.	Low battery on remote or receiver; devices not paired; remote keypad locked.	Charge both devices. Re-pair the remote and receiver. Unlock the remote keypad.
No static stimulation.	Contact points not touching skin; level too low; test light not used correctly.	Adjust collar fit. Increase stimulation level. Use the test light tool to verify function.
Remote turns off by itself.	Low battery; automatic power-off feature.	Recharge the remote. The remote may have an auto-off feature to save battery; simply turn it back on.
Skin irritation on dog's neck.	Collar worn too long; improper fit; allergic reaction.	Remove collar immediately. Allow skin to heal. Ensure proper fit and do not wear for more than 12 hours. Consult a vet if irritation persists.

SPECIFICATIONS

Feature	Detail
Model Number	XA-200
Training Modes	Beep, Vibration (1-8 levels), Safe Shock (1-18 levels), Shock Boost (10%)
Remote Range	Up to 2300 feet (open area)
Waterproof Rating (Receiver)	IP68
Battery Type	Rechargeable Lithium Polymer
Charging Time	Approx. 1.5 hours
Receiver Working Time	Up to 7 days
Transmitter Working Time	Up to 35 days
Adjustable Collar Length	27.56 inches (total length)
Suitable Dog Weight	25 lbs - 120 lbs
Item Weight (Receiver)	6.5 Grams (0.23 ounces)
Material	Plastic

GENERAL TRAINING TIPS

For optimal training results, consider the following general tips:

- Eliminate one misbehavior or teach one obedience command at a time. Moving too fast can confuse your pet.
- Be consistent. Correct your pet every time they misbehave to establish clear boundaries.
- If you cannot supervise your pet, it is recommended to restrict them from situations where they have a history of misbehaving.

- Setting up a controlled training session can significantly improve your chances of success.
- If your pet reacts to the beeps or vibrations by hiding or acting fearful, redirect their attention to a simple and appropriate behavior, such as the "sit" command, and reward them.

CUSTOMER SUPPORT

If you have any questions, concerns, or require assistance with your PEACHAR Dog Training Collar, please contact our customer support team. Refer to the product packaging or the PEACHAR brand store on Amazon for contact details.

© 2024 PEACHAR. All rights reserved.

Related Documents - XA-200

	<p>Dog Training Collar User Manual - Peachar</p> <p>Comprehensive user manual for the Peachar Dog Training Collar, detailing features, operation, safety guidelines, and troubleshooting for effective dog training.</p>
	<p>PEACHAR X200 Dog Training Collar with Remote - User Guide</p> <p>Discover the PEACHAR X200 Dog Training Collar with Remote. This guide provides essential information on setup, operation, features like beep, vibration, and shock modes, safety precautions, and troubleshooting for effective and humane dog training.</p>
	<p>Peachar X200 Dog Training Collar User Guide</p> <p>Comprehensive guide for the Peachar X200 Dog Training Collar, covering setup, usage, features like beep, vibration, and shock, troubleshooting, and customer service.</p>
	<p>PEACHAR X200 Dog Training Collar User Manual - Remote Control, Shock, Vibration, Beep</p> <p>Comprehensive user manual for the PEACHAR X200 Dog Training Collar. Learn how to use the remote, adjust shock, vibration, and beep levels, pair collars, and ensure safe training practices for your dog.</p>
	<p>PEACHAR PB12 Smart Dog Bark Control Collar User Guide</p> <p>Comprehensive user guide for the PEACHAR PB12 Smart Dog Bark Control Collar, covering setup, operation, sensitivity levels, static shock modes, fitting instructions, and troubleshooting.</p>

SUPER TRAINER™

EDT SERIES
Electronic Dog Trainer
Owner's Manual

- EDT 100
- EDT 102
- EDT 200
- EDT 202
- EDT 300
- EDT 302

 D.T. SYSTEMS, INC.

D.T. Systems Super Trainer EDT Series Electronic Dog Trainer Owner's Manual

Owner's manual for the D.T. Systems Super Trainer EDT Series electronic dog trainers, covering features, operation, maintenance, and warranty for models EDT 100, 102, 200, 202, 300, and 302.