

DMOAO D11

DMOAO 11-inch Android 13 Tablet D11 User Manual

Model: D11

1. INTRODUCTION

This manual provides essential information for setting up, operating, and maintaining your DMOAO 11-inch Android 13 Tablet D11. Please read this manual thoroughly before using your device to ensure proper functionality and to maximize your user experience.

The DMOAO D11 tablet features an 11-inch 2K FHD display, an Octa-Core processor, 16GB RAM, 256GB internal storage expandable up to 1TB, and an 8600mAh battery. It operates on Android 13 and supports 5G Wi-Fi connectivity.

2. WHAT'S IN THE BOX

Verify that all items are present in the package:

- DMOAO 11-inch Tablet D11
- D11 Protective Case
- Protective Film
- US Power Adapter
- Type-C Data Cable
- User Manual (this document)
- SIM Ejector Pin (for MicroSD card slot)

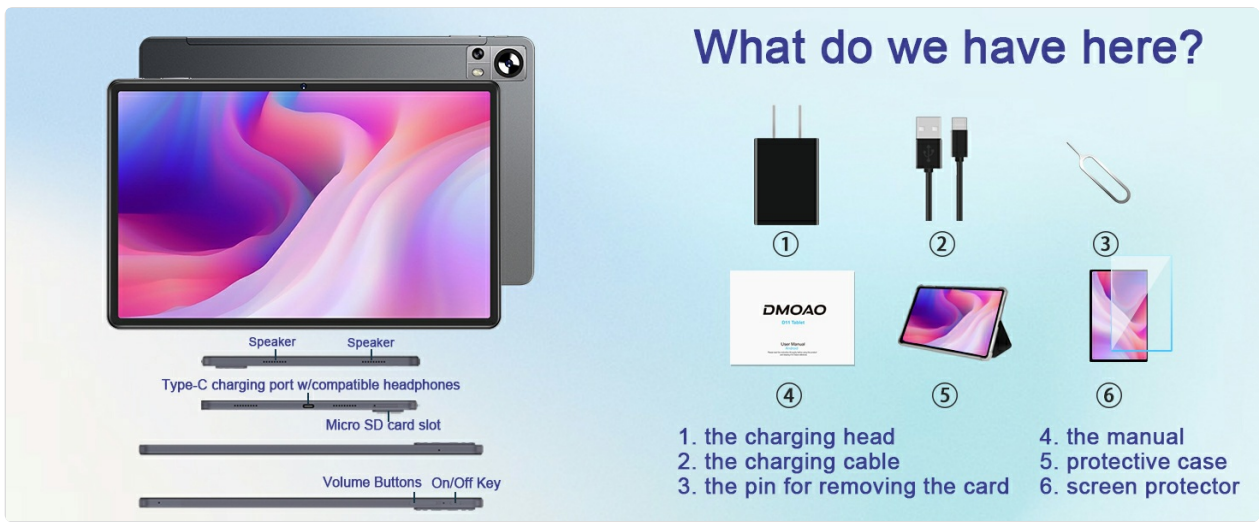


Image: Contents of the DMOAO D11 Tablet package, showing the tablet, protective case, power adapter, Type-C data cable, and user manual.

3. PRODUCT OVERVIEW

Familiarize yourself with the physical components and features of your DMOAO D11 tablet.



Image: Front and back views of the DMOAO D11 tablet, showcasing the 11-inch display and the rear camera setup.

Physical Features

- **Display:** 11-inch 2K FHD (2000x1200 pixels)
- **Cameras:** 13MP Rear Camera, 5MP Front Camera, 2MP Macro Camera
- **Speakers:** Four BOX speakers for enhanced audio
- **Ports:** Type-C charging port, MicroSD card slot
- **Buttons:** Power button, Volume up/down buttons

Your browser does not support the video tag.

Video: An overview of the DMOAO 11-inch Android 13 Tablet, showcasing its design, ports, cameras, and key specifications like battery capacity and storage.

4. SETUP

4.1 Initial Power On

1. Press and hold the Power button located on the side of the tablet until the DMOAO logo appears.
2. Follow the on-screen prompts to select your language, region, and other initial settings.

4.2 Wi-Fi Connection

To connect to the internet:

1. Go to **Settings > Network & internet > Wi-Fi**.
2. Toggle **Wi-Fi On**.
3. Select your desired Wi-Fi network from the list. The D11 supports both 2.4GHz and 5GHz bands.
4. Enter the network password if prompted and tap **Connect**.

4.3 Google Account Setup

A Google account is required to download apps from the Google Play Store and access Google services.

1. During initial setup, you will be prompted to sign in with your Google account or create a new one.
2. Alternatively, go to **Settings > Accounts > Add account > Google**.
3. Follow the on-screen instructions to complete the setup.

4.4 Storage Expansion (MicroSD)

The tablet supports MicroSD cards up to 1TB for expanded storage.

1. Locate the MicroSD card slot on the side of the tablet.
2. Insert the SIM ejector pin into the small hole next to the slot to open the tray.
3. Place the MicroSD card into the tray with the gold contacts facing down.
4. Gently push the tray back into the slot until it clicks into place.

Large-Capacity Storage

16GB RAM

256GB ROM

1TB Expand

16GB



Split Screen

256GB

Image: Visual representation of the DMOAO D11 tablet's storage, highlighting 16GB RAM, 256GB ROM, and the MicroSD card slot for 1TB expansion.

5. OPERATING INSTRUCTIONS

5.1 Basic Navigation

- **Tap:** Select an item or activate a function.
- **Swipe:** Scroll through screens or lists.
- **Pinch:** Zoom in or out on images and web pages.
- **Long Press:** Access contextual menus or move icons.

5.2 Split Screen Functionality

Android 13 allows you to run two applications simultaneously in split-screen mode.

1. Open the first application you wish to use.
2. Swipe up from the bottom of the screen to access the recent apps view.
3. Tap the icon of the first app at the top of its card and select **Split top**.

4. Choose the second application from your recent apps or app drawer to fill the other half of the screen.



Image: The DMOAO D11 tablet utilizing split-screen mode, showing two different applications open simultaneously for enhanced productivity.

5.3 Camera Usage

The tablet is equipped with a 13MP rear camera, a 5MP front camera, and a 2MP macro camera.

1. Open the **Camera** application.
2. Tap the camera switch icon to toggle between front and rear cameras.
3. Select different modes (e.g., Photo, Video, Macro) as needed.
4. Tap the Shutter button to capture photos or start/stop video recording.

Closer and Faster Communication



2.4G+5G WIFI

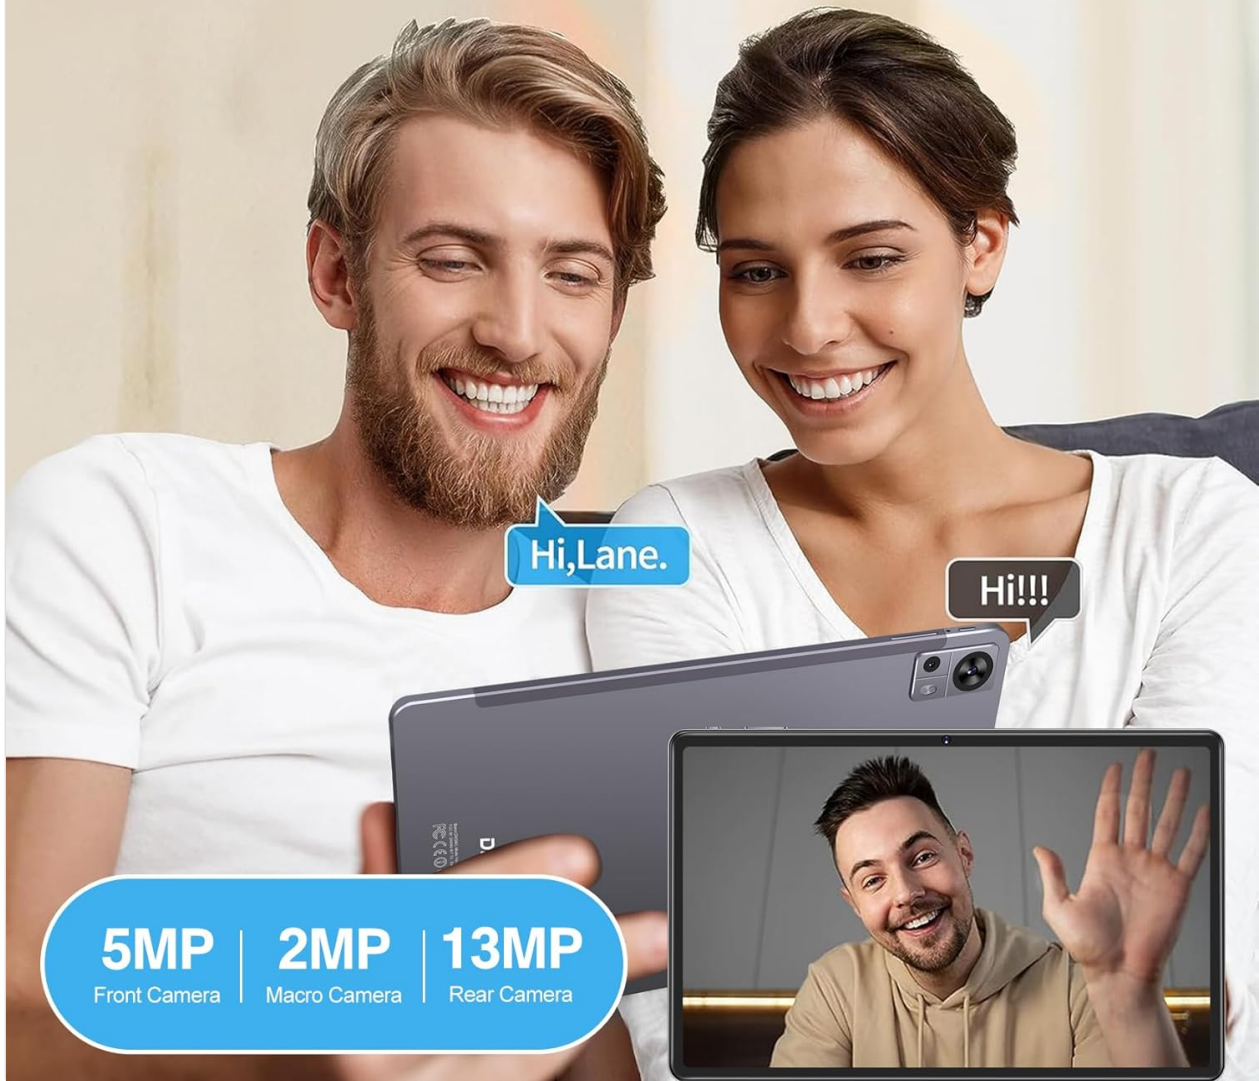


Image: The DMOAO D11 tablet's camera system, detailing the 13MP rear, 5MP front, and 2MP macro lenses, along with sample images.

5.4 Audio (Quad Speakers)

The D11 tablet features four BOX speakers for an immersive audio experience. Adjust volume using the physical volume buttons or through the system settings.

5.5 Wireless Projection

You can wirelessly project your tablet's screen to a compatible display or TV.

1. Ensure your tablet and the target display are connected to the same Wi-Fi network.
2. Go to **Settings > Connected devices > Connection preferences > Cast**.
3. Select the compatible display from the list to begin mirroring your screen.



Image: The DMOAO D11 tablet demonstrating wireless projection, allowing users to view tablet content on a larger external display.

6. MAINTENANCE

6.1 Battery Care

The DMOAO D11 tablet is equipped with an 8600mAh Lithium Polymer battery.

- Avoid fully discharging the battery frequently.
- Charge the tablet using the provided Type-C cable and power adapter.
- Do not expose the tablet to extreme temperatures.

8600mAh Battery & 18W Fast Charging

 **840** Hours Standby

 **8.8** Hours Music

 **7** Hours Web

 **6** Hours Game



Image: The DMOAO D11 tablet connected to its charger, emphasizing its 8600mAh battery and fast charging feature.

6.2 Cleaning

To clean your tablet:

- Use a soft, lint-free cloth to wipe the screen and body.
- For stubborn smudges, slightly dampen the cloth with water or a screen cleaner.
- Avoid using harsh chemicals or abrasive materials.

7. TROUBLESHOOTING

If you encounter issues with your DMOAO D11 tablet, try the following common troubleshooting steps:

- **Tablet not turning on:** Ensure the battery is charged. Connect the tablet to the charger and wait a few minutes before attempting to power it on again.
- **Screen unresponsive:** Restart the tablet by pressing and holding the Power button for about 10-15 seconds.
- **Wi-Fi connection issues:** Check if Wi-Fi is enabled in settings. Restart your Wi-Fi router. Forget the

network and reconnect.

- **Apps crashing:** Clear the cache of the problematic app (Settings > Apps > [App Name] > Storage & cache > Clear cache). If the issue persists, try reinstalling the app.
- **Slow performance:** Close unnecessary background apps. Clear cached data. Consider performing a factory reset as a last resort (back up your data first).

For further assistance, refer to the warranty and support section.

8. SPECIFICATIONS

Key technical specifications for the DMOAO D11 Tablet:

Feature	Specification
Model Name	D11
Operating System	Android 13
Screen Size	11 Inches
Screen Resolution	2000 x 1200 pixels (2K FHD)
Processor	Octa-Core (MediaTek MT8183), 2.0 GHz
RAM	16 GB (8GB + 8GB expansion)
Internal Storage (ROM)	256 GB
Expandable Storage	Up to 1 TB via MicroSD card
Rear Camera	13 MP
Front Camera	5 MP
Macro Camera	2 MP
Battery Capacity	8600 mAh
Wireless Connectivity	802.11ac (2.4G + 5G Wi-Fi), Bluetooth 5.0
Dimensions (LxWxH)	10.23 x 6.38 x 0.27 inches
Item Weight	1.01 pounds (approx. 460g)

9. WARRANTY AND SUPPORT

The DMOAO D11 Tablet comes with a 2-year limited warranty. For warranty claims, technical support, or any inquiries, please contact DMOAO customer service through the platform where you purchased the product or refer to the contact information provided in your product packaging.

