

[Manuals.plus](#) /

› [Pigeon](#) /

› Pigeon Favourite 15024 500 W Juicer Mixer Grinder Instruction Manual

Pigeon 15024

Pigeon Favourite 15024 500 W Juicer Mixer Grinder

Instruction Manual

IMPORTANT SAFEGUARDS

Please read all instructions carefully before using the appliance. Retain this manual for future reference.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the motor unit, cord, or plug in water or any other liquid.
- Always unplug the appliance from the power supply before assembling, disassembling, or cleaning.
- Keep hands and utensils away from moving blades during operation to prevent injury.
- Do not operate the appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- This appliance is for household use only. Do not use outdoors.
- Ensure the lid is securely locked before operating the appliance.
- Do not overload the appliance. Refer to the maximum capacity markings on the jars.
- Allow the motor to cool down for a few minutes after continuous use, especially when processing tough ingredients.

PRODUCT OVERVIEW

The Pigeon Favourite 15024 Juicer Mixer Grinder is designed for efficient blending, grinding, and juicing tasks. It includes a powerful motor unit and multiple jars for various applications.



Image: The Pigeon Favourite 15024 Juicer Mixer Grinder, showcasing the motor unit and the four included jars (juicer, wet grinding, dry grinding, chutney).

Components:

- **Motor Unit:** The main power unit with speed control knob.
- **Juicer Jar:** For extracting juice from fruits and vegetables.
- **Wet Grinding Jar:** For preparing batters and purees.
- **Dry Grinding Jar:** For grinding spices, coffee beans, and other dry ingredients.
- **Chutney Jar:** For small quantities of grinding, such as chutneys and pastes.
- **Lids:** With gaskets for secure sealing.
- **Spatula:** For mixing and scraping ingredients.

SETUP INSTRUCTIONS

1. Unpack all components and remove any packaging materials.

2. Clean all jars, lids, and blades thoroughly with warm soapy water before first use. Rinse and dry completely.
3. Place the motor unit on a stable, flat, and dry surface. Ensure it is away from heat sources and water.
4. Select the appropriate jar for your task. Ensure the blade assembly is securely fitted at the bottom of the jar.
5. Place the jar onto the motor unit, aligning the locking tabs. Turn the jar clockwise until it locks securely into place.
6. Add your ingredients to the jar. Do not exceed the maximum fill line.
7. Place the lid firmly on the jar and ensure it is properly sealed.
8. Plug the power cord into a suitable electrical outlet.

OPERATING INSTRUCTIONS

General Operation:

1. After setup, turn the speed control knob to the desired speed setting (usually 1, 2, or 3).
2. For short bursts of power, use the 'Pulse' function by turning the knob to 'Pulse' and releasing.
3. Do not operate continuously for more than 3-5 minutes. Allow a cooling period of 2-3 minutes between cycles.
4. To stop the appliance, turn the speed control knob to the 'OFF' position.
5. Wait for the blades to stop completely before opening the lid or removing the jar.

Specific Functions:

- **Juicing:** Use the juicer jar. Cut fruits/vegetables into small pieces. Add a small amount of water if necessary. Start at a low speed and gradually increase.
- **Wet Grinding:** Use the wet grinding jar. Add ingredients and a sufficient amount of water. Operate at medium to high speed until desired consistency is achieved.
- **Dry Grinding:** Use the dry grinding jar. Ensure ingredients are completely dry. Use pulse mode for coarse grinding, then switch to continuous operation for finer results.
- **Chutney Grinding:** Use the chutney jar for small quantities. Add ingredients and a minimal amount of liquid. Use pulse mode for better control.

Tip: For optimal performance and to prevent motor strain, process harder ingredients in smaller batches.

MAINTENANCE AND CLEANING

Regular cleaning ensures hygiene and prolongs the life of your appliance.

1. **Always unplug the appliance before cleaning.**
2. **Motor Unit:** Wipe the motor unit with a damp cloth. Do not immerse it in water or rinse it under running water.
3. **Jars and Lids:** Immediately after use, rinse the jars and lids to prevent food from drying on them. Wash with warm soapy water using a soft brush or sponge. Rinse thoroughly and dry completely.
4. **Blades:** Handle blades with extreme care as they are sharp. Clean them carefully with a brush.
5. **Gaskets:** Remove gaskets from the lids and clean them separately. Ensure they are dry before reassembling.
6. **Storage:** Store the appliance and its accessories in a clean, dry place.

TROUBLESHOOTING

If you encounter any issues, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Motor not starting.	Power cord not plugged in; Jar not locked correctly; Overload protection activated.	Check power connection; Ensure jar is securely locked; Unplug, wait 2-3 minutes, reduce load, then restart.
Leakage from jar.	Lid not properly sealed; Gasket missing or damaged; Jar overloaded.	Ensure lid is tightly closed; Check and replace gasket if damaged; Do not exceed max fill line.
Burning smell from motor.	Overloading; Continuous operation for too long.	Reduce load; Allow motor to cool down for at least 15-20 minutes. If smell persists, contact customer support.
Ineffective grinding/blending.	Insufficient liquid; Blades are dull; Ingredients too large.	Add more liquid; Check blades for sharpness (replace if dull); Cut ingredients into smaller pieces.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

- Model:** Pigeon Favourite 15024
- Power:** 500 Watts
- Voltage:** 220 Volts
- Jars:** 4 (Juicer, Wet Grinding, Dry Grinding, Chutney)
- Blade Material:** Stainless Steel
- Special Feature:** Rustproof
- Recommended Uses:** Blending, Grinding, Ice Crush, Juices, Mixing, Pureeing
- Power Source:** Corded Electric
- Material:** Stainless Steel (Jars/Blades)

WARRANTY AND SUPPORT

This product comes with a manufacturer's warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration of the warranty.

For technical assistance, service, or to purchase spare parts, please contact Pigeon customer support. Contact details can typically be found on the warranty card or the official Pigeon website.

When contacting support, please have your product model number (15024) and purchase details ready.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question