

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- > [Beko](#) /
- > [Beko GNO5323XPN Side-by-Side Refrigerator User Manual](#)

## Beko GNO5323XPN

# Beko GNO5323XPN Side-by-Side Refrigerator User Manual

Model: GNO5323XPN | Brand: Beko

## 1. IMPORTANT SAFETY INFORMATION

Please read this manual thoroughly before operating your appliance to ensure safe and efficient use. Keep this manual for future reference.

- Ensure the appliance is properly grounded.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments.
- Unplug the appliance before cleaning or maintenance.
- Keep ventilation openings clear of obstruction.

## 2. PRODUCT OVERVIEW

The Beko GNO5323XPN is a side-by-side refrigerator and freezer combination designed for optimal food storage with advanced features.



Front view of the Beko GNO5323XPN refrigerator, showcasing its sleek stainless steel design and integrated display panel.



Interior view of the refrigerator and freezer compartments, demonstrating the spacious layout and various storage shelves and drawers.

### Key Features:

- Total usable capacity of 532 liters for optimal food storage.
- Timeless stainless steel design.
- Intuitive multifunctional display with sensor buttons for easy temperature and mode adjustments.
- ProSmart Inverter Compressor for efficient and quiet operation.
- No Frost technology to prevent ice build-up.
- Integrated water dispenser.

## 3. SETUP AND INSTALLATION

---

Proper installation is crucial for the performance and longevity of your appliance.


### 3.1 Unpacking

1. Carefully remove all packaging materials, including tape and protective films.
2. Inspect the appliance for any shipping damage. Report any damage immediately to your retailer.
3. Ensure all accessories are present.

### 3.2 Placement

- Place the refrigerator on a flat, stable surface.
- Allow sufficient space around the appliance for proper ventilation (at least 10 cm at the back and sides).
- Avoid direct sunlight and heat sources.

- Ensure the ambient temperature is within the appliance's operating range (SN-ST climate class).

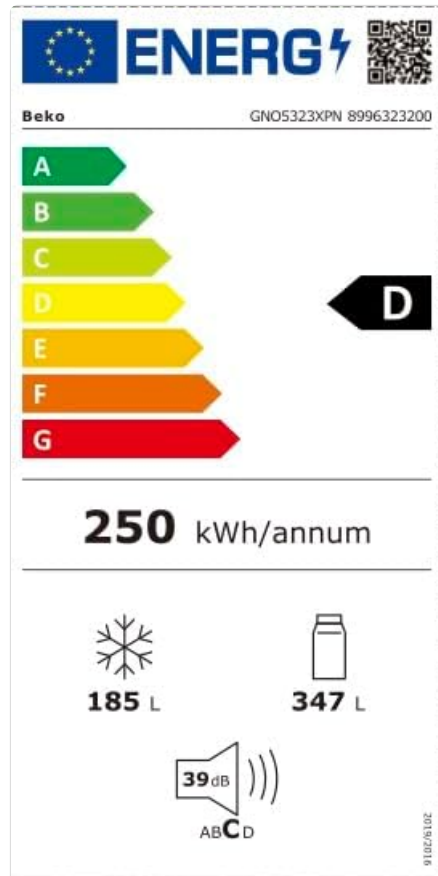

Dimensions of the refrigerator: 177 cm height, 91 cm width, 67 cm depth. Ensure adequate space for installation.

### 3.3 Electrical Connection

- Connect the appliance to a grounded power outlet with the correct voltage (230 Volts).
- Do not use extension cords or adapters.
- Allow the refrigerator to stand upright for at least 2-4 hours before plugging it in to allow refrigerants to settle.

## 4. OPERATING INSTRUCTIONS

This section covers the basic operation of your Beko GNO5323XPN refrigerator.

### 4.1 Initial Startup

1. Plug in the appliance. The internal lights will illuminate, and the display will activate.
2. Set the desired temperature for both the refrigerator and freezer compartments using the external control panel.
3. Allow the appliance to cool down for several hours (at least 4-6 hours) before loading food.

### 4.2 Temperature Control

The intuitive multifunctional display on the door allows precise temperature adjustments.

- Use the **Fridge Temp** button to cycle through available refrigerator temperature settings.
- Use the **Freezer Temp** button to cycle through available freezer temperature settings.
- Recommended refrigerator temperature: 4°C (39°F).
- Recommended freezer temperature: -18°C (0°F).

### 4.3 Water Dispenser Operation

Your refrigerator is equipped with an integrated water dispenser.

1. Fill the internal water tank with potable water.
2. Place a glass or container under the dispenser nozzle.
3. Press the dispenser lever to dispense water.

#### **4.4 No Frost Technology**

The No Frost system automatically prevents ice build-up in both the refrigerator and freezer compartments, eliminating the need for manual defrosting.

### **5. MAINTENANCE AND CLEANING**

---

Regular maintenance ensures optimal performance and extends the lifespan of your appliance.


#### **5.1 General Cleaning**

1. Always unplug the appliance before cleaning.
2. Clean the interior with a soft cloth and a mild detergent solution. Rinse with clean water and dry thoroughly.
3. Clean the exterior with a soft, damp cloth. For stainless steel surfaces, use a specialized stainless steel cleaner.
4. Do not use abrasive cleaners, solvents, or harsh chemicals.

#### **5.2 Condenser Coil Cleaning**

Dust and dirt on the condenser coils can reduce efficiency. Clean them periodically (every 6-12 months).

- Unplug the refrigerator.
- Access the condenser coils (usually at the back or bottom).
- Use a vacuum cleaner with a brush attachment to remove dust and debris.

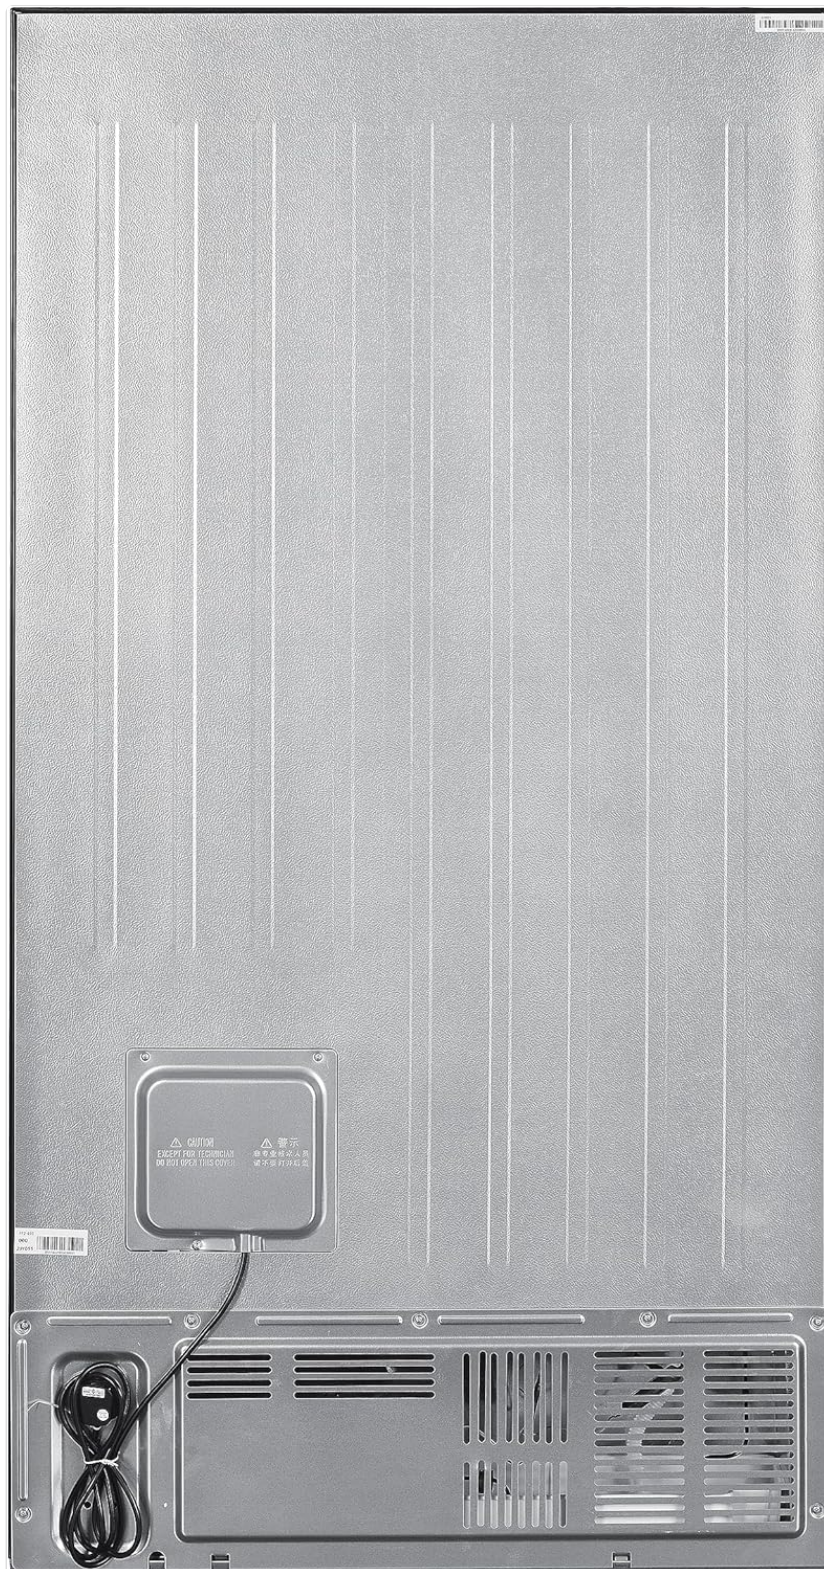

Rear view of the refrigerator, indicating the location of the compressor and condenser coils for maintenance.

### 5.3 Door Seal Maintenance

Check door seals regularly for cracks or tears. Clean them with warm soapy water to ensure a tight seal.

## 6. TROUBLESHOOTING

Before contacting service, refer to this section for common issues and their solutions.

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Refrigerator not cooling	Power supply issue, temperature setting too high, door not closed properly, condenser coils dirty.	Check power plug and circuit breaker. Adjust temperature setting. Ensure door is fully closed. Clean condenser coils.
Unusual noise	Appliance not level, objects touching the back, normal operating sounds.	Level the appliance using adjustable feet. Move objects away from the back. Gurgling/humming sounds are normal.
Water dispenser not working	Water tank empty, dispenser lever stuck.	Refill water tank. Check for obstructions around the lever.
Excessive ice build-up	Door seal faulty, door left open too long.	Check and clean door seals. Ensure door is closed promptly. (Note: No Frost system should prevent this, but severe issues might indicate a fault).

## 7. SPECIFICATIONS

Detailed technical specifications for the Beko GNO5323XPN refrigerator.

Feature	Detail
Model Number	GNO5323XPN
Manufacturer	BEKO
Configuration	Side-by-Side
Total Capacity	532 Liters
Fresh Food Compartment Volume	347 Liters
Freezer Compartment Volume	185 Liters
Dimensions (H x W x D)	177 cm x 91 cm x 67 cm
Weight	89 kg
Energy Efficiency Class	D
Annual Energy Consumption	250 kWh/annum
Noise Emission	39 dB
Defrost System	Automatic (No Frost)
Special Features	ProSmart Inverter Compressor, Water Dispenser
Voltage	230 Volts
Number of Doors	2
Installation Type	Freestanding



Official energy label for the Beko GNO5323XPN, detailing its energy efficiency class, annual consumption, and noise level.

## 8. WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the following:

- **Warranty:** This appliance comes with a standard manufacturer's warranty. Please refer to the warranty card included with your purchase or visit the official Beko website for detailed terms and conditions.
- **Technical Support:** For technical assistance, troubleshooting beyond this manual, or to schedule a service appointment, please contact Beko customer service. Contact details can be found on the Beko official website or in your product documentation.
- **Online Resources:** Visit [www.beko.com](http://www.beko.com) for product registration, FAQs, and additional support materials.