

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [SAMSUNG](#) /

› [Samsung Jet 75E Complete Cordless Stick Vacuum Cleaner VS20B75ACR5/WA User Manual](#)

SAMSUNG VS20B75ACR5/WA

Samsung Jet 75E Complete Cordless Stick Vacuum Cleaner (Model: VS20B75ACR5/WA) - User Manual

INTRODUCTION

Thank you for purchasing the Samsung Jet 75E Complete Cordless Stick Vacuum Cleaner. This appliance is designed to provide efficient and versatile cleaning for your home. This manual contains important information regarding the safe use, operation, and maintenance of your vacuum cleaner. Please read it thoroughly before using the product and keep it for future reference.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow basic safety precautions when using your vacuum cleaner.

- Do not use outdoors or on wet surfaces.
- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with damaged cord or plug. If appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Do not handle plug or appliance with wet hands.
- Do not put any object into openings. Do not use with any opening blocked; keep free of dust, lint, hair, and anything that may reduce airflow.
- Keep hair, loose clothing, fingers, and all parts of body away from openings and moving parts.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.
- Do not pick up toxic material (e.g., chlorine bleach, ammonia cleaner, drain cleaner).
- Do not use without dust bin and/or filters in place.

- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not charge the unit outdoors.
- Use only the charger specified by the manufacturer.

PRODUCT COMPONENTS

The Samsung Jet 75E Complete comes with various components and accessories designed for comprehensive cleaning.



Image showing the Samsung Jet 75E Complete cordless stick vacuum cleaner with its main body, extension pipe, and various cleaning attachments including the Soft Action Brush, Turbo Action Brush, mini motorized tool, combination tool, and crevice tool, along with the accessory cradle.

- **Main Body:** Contains the motor, dustbin, and control panel.
- **Extension Pipe:** Connects the main body to the cleaning head.
- **Soft Action Brush:** Ideal for hard floors, capturing fine dust.
- **Turbo Action Brush:** Designed for carpets and rugs, effectively removing pet hair and embedded dirt.
- **Mini Motorized Tool:** For upholstery, mattresses, and pet hair.
- **Combination Tool:** A versatile tool for dusting and general cleaning.
- **Crevice Tool:** For narrow spaces and corners.
- **Flexible Tool:** Allows for reaching difficult angles.
- **Accessory Cradle:** For convenient storage and charging of accessories.

- **Charging Station:** For recharging the battery.

SETUP AND ASSEMBLY

Follow these steps to assemble your vacuum cleaner before first use.

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Battery Installation:** Insert the battery into the main body until it clicks into place.
3. **Extension Pipe Assembly:** Connect the extension pipe to the main body. Ensure it clicks securely.
4. **Attach Cleaning Head:** Select your desired cleaning head (e.g., Soft Action Brush) and attach it to the end of the extension pipe.
5. **Charging:** Place the vacuum cleaner on its charging station or connect the charger directly to the battery. Ensure the battery is fully charged before first use. The charging indicator will show the charging status.
6. **Accessory Storage:** Utilize the accessory cradle to store additional tools.

OPERATING INSTRUCTIONS

Powering On/Off

- Press the Power button to turn the vacuum cleaner on.
- Press the Power button again to turn it off.

Adjusting Suction Power

- Use the '+' and '-' buttons on the control panel to adjust the suction power.
- Available modes typically include Min, Mid, and Max (Jet Mode).
- The display will indicate the current power level and remaining battery life.

Using Attachments

- **Soft Action Brush:** Best for delicate hard floors like wood or tile.
- **Turbo Action Brush:** Recommended for carpets and rugs to deep clean fibers.
- **Mini Motorized Tool:** Attach directly to the main body for handheld cleaning of upholstery or pet beds.
- **Combination Tool & Crevice Tool:** Use for dusting, cleaning tight spaces, or car interiors.

Battery Runtime

The vacuum cleaner offers up to 60 minutes of runtime on the minimum power setting. Runtime will vary based on the selected power mode and attachment used.

MAINTENANCE AND CLEANING

Regular maintenance ensures optimal performance and extends the lifespan of your vacuum cleaner.

Emptying the Dustbin

- Press the dustbin release button and detach the dustbin from the main body.
- Open the dustbin cover and empty the contents into a waste bin.
- Reattach the dustbin to the main body, ensuring it clicks securely.

Cleaning the Multi-Layer Filtration System

- The multi-layer filter system includes a metal mesh filter, a jet cyclone system, and a fine dust filter.
- Remove the dustbin and separate the internal filter components.
- Tap out loose dust from the metal mesh filter and the jet cyclone system.
- Rinse the washable components (metal mesh filter, jet cyclone system, and fine dust filter) under running water.
- Allow all components to air dry completely for at least 24 hours before reassembling. Do not use a dryer or direct heat.

Cleaning Brushes

- Detach the brush head from the extension pipe.
- Remove any tangled hair or debris from the brush roller using scissors or a cleaning tool.
- For some brush types, the roller may be removable for deeper cleaning. Refer to specific brush instructions.

TROUBLESHOOTING

If you encounter issues with your vacuum cleaner, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery not charged or not properly inserted.	Ensure battery is fully charged and correctly inserted.
Low suction power.	Dustbin full, filter clogged, or blockage in pipe/brush.	Empty dustbin, clean filters, check for and remove blockages.
Brush roller not spinning.	Hair or debris tangled in brush, or brush head not properly attached.	Clean brush roller, ensure brush head is securely attached.
Unusual noise during operation.	Foreign object in brush or pipe, or motor issue.	Turn off and inspect for foreign objects. If noise persists, contact support.

TECHNICAL SPECIFICATIONS

Key technical details for the Samsung Jet 75E Complete Cordless Stick Vacuum Cleaner.

Feature	Specification
Brand	SAMSUNG
Model Number	VS20B75ACR5/WA
Power (Motor)	550 Watts
Voltage	220 Volts
Noise Level	70 Decibels

Feature	Specification
Runtime	Up to 60 minutes (on minimum power)
Filter Type	Multi-layer filter
Surface Recommendation	All floors
Power Source	Battery powered
Cordless	Yes
Item Weight	6.6 Kilograms
Product Dimensions (L x W x H)	75.5 x 26.5 x 25.5 cm
Battery Type	Lithium-ion (1 included)

WARRANTY AND SUPPORT

For warranty information, service, or technical support, please refer to the warranty card included with your product or visit the official Samsung website for your region. Do not attempt to repair the appliance yourself, as this may void your warranty.