

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Soundcore](#) /
- › [Soundcore Motion 300 Bluetooth Speaker User Manual](#)

Soundcore A3135

Soundcore Motion 300 Bluetooth Speaker User Manual

Model: A3135 | Brand: Soundcore

INTRODUCTION

This user manual provides detailed instructions for the Soundcore Motion 300 Bluetooth Speaker. Please read this manual carefully before using your device to ensure proper operation and to maximize its performance. Keep this manual for future reference.

WHAT'S IN THE BOX

- Soundcore Motion 300 Bluetooth Speaker
- Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components and controls of your Soundcore Motion 300 speaker.



Figure 1: Soundcore Motion 300 Bluetooth Speaker. This image shows the speaker's top panel with control buttons and the front grille.

Controls and Indicators:

Power Button: Press and hold to power on/off.

Bluetooth Button: Press to enter pairing mode.

BassUp Button: Activates or deactivates BassUp technology for enhanced bass.

Volume Down Button: Decreases volume.

Multi-function Button: Play/Pause, Answer/End calls, Skip tracks.

Volume Up Button: Increases volume.

USB-C Charging Port: For charging the speaker.

Detachable Strap: For portability and hanging.

SETUP

1. Charging Your Speaker

Before first use, fully charge the speaker. Connect the provided charging cable to the USB-C port on the speaker and to a compatible USB power adapter (not included). The charging indicator will show charging status and turn off when fully charged. A full charge takes approximately 4 hours.

2. Power On/Off

Press and hold the **Power Button** for 2 seconds to turn the speaker on or off.

3. Bluetooth Pairing

1. When powered on, the speaker will automatically enter Bluetooth pairing mode. The Bluetooth indicator will flash blue.
2. Enable Bluetooth on your device (smartphone, tablet, laptop).
3. Select "Soundcore Motion 300" from the list of available devices.
4. Once connected, the Bluetooth indicator will turn solid blue.
5. To pair with another device, press the **Bluetooth Button** to re-enter pairing mode.

4. Soundcore App Installation

For an enhanced experience, download the Soundcore app from your device's app store. The app allows for customizable EQ settings, firmware updates, and other advanced features.

Customizable EQ

Adjust the EQ via the soundcore app to get the sound you love.



Figure 2: Customizable EQ settings available through the Soundcore app. The app provides granular control over audio profiles.

5. True Wireless Stereo (TWS) Pairing

You can pair two Soundcore Motion 300 speakers together for an immersive stereo sound experience.

1. Ensure both Motion 300 speakers are powered on and not connected to any other Bluetooth device.
2. On one speaker (this will be the primary speaker), press and hold the **Bluetooth Button** for 3 seconds until you hear a tone.
3. On the second speaker, press the **Bluetooth Button** once.
4. The speakers will automatically connect to each other. Once connected, the primary speaker's Bluetooth indicator will flash blue, and the secondary speaker's indicator will turn solid blue.
5. Connect your device to the primary speaker via Bluetooth.

Supports TWS Pairing

Pair up two Motion 300 speakers for an immersive surround-sound experience.



Figure 3: Two Soundcore Motion 300 speakers used in True Wireless Stereo (TWS) mode, providing a wider soundstage.

OPERATING INSTRUCTIONS

Basic Controls

Button	Action	Function
--------	--------	----------

Button	Action	Function
Power Button	Press and hold for 2 seconds	Power On/Off
Bluetooth Button	Press once	Enter Bluetooth pairing mode
BassUp Button	Press once	Toggle BassUp On/Off
Volume -	Press once	Decrease volume
Multi-function Button	Press once	Play/Pause
Multi-function Button	Press twice	Next track
Multi-function Button	Press three times	Previous track
Multi-function Button	Press once (incoming call)	Answer/End call
Multi-function Button	Press and hold for 2 seconds (incoming call)	Reject call
Volume +	Press once	Increase volume

BassUp Technology

The Motion 300 features BassUp technology to enhance low frequencies for a deeper, richer bass experience. Press the **BassUp Button** to activate or deactivate this feature according to your preference.

BassUp Technology

Pump up the bass with the push of a button.



Figure 4: BassUp Technology in action, providing enhanced bass output.

SmartTune Technology / 3-Mode Adaptive EQ

The speaker's exclusive SmartTune technology automatically adjusts the sound profile based on its orientation (hanging, lying flat, or standing) to deliver optimized audio. This adaptive EQ ensures the best listening experience in any scenario.

3-Mode Adaptive EQ

A built-in sensor detects changes in the speaker's orientation and adjusts the EQ to improve your listening experience. So whether the speaker is hanging, lying flat, or standing, you always get the best sound.

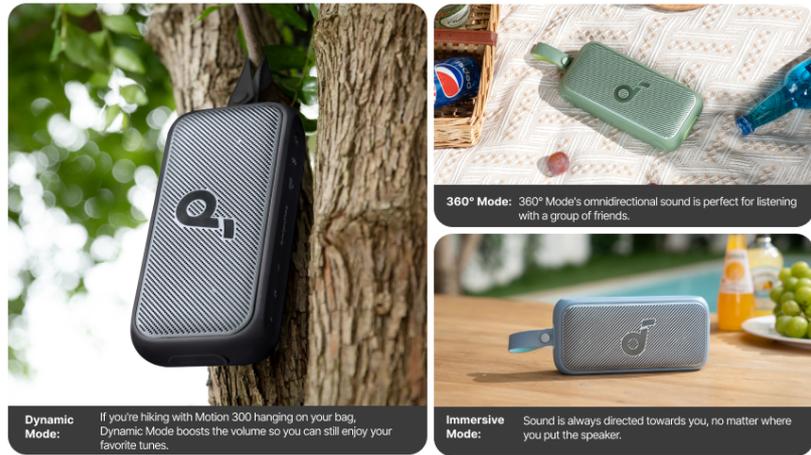


Figure 5: The speaker's 3-Mode Adaptive EQ adjusts sound based on its physical orientation.

Wireless Hi-Res Sound (LDAC)

The Motion 300 supports Wireless Hi-Res Audio, utilizing the LDAC Bluetooth codec. This allows for the transmission of approximately three times more data than standard SBC codecs, resulting in superior sound quality and detail.

Enjoy Wireless Hi-Res Certified Sound

40kHz sound lets you hear every detail*.



*Compare with sbc codec.

Figure 6: Experience high-fidelity audio with Wireless Hi-Res Sound.

IPX7 Waterproof Rating

The Soundcore Motion 300 is designed with an IPX7 waterproof rating, meaning it can be submerged in up to 1 meter of water for 30 minutes. This makes it suitable for use by the pool, at the beach, or in the shower. Ensure the charging port cover is securely closed before exposure to water.

Outdoor Ready

Rugged and durable with IPX7 waterproof protection.



Figure 7: The speaker's IPX7 rating allows for use in wet environments.

Detachable Strap

The speaker features a convenient detachable strap, allowing you to easily attach it to a backpack, hang it from a tree, or carry it with ease during travel and outdoor activities.



Detachable Strap

Attach Motion 300 to your backpack to keep listening on the move, or hang from a tree to enjoy music while you're camping out.

Figure 8: The detachable strap enhances portability and versatility.

Battery Life

The Soundcore Motion 300 provides up to 13 hours of playtime on a single charge. Actual battery life may vary based on volume level, audio content, EQ settings, and environmental conditions.

13H Battery Life

Listen all day on a single charge.



Note: Playback time tested at 40% volume with Balanced EQ in the Anker laboratory. Actual playtime may vary due to volume, audio source, EQ, and environmental conditions.

Figure 9: Enjoy extended listening sessions with the speaker's long battery life.

MAINTENANCE

Cleaning

Wipe the speaker with a soft, damp cloth. Do not use any corrosive cleaners or chemicals. Ensure the charging port is dry before charging.

Storage

Store the speaker in a cool, dry place away from extreme temperatures and direct sunlight. If storing for an extended period, charge the battery every 3 months to maintain its lifespan.

Battery Care

To prolong battery life, avoid fully discharging the battery frequently. It is recommended to charge the speaker before the battery is completely depleted.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on	Low battery	Charge the speaker fully.
Cannot pair with Bluetooth device	Speaker not in pairing mode; Device Bluetooth off; Speaker already connected to another device	Press the Bluetooth button to enter pairing mode. Ensure Bluetooth is enabled on your device. Disconnect from other devices.
No sound	Volume too low; Device not connected; Audio source paused	Increase volume on speaker and device. Ensure speaker is connected. Check audio playback on your device.
Poor sound quality	Interference; Distance from device; Low battery	Move speaker closer to device. Avoid obstacles. Charge speaker.
TWS pairing fails	Speakers already connected to other devices; Incorrect pairing steps	Ensure both speakers are disconnected from other devices. Follow TWS pairing instructions carefully.

SPECIFICATIONS

Feature	Detail
Model Name	A3135
Speaker Type	Portable Speaker
Connectivity Technology	Bluetooth 5.3
Audio Output Mode	Stereo
Speaker Maximum Output Power	30 Watts
Frequency Response	65 Hz
Battery Life	13 Hours
Charging Time	4 Hours
Water Resistance Level	IPX7 Waterproof
Bluetooth Range	100 Meters
Dimensions (L x W x H)	7.87"D x 3.64"W x 1.97"H
Item Weight	1.71 Pounds

Feature	Detail
Material	PC+ABS
Included Components	Speaker



Figure 10: Physical dimensions of the Soundcore Motion 300 speaker.

WARRANTY AND SUPPORT

Soundcore products come with a limited warranty. For detailed warranty information, product registration, and technical support, please visit the official Soundcore website or contact their customer service. The official user manual in PDF format can also be found [here](#).

For further assistance, you may also refer to the Soundcore store on Amazon. [Soundcore Store](#).