

Farpoint Farpoint-360-1000Lumens

Rechargeable 360 1000 Lumens Lantern User Manual

Model: Farpoint-360-1000Lumens

INTRODUCTION

The Farpoint Rechargeable 1,000 Lumen Emergency Lantern is designed for versatile illumination in various settings, including outdoor activities, camping, and emergency situations. It features a 360° COB LED design for comprehensive lighting and offers five selectable lighting modes. Constructed to be weather and impact-resistant, this lantern is durable for demanding environments. Its internal 1200mAh battery provides up to 9 hours of light and can also function as a power bank to charge mobile phones and other devices via its integrated USB and USB-C ports. For convenience, it includes a carrying handle and a folding hanging hook. A USB to USB-C charging cable is supplied and can be stored within the unit's base.



Figure 1: Front view of the Farpoint Rechargeable 1000 Lumens Lantern, showcasing its green and black design with the power button visible.

WHAT'S IN THE BOX

Please check the package contents to ensure all items are present and in good condition.

- 1 x Farpoint Rechargeable 360 1000 Lumens Lantern Unit
- 1 x USB to USB-C Charging Cable (approx. 19 inches long)
- Internal 1200mAh Lithium-Ion Battery (pre-installed)

SETUP

Initial Charging

Before first use, it is recommended to fully charge the lantern's internal battery. This ensures optimal performance and battery longevity.

1. Locate the USB and USB-C charging ports on the lantern. The charging cable is stored in the base of the unit.
2. Connect the smaller end of the included USB to USB-C charging cable to the USB-C input port on the lantern.
3. Connect the standard USB-A end of the cable to a compatible USB power source (e.g., wall adapter, computer USB port, power bank).
4. The charging indicator light (if present) will illuminate to show charging is in progress. Refer to the lantern's specific indicator behavior for full charge notification.
5. Once fully charged, disconnect the charging cable.

Note: The lantern's internal 1200mAh Lithium-Ion battery is designed for long-lasting power. Regular charging helps maintain its health.

OPERATING INSTRUCTIONS

Powering On/Off and Light Modes

The lantern features a single power button to control its functions.

1. **To Power On:** Press the power button once. The lantern will typically turn on in its default mode (e.g., High).
2. **To Cycle Through Modes:** Press the power button repeatedly to cycle through the available lighting modes:
 - **High (1,000 lumens):** Maximum brightness for extensive illumination. Run time: 3 hours.
 - **Medium (300 lumens):** Balanced brightness for general use. Run time: 6 hours.
 - **Low (100 lumens):** Energy-efficient light for extended use. Run time: 9 hours.
 - **Night Light (100 lumens):** A softer, warm white light ideal for ambient illumination. Run time: 9 hours.
 - **Dimming:** Allows for continuous adjustment of brightness from high to low.
3. **To Power Off:** Continue pressing the power button until the lantern turns off, or press and hold the button for a few seconds from any mode.



Figure 2: Illustration of the lantern's five beam settings and their respective lumen outputs and maximum run times. Note: Run times in this diagram may vary slightly from product description due to testing conditions.

Power Bank Functionality

The lantern can be used to charge other small electronic devices, such as cell phones, using its USB output port.

1. Ensure the lantern has sufficient charge.
2. Connect your device's charging cable to the USB-A output port on the lantern.
3. Connect the other end of your device's charging cable to your device.
4. Charging should begin automatically.

Note: Using the power bank feature will consume the lantern's battery, reducing its illumination run time.

Carrying and Hanging

The lantern is equipped with a convenient carrying handle for portability and a folding hanging hook for versatile placement.

- Use the sturdy top handle for easy transport.

- Unfold the integrated hook from the base of the handle to hang the lantern from tents, branches, or other suitable fixtures.

MAINTENANCE

Cleaning

To maintain the appearance and functionality of your lantern:

- Wipe the exterior of the lantern with a soft, damp cloth.
- Do not use abrasive cleaners or solvents, as these may damage the finish or internal components.
- Ensure all ports are dry before charging or using the power bank function.

Storage

When not in use for extended periods:

- Store the lantern in a cool, dry place, away from direct sunlight and extreme temperatures.
- It is advisable to charge the battery every 3-6 months to prevent deep discharge and prolong battery life.

TROUBLESHOOTING

If you encounter issues with your lantern, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Lantern does not turn on or light is dim.	Low battery charge.	Charge the lantern fully using the provided USB-C cable.
Lantern does not charge.	Charging cable or power source issue; cable not fully inserted.	Ensure the USB-C cable is securely connected to both the lantern and the power source. Try a different USB power source or cable if available.
Cannot charge external devices (power bank function).	Lantern battery is too low; incorrect cable or port used.	Ensure the lantern is sufficiently charged. Use the correct USB-A output port and a compatible charging cable for your device.
Lantern is not rechargeable (contrary to description).	Misunderstanding of features; missing charging cable.	This model is designed to be rechargeable. Verify that the USB to USB-C charging cable is present and correctly used. The cable is stored in the base of the unit. If the cable is missing, contact customer support.

SPECIFICATIONS

Product Dimensions	3.75"L x 3.75"W x 7"H
Weight	Less than 1 lb
Battery Type	Internal 1200mAh Lithium-Ion
Brightness	Up to 1000 lumens

Light Modes	High (1000lm), Medium (300lm), Low (100lm), Night Light (100lm), Dimming
Run Time (Max)	High: 3 hours, Medium: 6 hours, Low/Night Light: 9 hours
Water Resistance Level	IPX4 Rated Splashproof
Mounting Type	Tabletop Mount, Hanging Hook
Material	Plastic
Color	Green (also available in Orange)
Model Number	Farpoint-360-1000Lumens
UPC	845181021112
Manufacturer	Farpoint



Figure 3: The Farpoint lantern is available in multiple colors, including green and orange, as shown here.

WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the contact details provided on the product packaging or visit the manufacturer's official website. As specific warranty terms are not provided in this manual, please retain your proof of purchase for any warranty claims.

© 2024 Farpoint. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question