

tectake NSBK-150SK37

tectake 1500W Portable Electric Space Heater User Manual

Model: NSBK-150SK37

INTRODUCTION

This user manual provides essential information for the safe and efficient operation of your tectake 1500W Portable Electric Space Heater. Designed for versatile use in various indoor and outdoor settings such as patios, greenhouses, garages, bedrooms, and offices, this heater features PTC ceramic heating technology, 120° oscillation, and multiple safety protections. Please read this manual thoroughly before use and retain it for future reference.

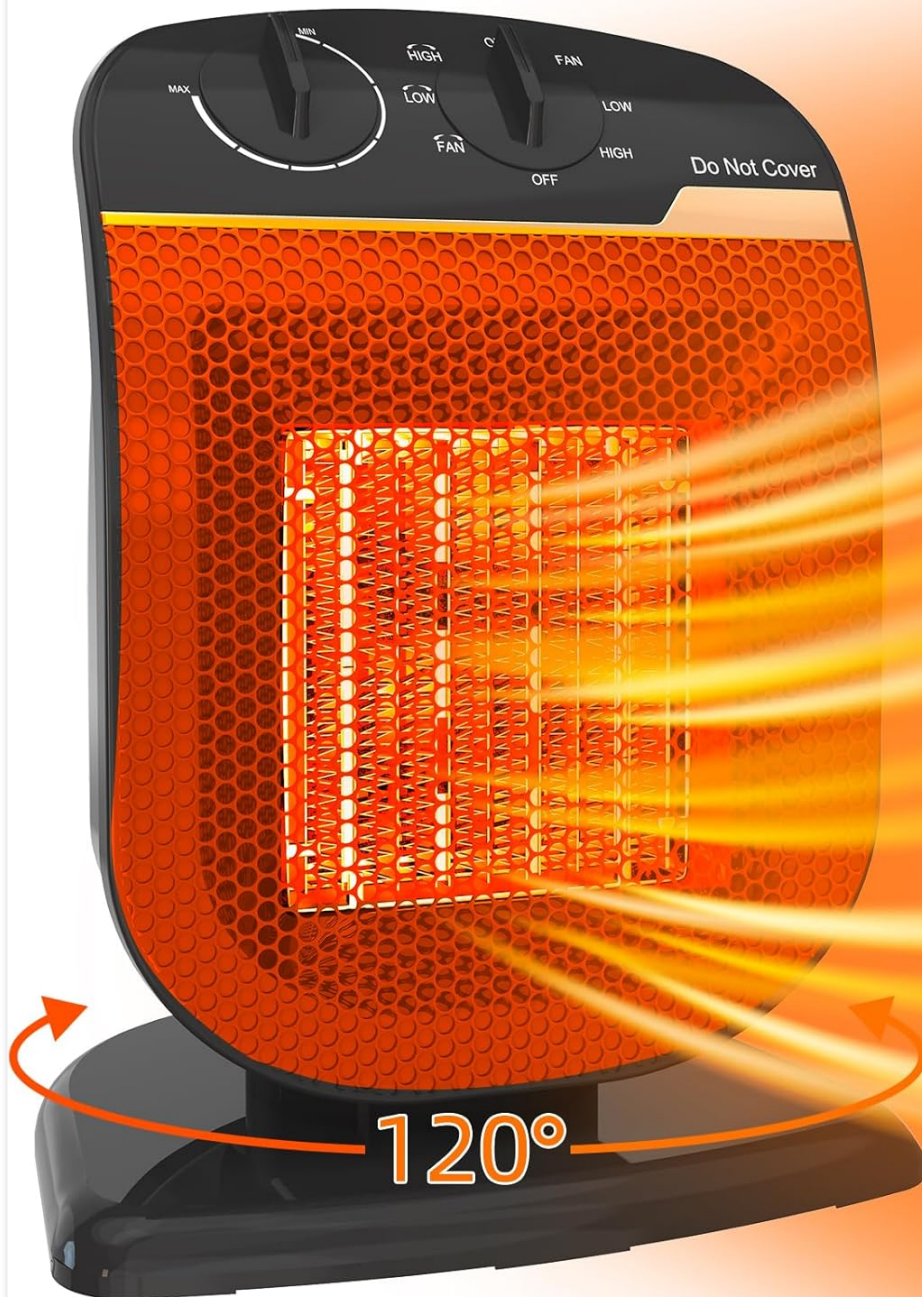 


Figure 1: tectake 1500W Portable Electric Space Heater.

IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury, always follow these basic precautions:

- Read all instructions before using this heater.
- Do not use this heater in bathrooms, laundry areas, or similar indoor locations where it may come into contact with water.
- Always unplug the heater when not in use.
- Do not operate any heater with a damaged cord or plug, or after the heater malfunctions or has been dropped or damaged in any manner.
- Keep combustible materials, such as furniture, pillows, bedding, papers, clothes, and curtains at least 3 feet (0.9 m) from the front of the heater and away from the sides and rear.

- To prevent a possible fire, do not block air intakes or exhaust in any manner. Do not use on soft surfaces, like a bed, where openings may become blocked.
- Do not insert or allow foreign objects to enter any ventilation or exhaust opening as this may cause an electric shock or fire, or damage the heater.
- This heater is equipped with an **Overheat Protection** feature that automatically cuts off power if the internal temperature reaches 167°F (75°C). The heater will resume operation once it cools down.
- The heater also includes a **Tip-over Protection** switch, which automatically shuts off the unit if it is accidentally knocked over. Ensure the heater is placed on a stable, flat surface.

TIP-OVER PROTECTION

Once the heater is knocked over the machine will automatically shut down

OFF

 


2 SAFETY PROTECTION FUNCTION

OVERHEATED PROTECTION

Automatic power off when over 167°F

OFF

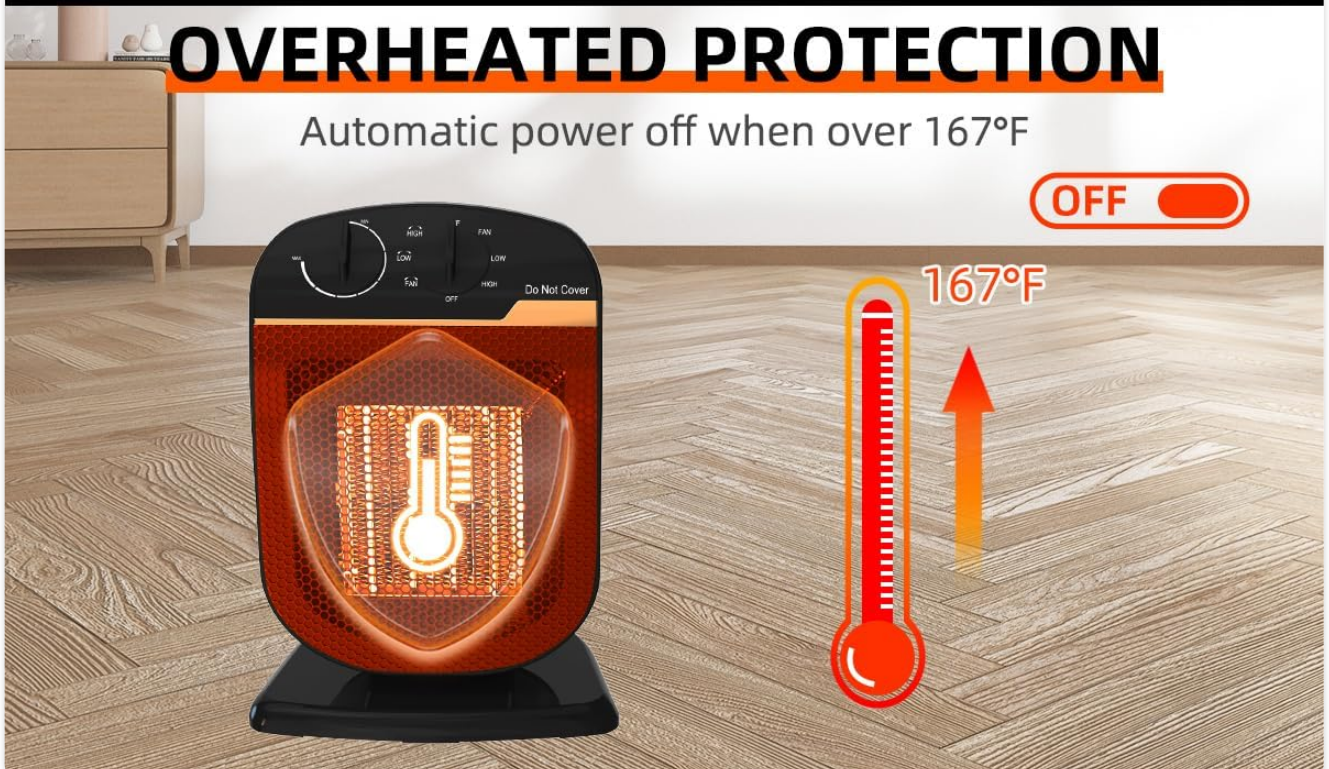

PRODUCT FEATURES

- **Powerful PTC Ceramic Heating:** Utilizes advanced PTC ceramic heating technology for rapid and efficient heating. Heats up to 200 square feet quickly.
- **3-Second Rapid Heating:** Experience immediate warmth with a quick 3-second heat-up time.
- **120° Oscillation Function:** Distributes heat evenly across a wide area, ensuring comprehensive warmth.
- **Three Operating Modes:**
 - Fan Only Mode (Natural Wind)
 - Low Heat Mode (750W)
 - High Heat Mode (1500W)
- **Quiet Operation:** Operates at less than 40 decibels, providing a peaceful environment for work, sleep, or relaxation.
- **Portable Design:** Equipped with a convenient carry handle and compact dimensions (8"D x 7"W x 11"H) for easy relocation. Weighs approximately 4 pounds.
- **Long Power Cord:** Features a 6ft long power cord for flexible placement.

3S FAST HEATING

12

Heating Plates

1500W

PTC Ceramic Heating



Figure 3: Fast heating capability with PTC ceramic technology.

120° WIDESPREAD OSCILLATION



Figure 4: 120-degree widespread oscillation.



Figure 5: Three distinct operating modes.



ESSENTIAL FEATURES

- ① Portable Handle
- ② Tip-Over Protection
- ③ 6ft Power Cord



Figure 6: Key physical features of the heater.

LOW NOISE OPERATION

Enjoy your warming time quietly

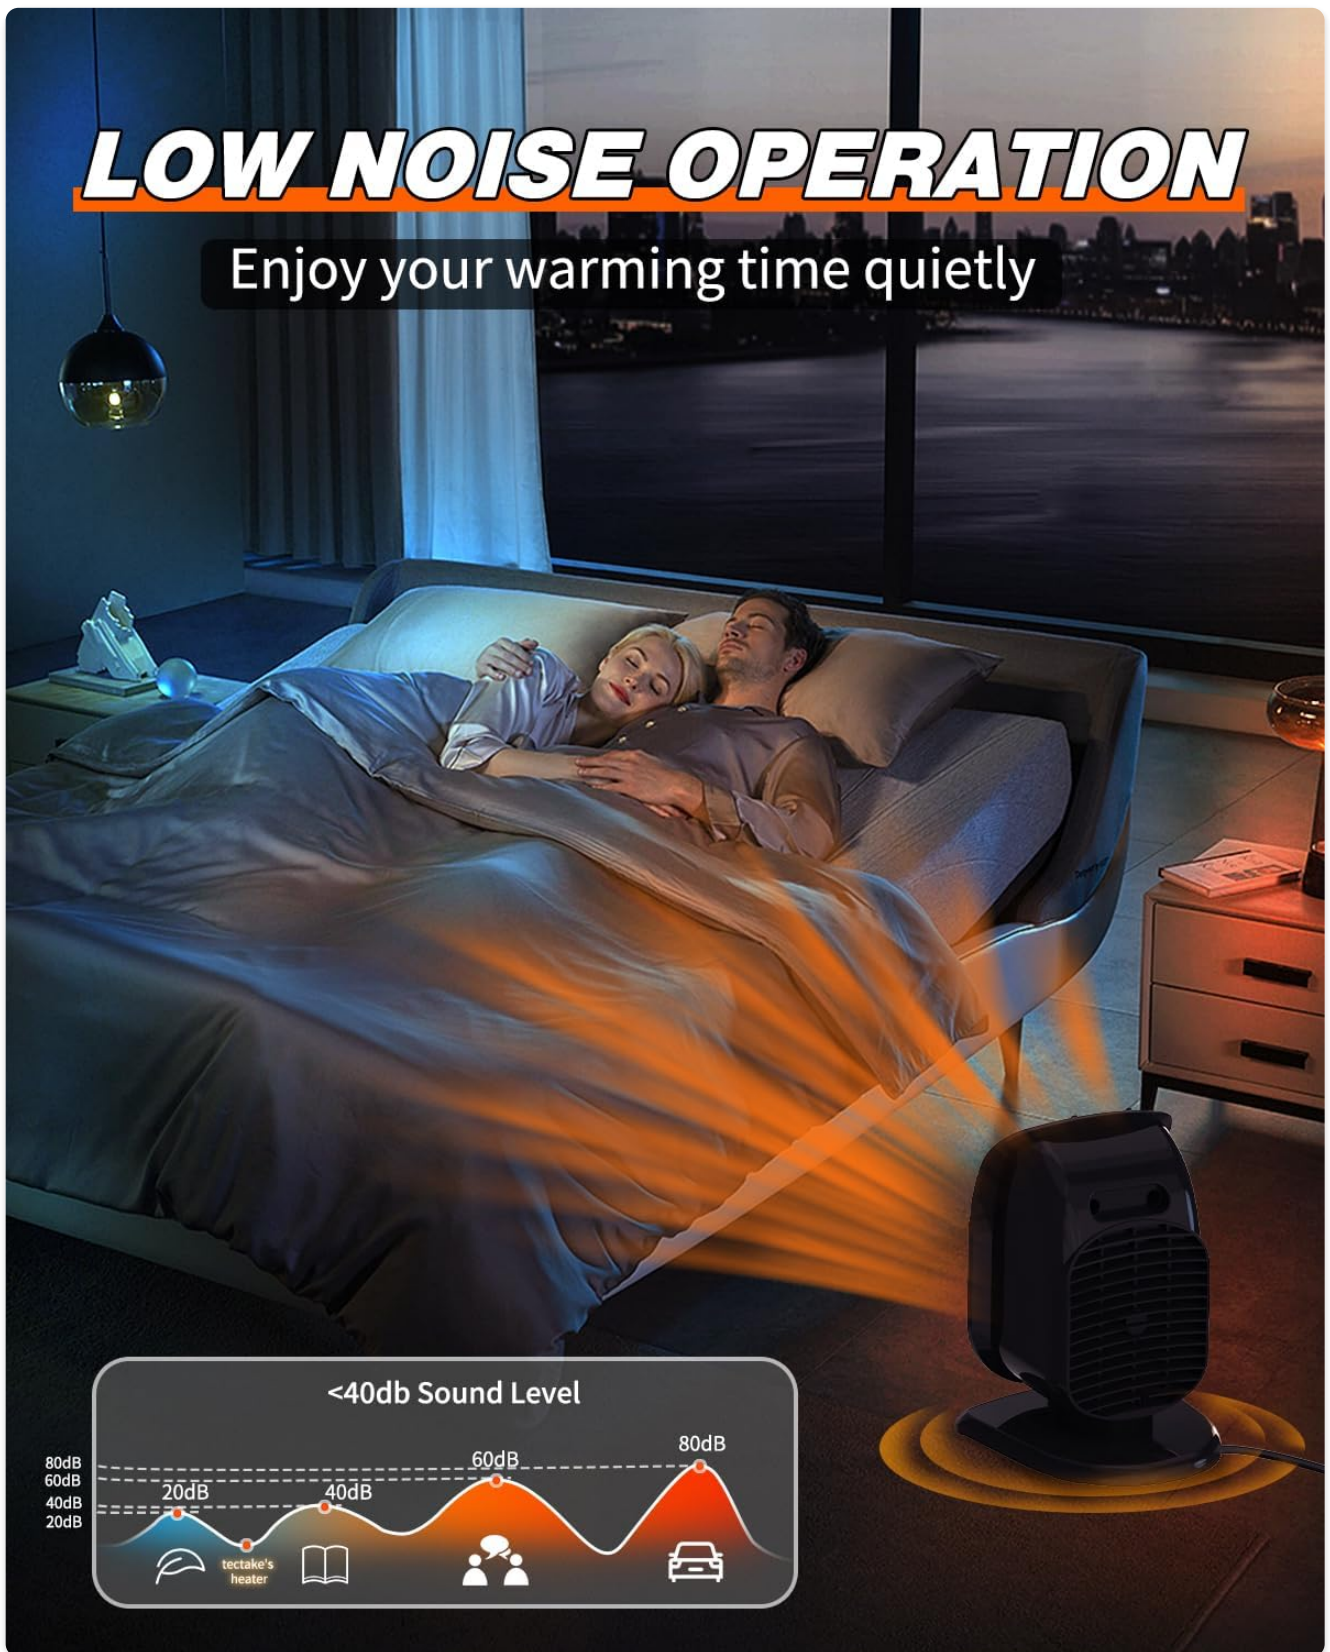 


Figure 7: Low noise operation for undisturbed comfort.

SETUP

1. Unpack the heater and all accessories from the box.
2. Place the heater on a firm, level surface. Ensure there are no obstructions to the air intake or exhaust vents.
3. Ensure the heater is at least 3 feet (0.9 meters) away from walls, furniture, curtains, and other combustible

materials.

4. Plug the power cord into a standard 120V AC electrical outlet. Do not use extension cords or power strips with this heater.

OPERATING INSTRUCTIONS

Your tectake space heater features two rotary knobs for easy control:

1. Power/Mode Selection Knob (Right Knob):

- Turn to **OFF** to power off the unit.
- Turn to **FAN** for natural wind circulation without heat.
- Turn to **LOW** for 750W low heat output.
- Turn to **HIGH** for 1500W high heat output.

2. Thermostat/Oscillation Knob (Left Knob):

- Adjust the thermostat from **MIN** to **MAX** to set your desired room temperature. The heater will cycle on and off to maintain this temperature.
- To activate the 120° oscillation function, ensure the heater is powered on and then turn the thermostat knob to the desired setting. The oscillation will begin automatically.



Figure 8: Rotary knob controls for mode and temperature.

Your browser does not support the video tag.

Video 1: Demonstration of the heater's features, including portability, rotary knob controls for fan, low, and high heat settings, 120-degree oscillation, tip-over protection, and overheat protection.

MAINTENANCE

Proper maintenance ensures the longevity and safe operation of your heater.

- **Cleaning:** Always unplug the heater from the wall outlet before cleaning. Use a soft, damp cloth to wipe the exterior surfaces of the heater. Do not use cleaning sprays, abrasive cleaners, or polishes as they may damage the heater.
- **Storage:** When storing the heater, keep it in a cool, dry location. It is recommended to store it in its original packaging to protect it from dust and damage.
- **No User-Serviceable Parts:** This heater contains no user-serviceable parts. Do not attempt to open or repair

the unit yourself. Refer all servicing to qualified service personnel.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Heater does not operate.	Not plugged in securely. Power outlet not functioning. Tip-over switch activated. Overheat protection activated. Thermostat set too low.	Ensure the power cord is firmly plugged into a working 120V AC outlet. Check the circuit breaker or try another outlet. Place the heater on a firm, level surface. Unplug the heater, wait 10-15 minutes for it to cool down, then plug it back in. Turn the thermostat knob to a higher setting.
Heater stops operating unexpectedly.	Overheat protection activated. Tip-over switch activated.	Unplug the heater, wait 10-15 minutes for it to cool down, then plug it back in. Ensure vents are not blocked. Ensure the heater is upright and on a stable surface.
Heater produces a burning smell.	New unit or dust accumulation.	This is normal for new heaters and should dissipate quickly. If the smell persists or is strong, unplug the unit and contact customer support. Ensure the heater is clean and free of dust.

SPECIFICATIONS

Brand	tectake
Model Number	NSBK-150SK37
Special Feature	Lightweight, Noiseless, Overheat Protection
Color	Dark Black
Indoor/Outdoor Usage	Indoor and Outdoor (suitable for patios, greenhouses, garages, bedrooms, offices)

Product Dimensions	8"D x 7"W x 11"H
Heating Coverage	200 sq.ft
Fuel Type	Electric
Voltage	120 Volts (AC)
Item Weight	4 pounds

 
 

WARRANTY AND SUPPORT


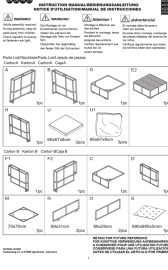 

tectake provides a 1-year warranty service for this product from the date of purchase. For warranty claims, technical support, or any inquiries regarding your heater, please contact tectake customer service through the retailer's platform or the official tectake website.

Please have your model number (NSBK-150SK37) and purchase information ready when contacting support.

© 2023 tectake. All rights reserved.

Related Documents - NSBK-150SK37

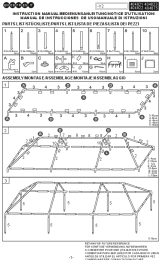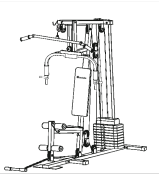	<p>tectake Gazebo Instruction Manual - Assembly Guide</p> <p>Comprehensive instruction manual for assembling and maintaining your tectake gazebo. Includes parts list, step-by-step assembly, location advice, care instructions, and contact information.</p>
	<p>TecTake 402756 Home Gym Assembly and Exercise Guide</p> <p>Instruction manual for the TecTake 402756 home gym, covering assembly, safety precautions, and exercise guidance. Includes preparation tips and warm-up/cool-down routines.</p>
	<p>TecTake 400777 Semi-Automatic Washing Machine User Manual and Instructions</p> <p>This user manual provides comprehensive instructions for the TecTake 400777 semi-automatic washing machine, covering installation, operation, safety guidelines, and maintenance. Learn how to effectively wash and spin your clothes with this efficient appliance.</p>

 <p>The cover page of the Tectake Electric Fireplace Operating Manual & Safety Guide (Model 406277) features a central image of the fireplace unit. Above the image, the text reads 'ELECTRIC FIREPLACE' and 'IMPORTANT INSTRUCTIONS & OPERATING MANUAL'. Below the image, there are several icons including a warning symbol, a CE mark, and a recycling symbol. A 'WARNING' section is visible at the bottom left, and a 'CAUTION' section is at the bottom right. The page number '1' is at the bottom center.</p>	<p>tectake Electric Fireplace: Operating Manual & Safety Guide (Model 406277)</p> <p>Comprehensive operating manual for the tectake electric fireplace (model 406277). This guide covers essential safety information, detailed operating instructions, smart app connectivity via Tuya Smart, maintenance, and technical specifications for safe and efficient use.</p>
 <p>The cover page of the TecTake Rattan Garden Furniture Assembly Instructions features a grid of small images showing various pieces of furniture being assembled. The text at the top reads 'ASSEMBLY INSTRUCTIONS' and 'MODELS 403696, 403697, 403880, 403881'. The page number '1' is at the bottom center.</p>	<p>TecTake Rattan Garden Furniture Assembly Instructions</p> <p>Comprehensive assembly instructions for TecTake rattan garden furniture sets, including a detailed parts list and step-by-step visual guidance. Model numbers: 403696, 403697, 403880, 403881.</p>
 <p>The cover page of the Roller Blind Installation Manual features a grid of small images showing the steps of blind installation. The text at the top reads 'ROLLER BLIND INSTALLATION' and 'MODELS 403696, 403697, 403880, 403881'. The page number '1' is at the bottom center.</p>	<p>Roller Blind Installation Manual</p> <p>Comprehensive instruction manual for the installation of a roller blind, including parts list, assembly steps, and contact information for tectake.</p>