

COOPERS CP20PRO

COOPERS CP20PRO Android 15 Tablet User Manual

Model: CP20PRO

INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your COOPERS CP20PRO Android 15 Tablet. Please read this manual thoroughly to ensure proper use and to maximize the performance and longevity of your device. Keep this manual for future reference.

WHAT'S IN THE BOX

Upon unboxing, verify that all the following items are included:

- COOPERS CP20PRO Android 15 Tablet
- Protective Case
- Wireless Keyboard
- Wireless Mouse
- Stylus
- Type-C Cable (for charging and data transfer)



Image: COOPERS CP20PRO Tablet and its complete accessory kit.

SETUP

1. Initial Charging

Before first use, fully charge your tablet. Connect the provided Type-C cable to the tablet's charging port and the other end to a compatible USB power adapter (not included) or a computer's USB port. The charging indicator will show the charging status.



Image: Tablet charging via the unified Type-C port. A full charge typically takes 2-3 hours.

2. Power On/Off

- **To Power On:** Press and hold the Power button located on the side of the tablet until the screen illuminates.
- **To Power Off:** Press and hold the Power button, then select 'Power off' from the options that appear on the screen.
- **To Restart:** Press and hold the Power button, then select 'Restart' from the options.

3. Connecting Accessories (Keyboard, Mouse, Stylus)

The COOPERS CP20PRO tablet supports Bluetooth connectivity for its wireless keyboard, mouse, and stylus.

1. **Enable Bluetooth on Tablet:** Go to **Settings > Connected devices > Bluetooth** and toggle Bluetooth ON.
2. **Pairing the Mouse:**
 - a. Turn on the switch button at the bottom of the wireless mouse.
 - b. The mouse will enter pairing mode (indicator light may flash).
 - c. On your tablet, search for available Bluetooth devices and select the mouse to pair.
3. **Pairing the Keyboard:**
 - a. Turn on the keyboard's power switch (usually on the side or back).
 - b. Press the Bluetooth connection button on the keyboard (often labeled 'Connect' or a Bluetooth icon).
 - c. On your tablet, search for available Bluetooth devices and select the keyboard to pair.
4. **Pairing the Stylus:** The stylus typically connects automatically when powered on and Bluetooth is active on the tablet, or it may require a similar pairing process as the mouse/keyboard if it has a dedicated Bluetooth button.



Image: Step-by-step guide for connecting the wireless mouse and keyboard via Bluetooth.

OPERATING INSTRUCTIONS

1. Android 15 Operating System

Your COOPERS CP20PRO tablet runs on the Android 15 operating system, providing a user-friendly interface and access to a wide range of applications. The tablet is GMS certified, allowing full access to the Google Play Store for downloading apps like Netflix, TikTok, Facebook, and more.

GMS certified with stable and smooth service and many your favourite apps


Android™ 15


1280*800


2.0/8.0MP


18GB RAM


128GB ROM


2.4G+5G+WIFI6



Image: Tablet interface showing GMS certified applications and Google Play Store access.

2. Display and Visuals

The tablet features a 10.1-inch IPS HD display with a resolution of 1280x800 pixels. This display technology offers wide viewing angles and vibrant colors. An integrated eye protection mode helps reduce eye strain during extended use.

10.1 " FHD Large screen

Clear

10 inch HD Screen

Comfortable

The resolution color of 1280*800 is delicate and gives you an immersion visual experience.

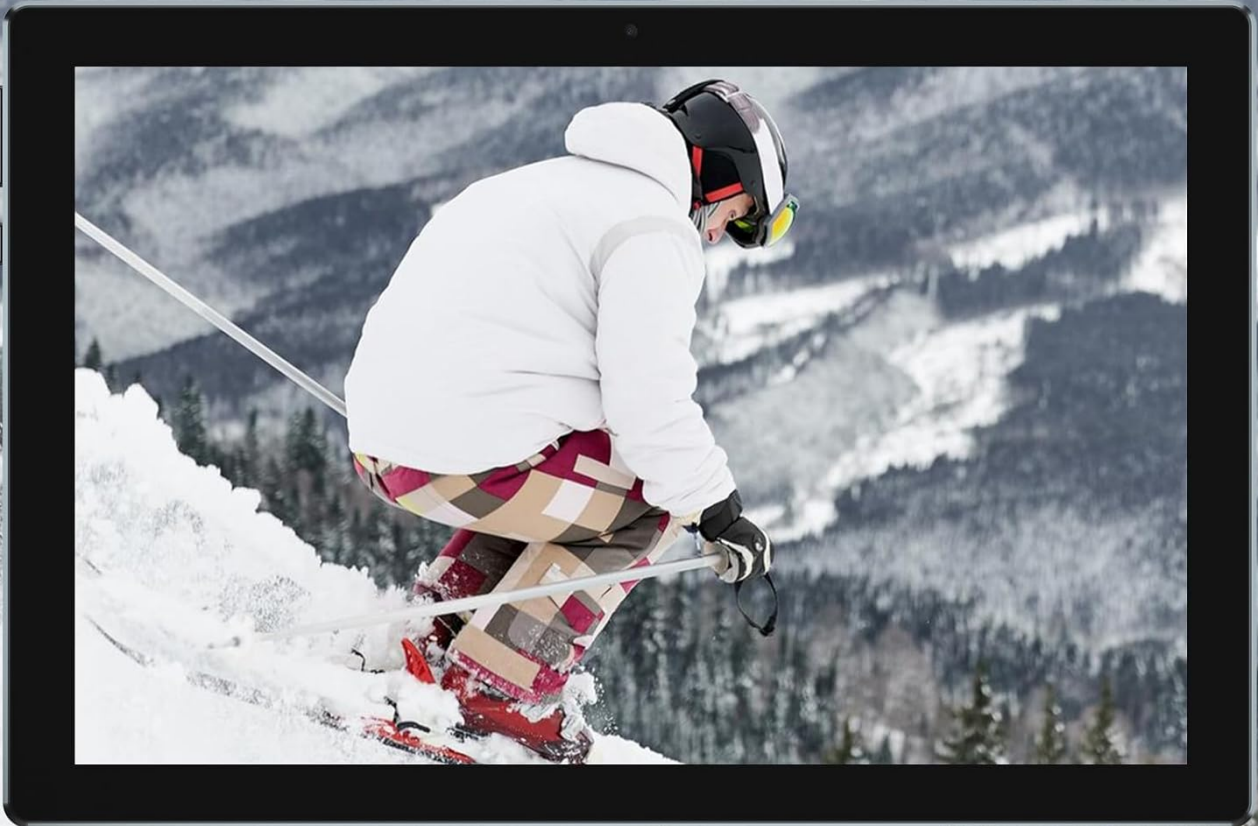


Image: The 10.1-inch HD screen provides clear and comfortable viewing.

10.1 inch IPS Display



10.1 inch
Touch Screen



1280*800
Resolution



16:10
Golden ratio



Vivid IPS
Display



Widevine L1 Support

Widevine L1 support enables tablet to easily access FHD and UHD videos in high-resolution streaming media. Such as Netflix, Amazon Prime Video, Hulu, etc



Image: The IPS display and Widevine L1 support enhance multimedia streaming.

3. Performance and Storage

Equipped with a 2.0Ghz Quad-core Processor and 18GB RAM (4GB fixed, 14GB virtual), the tablet is designed for efficient multitasking and application performance. It includes 128GB of internal storage, expandable up to 2TB via a microSD card (not included), providing ample space for applications, media, and documents.

4. Connectivity

- **Wi-Fi:** Supports 2.4Ghz and 5Ghz Wi-Fi 6 (802.11ac) for fast and stable internet connections.
- **Bluetooth:** Features Bluetooth 5.0 for connecting wireless peripherals such as headphones, speakers, and the included keyboard and mouse.

5. Cameras

The tablet includes dual cameras: a 2MP front-facing camera for video calls and selfies, and an 8MP rear-facing camera for capturing photos and videos.

Dual Camera



2MP

Front Camera



8MP

Rear Camera



Record Beautiful Moments



Image: Dual cameras allow for capturing both portraits and landscapes.

MAINTENANCE

- **Cleaning:** Use a soft, lint-free cloth to clean the screen and body of the tablet. Avoid using harsh chemicals or abrasive materials.
- **Software Updates:** Regularly check for and install system updates to ensure optimal performance and security. Go to **Settings > System > System update**.
- **Battery Care:** To prolong battery life, avoid extreme temperatures and do not let the battery completely drain frequently.
- **Storage Management:** Periodically clear unnecessary files and apps to maintain sufficient storage space and performance.

TROUBLESHOOTING

Common Issues and Solutions

- **Tablet Not Turning On:** Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes,

then try powering it on again.

- **Slow Performance:** Close unused applications, clear cache, or restart the tablet. Check for available system updates.
- **Wi-Fi Disconnection:** Try restarting your Wi-Fi router and the tablet. Ensure you are within range of the Wi-Fi signal. If the issue persists, forget the network in Wi-Fi settings and reconnect.
- **Bluetooth Accessories Not Connecting:** Ensure Bluetooth is enabled on both the tablet and the accessory. Make sure the accessory is in pairing mode. Try restarting both devices.
- **Screen Unresponsive:** Perform a forced restart by holding the power button for approximately 10-15 seconds until the device powers off and restarts.






SPECIFICATIONS

Feature	Specification
Model Name	CP20PRO
Operating System	Android 15
Screen Size	10.1 Inches
Screen Resolution	1280 x 800 Pixels (IPS HD)
Processor	2.0 GHz Quad-core (MediaTek)
RAM	18GB (4GB fixed + 14GB virtual)
Internal Storage	128GB
Expandable Storage	Up to 2TB (via microSD card, not included)
Rear Camera	8 MP
Front Camera	2 MP
Wireless Connectivity	Wi-Fi 6 (802.11ac) 2.4Ghz/5Ghz
Bluetooth	Bluetooth 5.0
Battery Life (Average)	6 Hours
Product Dimensions	9.5 x 0.3 x 6.5 inches
Item Weight	2.44 pounds
Color	Black

WARRANTY AND SUPPORT

For warranty information and technical support, please refer to the documentation provided with your purchase or contact COOPERS customer service directly. Details for contacting support are typically available on the manufacturer's official website or through your retailer.

Related Documents - CP20PRO

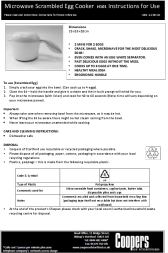	<p>Coopers CP20 Tablet PC User Manual and Support</p> <p>Comprehensive guide for the Coopers CP20 tablet PC, covering setup, features, and support. Includes technical specifications and troubleshooting.</p>
	<p>CP10 Tablet User Guide</p> <p>User guide for the CP10 tablet, covering setup, basic settings, network connection, Bluetooth pairing, app management, multimedia, and troubleshooting.</p>
	<p>Coopers F881 Easy Use Mobile Phone Instruction Manual</p> <p>Comprehensive instruction manual for the Coopers F881 Easy Use Mobile Phone, covering setup, basic functions, safety guidelines, and troubleshooting.</p>
	<p>Coopers Function Pack 2025 - Venue Hire & Event Catering</p> <p>Explore Coopers' Function Pack for 2025, detailing venue hire options like the Leabrook Room, diverse catering packages including share plates, canapes, and working lunches, alongside extensive beverage selections. Includes pricing and terms for booking events.</p>
	<p>Coopers Microwave Scrambled Egg Cooker H101 Instructions for Use</p> <p>User guide for the Coopers Microwave Scrambled Egg Cooker H101. Learn how to quickly and easily make scrambled eggs in your microwave. This document includes usage instructions, important safety notes, care and cleaning advice, and disposal information for the product and its packaging.</p>



[COOPERS CP10 Wireless Presenter User Manual](#)

This document provides user instructions and technical specifications for the COOPERS CP10 2.4G wireless presenter, including setup, operation, and troubleshooting.