

Lynnoland L220028P6

Lynnoland Black and Gold 6-Light Farmhouse Chandelier Instruction Manual

Model: L220028P6

1. IMPORTANT SAFETY INFORMATION

Please read these instructions carefully before installation and retain them for future reference. All electrical connections must be in accordance with local codes, ordinances, or the National Electric Code (NEC). If you are unfamiliar with proper electrical wiring connections, obtain the services of a qualified electrician.

- **WARNING:** To avoid the risk of electric shock, always disconnect power at the main circuit breaker or fuse box before beginning installation or maintenance.
- **CAUTION:** Ensure all wiring connections are secure and properly insulated.
- Do not install this fixture in wet locations. For indoor use only.
- Handle the fixture with care to prevent damage.

2. PACKAGE CONTENTS

Carefully unpack your new fixture and lay out all parts on a clear area. Ensure all components listed below are present. If any parts are missing or damaged, do not attempt to assemble or install the product. Contact customer service for assistance.

- Chandelier Body (pre-assembled lamp arms)
- Mounting Bracket
- Canopy
- Splicing Rods (various lengths for height adjustment)
- Mounting Hardware (screws, wire nuts, etc.)
- Instruction Manual

Note: Light bulbs are **NOT** included and must be purchased separately.

3. SETUP AND INSTALLATION

This Lynnoland chandelier is designed for straightforward installation with pre-assembled lamp arms, minimizing complex setup steps.

3.1 Unfolding Lamp Arms

The lamp arms are pre-assembled and folded for packaging. Simply unfold each arm to its desired position. No additional screwing or wiring of individual arms is required.



Figure 1: Simple assembly by unfolding pre-assembled lamp arms.

3.2 Adjustable Height Installation

The chandelier features splicing rods for stable height adjustment, eliminating the need for chains. You can adjust the hanging height from 17.5 inches to 47 inches to suit your ceiling height and room design. The fixture is compatible with both sloped and flat ceilings.

1. Determine the desired hanging height for your chandelier.
2. Select the appropriate combination of splicing rods to achieve the desired length.
3. Securely screw the chosen splicing rods together and attach them to the chandelier body and canopy.

4. Follow the detailed instructions provided in the package for mounting the bracket to the ceiling junction box and making electrical connections.
5. Carefully lift the chandelier and secure the canopy to the mounting bracket.



The Light Fixtures package includes four down rods for easy height adjustment.

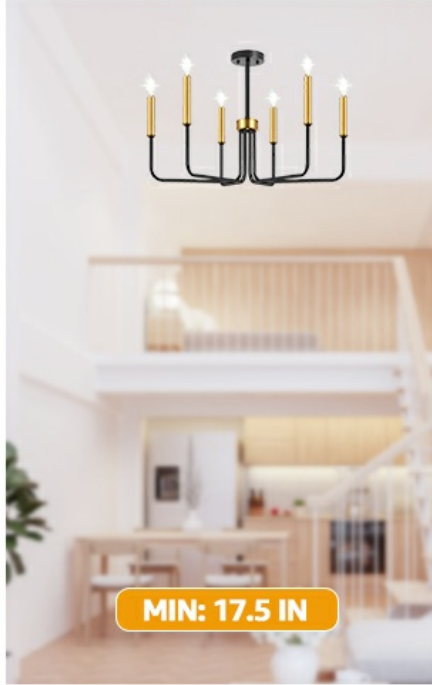


Figure 2: Adjustable height mechanism using splicing rods.



Figure 3: Chandelier installed in a dining room.



Figure 4: Chandelier installed in a living room.



Figure 5: Chandelier installed in an entryway.

4. OPERATING INSTRUCTIONS

4.1 Bulb Requirements

This chandelier requires 6 bulbs with an E12 base. It is compatible with various bulb types, including incandescent, LED, CFL, and halogen bulbs. The maximum wattage per bulb is 60W. For dimming functionality, install dimmable E12 bulbs and connect the fixture to a compatible dimmer switch (dimmer switch not included).

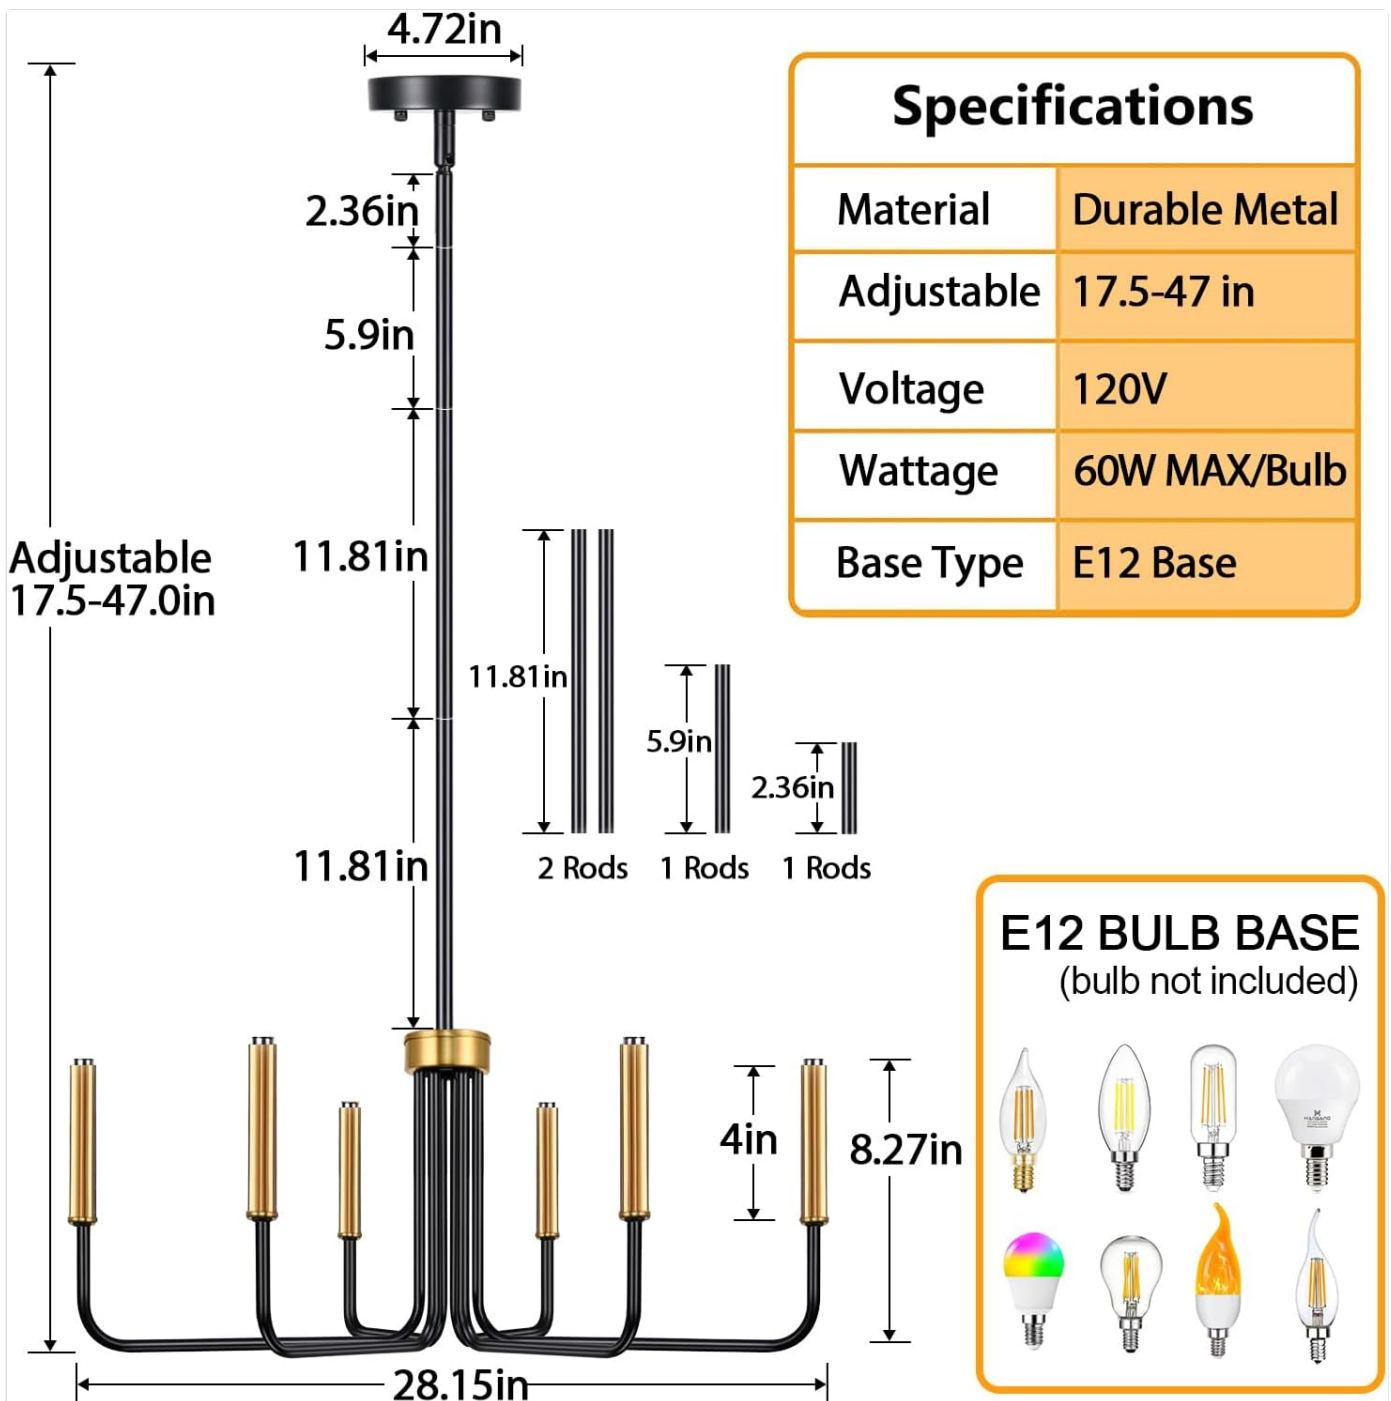


Figure 6: Chandelier specifications and E12 bulb base compatibility.

4.2 Powering On/Off

The chandelier is controlled by a standard wall switch (push button or touch type, depending on your home's electrical setup). Ensure the switch is in the 'ON' position to illuminate the fixture.

5. MAINTENANCE

Regular maintenance will help preserve the appearance and functionality of your chandelier.

- **Cleaning:** Always turn off the power supply before cleaning. Use a soft, dry cloth to wipe the fixture. Avoid using harsh chemicals, abrasive cleaners, or polishes as they may damage the finish.
- **Bulb Replacement:** Ensure the fixture is cool and the power is off before replacing bulbs. Screw in new E12 bulbs gently.
- **Inspection:** Periodically check all connections and mounting hardware to ensure they remain secure.

6. TROUBLESHOOTING

If you encounter issues with your chandelier, refer to the following common troubleshooting steps:

- **Light does not turn on:**
 - Check if the power supply is on at the circuit breaker.
 - Ensure the wall switch is in the 'ON' position.
 - Verify that bulbs are correctly installed and not burnt out.
 - Check wiring connections for proper contact.
- **Lights flicker:**
 - Ensure bulbs are fully screwed in.
 - If using dimmable bulbs, confirm they are compatible with your dimmer switch.
 - Check for loose wiring connections.
- **Fixture is unstable:**
 - Ensure all mounting hardware is securely tightened.
 - Verify that splicing rods are firmly connected.

If these steps do not resolve the issue, please contact Lynnloland customer support.

7. SPECIFICATIONS

Feature	Detail
Brand	Lynnloland
Model Name	Chandelier
Item Model Number	L220028P6
Color	Black and Gold
Material	Metal
Style	Modern
Light Fixture Form	Chandelier
Room Type	Bedroom, Dining Room, Living Room
Product Dimensions	28"L x 28"W x 47"H (Adjustable)
Adjustable Height Range	17.5" to 47"
Indoor/Outdoor Usage	Indoor
Power Source	Corded Electric
Installation Type	Semi Flush Mount
Control Method	Wall Switch (Touch/Push Button)

Light Source Type	LED, Incandescent, CFL, Halogen (Bulbs Not Included)
Finish Type	Lacquered
Shade Material	Metal
Number of Light Sources	6
Bulb Base	E12
Max Wattage per Bulb	60W
Assembly Required	No (pre-assembled arms)
Item Weight	6.27 pounds

8. WARRANTY AND CUSTOMER SUPPORT

Lynnoland provides a **36-month warranty** for this product, along with technical support from a professional team. If you encounter any problems with your chandelier, please do not hesitate to contact us.

To reach customer support, please use the "Contact Seller" option on the product page where you made your purchase. We are committed to providing a satisfactory solution within 24 hours.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question