

SANODESK QS1M-1460-EU

SANODESK QS1M-1460-EU Electric Height-Adjustable Desk User Manual

Model: QS1M-1460-EU | Brand: SANODESK

1. SAFETY INFORMATION

Please read all safety instructions carefully before assembly and use to ensure safe operation and prevent injury or damage.

- **Weight Capacity:** This desk is designed for a maximum weight of 70 kg. Always ensure the desk is stable and never exceed this recommended weight limit.
- **Power Supply:** The desk operates on AC100-240V, 50/60Hz.
- **Working Environment:** Suitable for temperatures between 14°F and 104°F (-10°C to 40°C).
- **Cleaning:** Always unplug the power supply cable before cleaning. Use a slightly damp cloth to wipe surfaces. Keep all electrical components away from liquids. Do not damage the connection line or plug.
- **Installation:** Ensure the product is correctly installed according to the assembly instructions before use.
- **Child Safety:** Keep children away from electric height-adjustable desks, control units, and handsets. The manufacturer is not responsible for damages resulting from unpredictable child behavior. Children or individuals with cognitive impairment should not use this product without supervision.
- **Power Cord:** If the power supply cord is damaged or broken, it must be replaced by the manufacturer or a qualified specialist to avoid injury.
- **Cleaning Agents:** Do not use corrosive or abrasive materials to clean this product. Dispose of cleaning solutions in an environmentally friendly manner.
- **Environment:** Operate in a clean and safe environment. Handle packaging materials carefully to avoid potential hazards.
- **Storage:** Retain the original packaging for future transportation if necessary.

2. PRODUCT OVERVIEW

The SANODESK Electric Height-Adjustable Desk is designed to enhance your workspace with ergonomic flexibility and smart features. It allows seamless transitions between sitting and standing positions, promoting comfort and productivity.



SANODESK Electric Height-Adjustable Desk in a home office setup, featuring a maple desktop, white legs, dual monitors, a laptop, and accessories like a cup holder and headphone hook.

PRODUCT SIZE



Diagram illustrating the SANODESK Electric Height-Adjustable Desk dimensions (140 cm length, 60 cm width) and height adjustment range (73.5-118 cm), along with icons for key features: Height Adjustable, Smooth Lifting, Stable, Memory Height, Easy Installation, and Low Noise (<50dB).

Key Features:

- **Smart Memory Panel:** The advanced LED control panel includes 2 memory preset keys, allowing you to save and recall your preferred sitting and standing heights with ease.
- **Adjustable Height:** Adjust the desk height from 73.5 cm to 118 cm (28.9 inches to 46.5 inches) to suit your ergonomic needs.
- **Robust Construction:** With a solid build and a 70 kg (154 lbs) load capacity, the desk provides stability and durability for all your work essentials.
- **Quiet Operation:** Enjoy a distraction-free working environment thanks to the ultra-quiet motor, operating below 51 dB.
- **Useful Accessories:** Includes a cup holder and hooks for organizing small items, keeping your workspace tidy.

I 70KG LOAD CAPACITY

25% stronger material than others for perfect stability



Image highlighting the 70kg load capacity of the SANODESK Electric Height-Adjustable Desk, demonstrating its robust construction.

I DIFFERENT HEIGHTS FOR ALL



Visual representation of the SANODESK Electric Height-Adjustable Desk's minimum (735mm) and maximum (1180mm) height settings, illustrating its versatility for different user preferences.



An image emphasizing the quiet operation of the SANODESK Electric Height-Adjustable Desk, showing a cat sleeping peacefully on the desk, with a graph comparing its 50dB noise level to normal voice (60dB) and city traffic (80dB).



Before and after comparison images demonstrating the effective cable organization provided by the SANODESK Electric Height-Adjustable Desk, showing a tidy workspace with integrated cable management.

3. SPECIFICATIONS

Feature	Detail
Brand	SANODESK
Model Number	QS1M-1460-EU
Color	White+Maple

Product Dimensions	140 cm (W) x 60 cm (D) x 73.5-118 cm (H)
Item Weight	26.5 Kilograms
Maximum Load Capacity	70 kg
Special Features	Adjustable, Adjustable Height, Electric, Ergonomic
Desk Design	Computer Desk
Shape	Rectangular
Base Material	Metal
Top Material Type	Ash Wood
Finish Type	Varnished

4. SETUP INSTRUCTIONS

Assembly of the SANODESK Electric Height-Adjustable Desk is designed to be straightforward. Please follow the detailed instructions provided in the separate assembly guide included with your product package.

- 1. Unpack Components:** Carefully unpack all parts and verify against the parts list in the assembly guide.
- 2. Assemble Frame:** Follow the steps to assemble the desk frame, ensuring all screws are tightened securely.
- 3. Attach Desktop:** Secure the desktop to the assembled frame.
- 4. Install Control Panel:** Mount the control panel and connect all necessary cables as indicated in the guide.
- 5. Connect Power:** Plug the power cord into a suitable electrical outlet.
- 6. Initial Test:** Perform an initial test of the height adjustment function to ensure proper operation.

For detailed visual instructions, refer to the assembly manual.

5. OPERATING INSTRUCTIONS

The SANODESK Electric Height-Adjustable Desk features an intuitive control panel for easy height adjustment and memory functions.

5.1. Adjusting Height

- **Raise Desk:** Press and hold the 'Up' arrow button (▲) to raise the desk to your desired height.
- **Lower Desk:** Press and hold the 'Down' arrow button (▼) to lower the desk to your desired height.
- Release the button once the desired height is reached.

5.2. Using Memory Presets

The control panel allows you to save two preferred height settings for quick access.

- 1. Set a Memory Position:**
 - a. Adjust the desk to your desired height using the 'Up' or 'Down' buttons.
 - b. Press the 'M' button. The display will flash 'S-'.
 - c. Within 3 seconds, press either '1' or '2' to save the current height to that memory slot. The display will show 'S-

1' or 'S-2' to confirm.

2. Recall a Memory Position:

- a. Simply press the '1' or '2' button. The desk will automatically move to the saved height.

6. MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your SANODESK.

- **Cleaning:** Wipe the desk surface and frame with a soft, slightly damp cloth. Avoid harsh chemicals, abrasive cleaners, or excessive moisture. Always unplug the desk before cleaning.
- **Cable Management:** Periodically check and organize cables to prevent tangling or damage.
- **Fasteners:** Occasionally check all screws and bolts to ensure they are tight. Retighten if necessary.
- **Motor:** The motor is designed for maintenance-free operation. If you notice unusual noises or performance issues, refer to the troubleshooting section or contact support.

7. TROUBLESHOOTING

If you encounter any issues with your SANODESK, please refer to the following common troubleshooting steps:

Problem	Possible Cause / Solution
Desk does not move	• Check if the power cord is securely plugged into both the desk and the wall outlet. • Ensure the control panel cables are properly connected. • Try resetting the desk (refer to the full manual for specific reset procedures if available).
Desk moves unevenly or makes unusual noise	• Ensure the desk is not overloaded (max 70 kg). • Check for any obstructions under or around the desk. • Verify all assembly screws are tightened. • Slight noise from the motor or brake system is normal and will not impact product use.
Memory presets not working	• Ensure you are following the correct procedure for setting and recalling memory positions (see Section 5.2). • If the issue persists, try resetting the desk.
Error code displayed	Refer to the comprehensive user manual for specific error code meanings and solutions. If not resolved, contact customer support.

If these steps do not resolve the issue, please contact SANODESK customer support for further assistance.

8. RECYCLING AND DISPOSAL

This product contains electronic components and should not be disposed of as ordinary household waste. Proper disposal is essential to prevent environmental damage and promote resource sustainability.

- **Electronic Waste:** Dispose of the product in accordance with local laws and regulations for electronic waste.
- **Recycling:** Utilize available recycling systems or contact your distributor or the manufacturer for guidance on proper recycling.

9. WARRANTY AND SUPPORT

For warranty information, technical support, or any inquiries regarding your SANODESK Electric Height-Adjustable Desk, please refer to the warranty card included with your purchase or visit the official SANODESK website.

Contact information for customer service can typically be found on the product packaging or the manufacturer's website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question