

WOCKODER R608

WOCKODER R608 Vinyl Record Player Instruction Manual

Model: R608 | Brand: WOCKODER

1. INTRODUCTION

Thank you for choosing the WOCKODER R608 Vintage Turntable. This record player combines classic aesthetics with modern functionality, allowing you to enjoy your vinyl collection and stream digital music wirelessly. Please read this manual carefully to ensure proper setup, operation, and maintenance of your device.



Figure 1: WOCKODER R608 Vinyl Record Player Overview

2. WHAT'S IN THE BOX

- 1 x WOCKODER R608 Turntable Unit
- 1 x Power Adapter (DC 5V 1000mA)
- 1 x 45 RPM Adapter
- 1 x Instruction Manual (this document)
- 1 x Detachable Dust Cover

3. PRODUCT FEATURES

3.1 Three-Speed Playback

Supports 33-1/3, 45, and 78 RPM speeds to play all your vinyl records, including 7-inch, 10-inch, and 12-inch sizes. A 45 RPM adapter is included for single records.



7"
45RPM

10"
78RPM

12"
33RPM

THREE SPEED PLAYER



Play 7"/10"/12" vinyl,
support 33/45/78 RPM

Figure 2: Three-Speed Playback Options

3.2 Bluetooth Wireless Playback

Connect your smartphone, tablet, or other Bluetooth-enabled devices wirelessly to stream your favorite digital music through the turntable's built-in speakers.

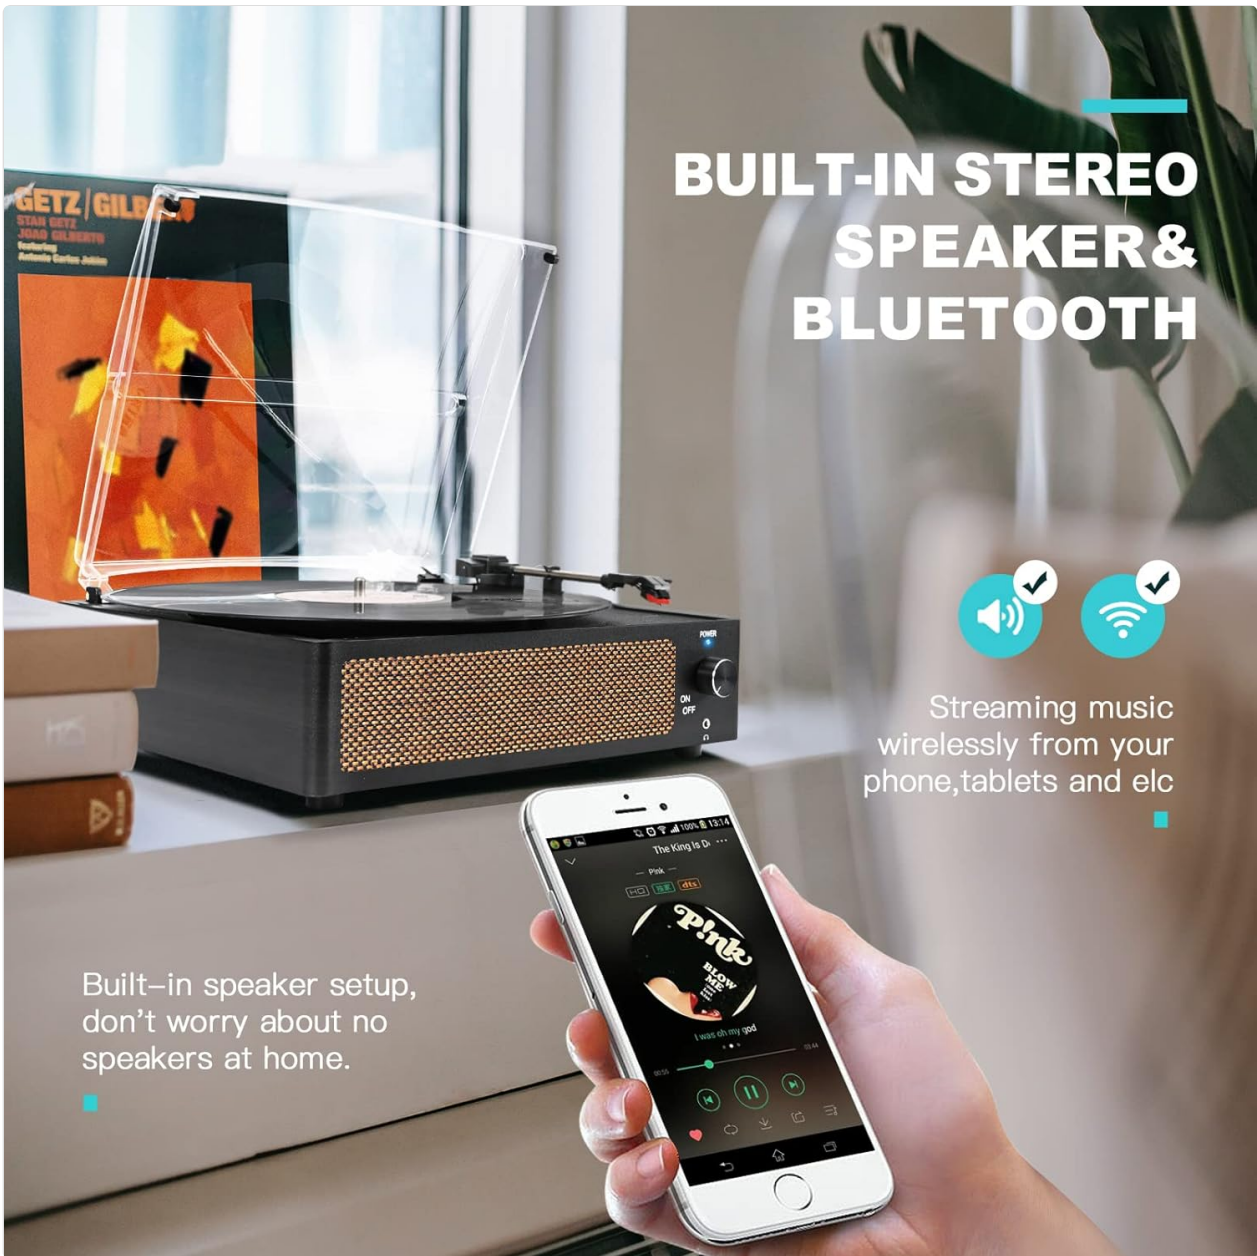


Figure 3: Bluetooth Wireless Playback

3.3 Built-in Stereo Speakers

Enjoy clear and dynamic audio directly from the turntable without needing external speakers. The integrated full-range stereo speakers provide convenient listening.

3.4 Belt-Driven Anti-Vibration System

The belt-driven mechanism and spring-loaded base help absorb shocks and vibrations, contributing to improved sound quality and stable playback.



Figure 4: Rich Details and Components

3.5 Versatile Connectivity

Features AUX-in for connecting external audio devices, a headphone jack for private listening, and RCA line output to connect to external powered speakers for enhanced sound.

VINTAGE LOOKING WITH MODERN TECHNOLOGY

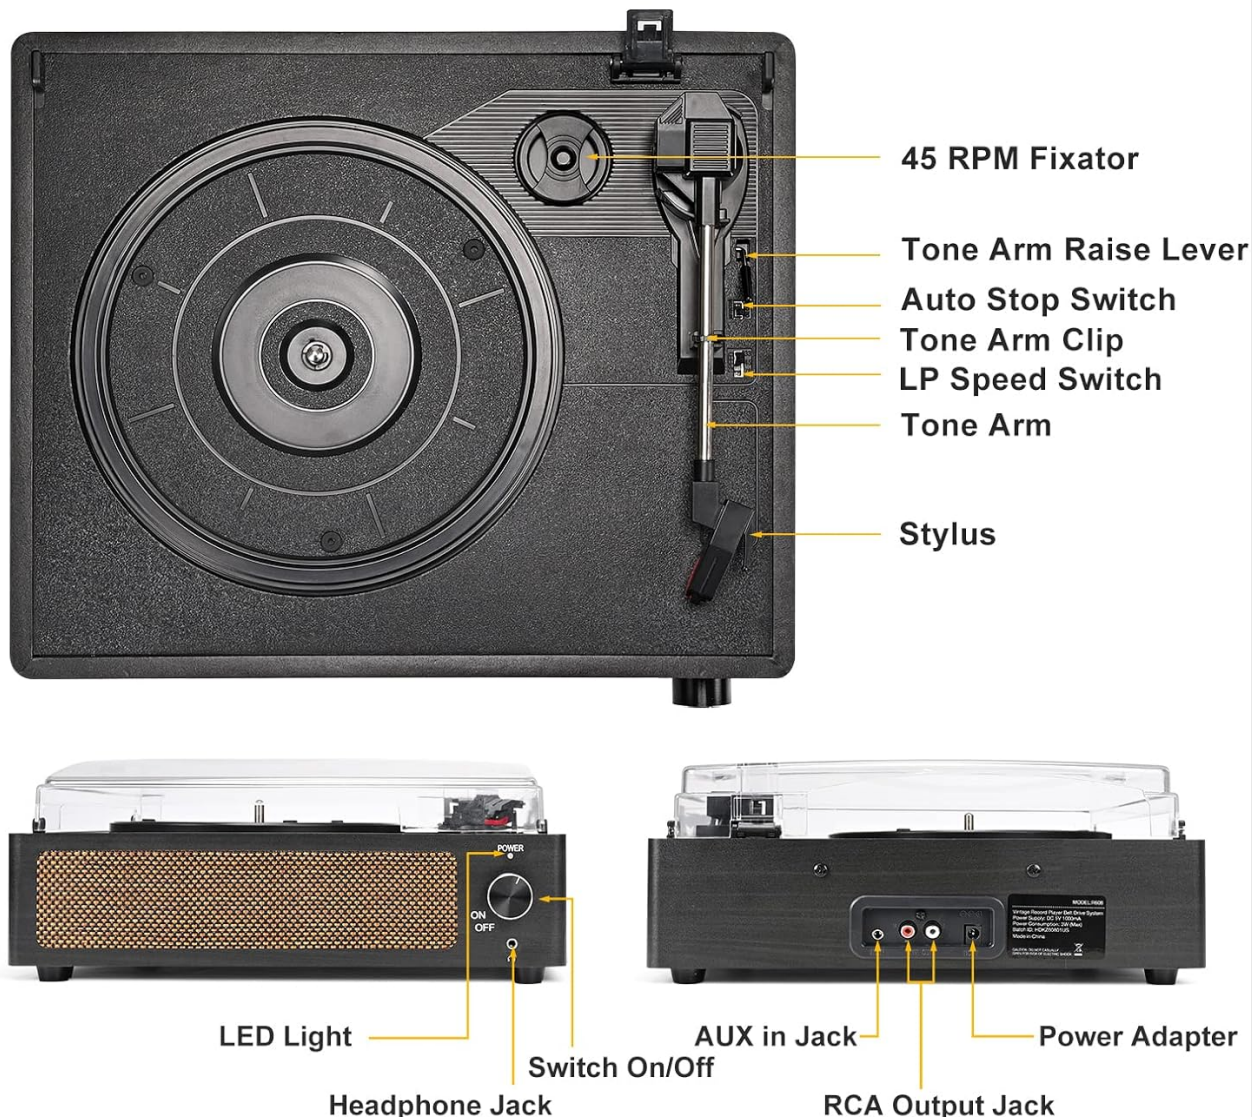


Figure 5: Turntable Components and Connections

3.6 Auto Stop Function

The auto-stop feature automatically stops the platter from spinning when a record finishes playing, preventing unnecessary wear on the stylus and record.

3.7 Detachable Dust Cover

A clear, easily removable dust cover protects your vinyl records and the turntable components from dust and damage when not in use.

Note: No official product videos from the seller were available for embedding in this manual.

4. SETUP GUIDE

1. **Unpack the Turntable:** Carefully remove all components from the packaging. Retain the packaging for future transport or storage.
2. **Place the Turntable:** Position the turntable on a stable, level surface away from direct sunlight, heat

sources, and excessive dust or vibrations.

3. **Install Dust Cover:** Gently attach the detachable dust cover to the hinges at the back of the turntable.
4. **Connect Power:** Insert the DC 5V 1000mA power adapter into the DC IN port on the back of the turntable and plug the other end into a wall outlet.
5. **Remove Stylus Protector:** Carefully remove the clear plastic stylus protector from the needle assembly. Be gentle to avoid damaging the stylus.
6. **Initial Power On:** Turn the ON/OFF knob clockwise to power on the unit. The power indicator light will illuminate.

5. OPERATING INSTRUCTIONS

5.1 Playing Vinyl Records

1. **Select Speed:** Set the LP Speed Switch (33/45/78 RPM) to match the speed of your record. Use the included 45 RPM adapter for 7-inch singles.
2. **Place Record:** Place your vinyl record on the turntable platter.
3. **Lift Tone Arm:** Gently lift the Tone Arm using the Tone Arm Raise Lever.
4. **Position Tone Arm:** Move the Tone Arm over the desired starting groove of the record.
5. **Lower Tone Arm:** Slowly lower the Tone Arm using the Tone Arm Raise Lever. The record will begin to play.
6. **Adjust Volume:** Rotate the ON/OFF knob to adjust the volume to your desired level.
7. **Auto Stop:** The turntable will automatically stop spinning when the record finishes playing if the Auto Stop button is engaged.

5.2 Bluetooth Wireless Playback

1. **Power On:** Turn the ON/OFF knob clockwise to power on the unit.
2. **Select Bluetooth Mode:** Ensure the turntable is in Bluetooth mode (usually indicated by a blue LED light). If not, cycle through modes using the function switch if available, or it may automatically enter Bluetooth mode when no record is playing.
3. **Pair Device:** On your mobile device, enable Bluetooth and search for