

VINABTY GL59-00160A

VINABTY GL59-00160A Replacement Remote Control User Manual

Model: GL59-00160A | Brand: VINABTY

INTRODUCTION

This manual provides comprehensive instructions for the VINABTY GL59-00160A replacement remote control. Designed as a direct replacement, this remote offers full functionality for compatible Samsung media players without the need for complex programming.

Compatibility

The GL59-00160A remote control is compatible with the following Samsung media player models:

- Samsung GL59-00160A
- Samsung GL5900160A
- Samsung GX-MB540
- Samsung GX-MB540TL
- Samsung GX-MB540TLZG
- Samsung GX-SM530 SF
- Samsung GX-SM540
- Samsung GX-SM550 SH

SETUP

The VINABTY GL59-00160A remote control requires no programming or complex setup. Simply install the batteries, and it is ready for use with your compatible Samsung media player.

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by the arrow to open it.
3. Insert two (2) AAA batteries (not included) into the compartment, ensuring the positive (+) and negative (-)

terminals align correctly with the markings inside the compartment.

4. Slide the battery compartment cover back into place until it clicks securely.





Image: Back of the remote control with the battery compartment open, illustrating where to insert AAA batteries.

OPERATING INSTRUCTIONS

Once batteries are installed, point the remote control directly at your Samsung media player. The remote operates using infrared (IR) technology, so ensure there are no obstructions between the remote and the media player's IR receiver.

Button Functions

The remote features standard buttons for media player control:

- **Power (Red Button):** Turns the media player on or off.
- **Number Buttons (0-9):** For direct channel selection or inputting numbers.
- **VOL +/-:** Adjusts the volume level.
- **CH +/-:** Changes channels or navigates through lists.
- **MUTE:** Mutes or unmutes the audio.
- **MENU:** Accesses the main menu of the media player.
- **INFO:** Displays information about the current program or content.
- **Directional Pad (Up/Down/Left/Right) & OK:** Navigates menus and confirms selections.
- **RETURN:** Goes back to the previous screen or menu.
- **EXIT:** Exits the current menu or application.
- **Play/Pause, Stop, Fast Forward, Rewind:** Standard media playback controls.
- **Color Buttons (Red, Green, Yellow, Blue):** Functionality varies depending on the media player and content.



Image: Front view of the remote control, highlighting the layout and functions of various buttons.

MAINTENANCE

Proper care and maintenance will extend the life of your remote control.

Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Do not use harsh chemicals.
- Avoid getting moisture into the battery compartment or any openings.

Battery Replacement

Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.

TROUBLESHOOTING

If you experience issues with your remote control, try the following steps:

- **Remote not responding:**

- Check if the batteries are inserted correctly with the correct polarity.
- Replace the batteries with fresh AAA batteries.
- Ensure there is a clear line of sight between the remote control and the media player's IR receiver.
- Confirm that the media player is powered on.

- **Limited range:**

- Replace the batteries. Low battery power can reduce the remote's effective range.
- Remove any obstacles between the remote and the media player.
- Ensure you are within the approximate 10-meter transmission distance.

- **Specific buttons not working:**

- This remote is a replacement and may not support all advanced functions of original remotes for all compatible models. Verify the button's function is standard.
- Clean the remote control, as dirt or debris might be obstructing button contacts.

SPECIFICATIONS

Model Number	GL59-00160A
Brand	VINABTY
Compatible Brand	Samsung
Material	ABS
Color	Black
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Transmission Distance	Approximately 10 meters (33 feet)
Battery Type	2 x AAA (not included)
Item Weight	65 Grams
Special Feature	Ergonomic Design

WARRANTY AND SUPPORT

This VINABTY product is designed for reliable performance. While specific warranty details are not provided in this manual, for any questions, concerns, or issues regarding your GL59-00160A replacement remote control, please contact the seller or retailer from whom you purchased the product. They will be able to provide assistance and information regarding returns, replacements, or troubleshooting beyond the scope of this manual.

Please retain your purchase receipt for any warranty claims or support inquiries.