

## EasySMX ESM-T37

# EasySMX T37 Wireless Pro Controller User Manual

Brand: EasySMX | Model: ESM-T37

## INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your EasySMX T37 Wireless Pro Controller. Please read this manual thoroughly before using the product to ensure optimal performance and longevity. The EasySMX T37 controller is designed for use with Nintendo Switch, Switch Lite, and Switch OLED consoles, and is also compatible with Windows PCs via wired connection.

## PRODUCT OVERVIEW

### Package Contents

- EasySMX T37 Wireless Pro Controller
- USB-C Charging Cable
- User Manual



Image: Contents of the EasySMX T37 Wireless Pro Controller package.

## Controller Features

- **Wireless Connectivity:** Stable and reliable wireless connection within a 10-meter range.
- **6-Axis Gyro Sensor:** Provides precise motion control for enhanced gaming.
- **Dual Vibration Motors:** Delivers timely shock feedback for a realistic gaming experience.
- **Adjustable Turbo Function:** Offers multiple turbo speeds for rapid button presses.
- **Long Battery Life:** Built-in 400mAh battery provides up to 8 hours of playtime on a 2-hour charge.
- **Ergonomic Design:** Comfortable non-slip grips reduce hand fatigue during extended gaming sessions.
- **Wake-up Function:** Press the HOME button to wake up both the controller and the game console.



Image: The EasySMX T37 Wireless Pro Controller.

# Design for Switch



Switch



Switch OLED



Switch Lite



Wake up



Bluetooth Connection



6-Axis Gyro



Turbo

Image: Compatibility of the controller with various Nintendo Switch models.

## SETUP INSTRUCTIONS

### Pairing with Nintendo Switch/Switch Lite/Switch OLED (Wireless)

- Ensure your Switch console is powered on and updated to the latest system version.
- From the HOME Menu, select "Controllers" > "Change Grip/Order".
- On the controller, press and hold the SYNC button (small button on top edge) for 3 seconds until the LED indicators start flashing rapidly.
- Once the controller is successfully paired, the player LED(s) on the bottom of the controller will light up solid.
- To wake up the console and controller from sleep mode, simply press the HOME button on the controller.

# High Compatibility



Windows XP/11/10/7/8/8.1

Wired Connection



Switch

Switch OLED



Switch Lite

Bluetooth Connection



Image: High compatibility of the controller with Switch and PC.

## Connecting to PC (Wired)

1. Connect the USB-C end of the charging cable to the controller and the USB-A end to an available USB port on your Windows PC.
2. The controller will be recognized as a standard gamepad. Drivers may install automatically.
3. **Note:** Wireless connection is not supported for PC. Only USB cable connection is available for PC.

## OPERATING INSTRUCTIONS

### Charging the Controller

- Connect the controller to a USB power source (e.g., Switch dock, PC, USB wall adapter) using the provided USB-C cable.
- The LED indicators will flash during charging and turn off when fully charged.
- A full charge takes approximately 2 hours and provides up to 8 hours of playtime.

### Using the Turbo Function

The Turbo function allows for rapid, continuous pressing of a button. There are three adjustable turbo speeds: 5 shots/s, 12 shots/s, and 20 shots/s.

1. **To set Turbo:** Press and hold the button you wish to set Turbo for (e.g., A, B, X, Y, L, R, ZL, ZR), then press the Turbo button once. The button will now continuously input when held down.
2. **To adjust Turbo speed:** With a Turbo-enabled button held down, press the Turbo button again to cycle through the speeds (5/12/20 shots/s).
3. **To clear Turbo:** Press and hold the Turbo-enabled button, then press the Turbo button twice. Alternatively, press the Turbo button and the Minus (-) button simultaneously to clear all Turbo settings.



Image: Explanation of the controller's Turbo function and its adjustable speeds.

## Motion Control (6-Axis Gyro)

The built-in 6-axis gyro sensor provides precise motion control in compatible games. This allows for intuitive aiming, steering, and other in-game actions by simply tilting and moving the controller.

# 6-Axis Gyro Motion Control



Image: Visual representation of the 6-Axis Gyro motion control in action.

## Dual Vibration Feedback

The controller features dual vibration motors that provide immersive haptic feedback during gameplay. The intensity of the vibration can vary based on in-game events.

# Dual Vibration

 


Image: Illustration of the Dual Vibration feature.

## MAINTENANCE

- Keep the controller clean by wiping it with a soft, dry cloth. Avoid using harsh chemicals or abrasive materials.
- Store the controller in a cool, dry place away from direct sunlight and extreme temperatures.
- Avoid dropping the controller or subjecting it to strong impacts.
- Do not attempt to disassemble or modify the controller, as this will void the warranty.
- Charge the controller regularly, even if not in use, to maintain battery health.

## TROUBLESHOOTING

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Controller does not connect to Switch.	<p>Ensure the controller is charged.</p> <p>Repeat the pairing process (Settings &gt; Controllers &gt; Change Grip/Order).</p> <p>Ensure the Switch console is updated to the latest system version.</p> <p>Move closer to the Switch console to ensure stable signal.</p>
Controller not recognized by PC.	<p>Ensure you are using a wired USB-C connection. Wireless is not supported for PC.</p> <p>Try a different USB port on your PC.</p> <p>Ensure the USB cable is not damaged.</p>
Input lag or stick drift.	<p>Ensure the controller is fully charged.</p> <p>Reset the controller by pressing the small reset button (if available, usually a pinhole) or by holding the SYNC button for an extended period.</p> <p>Ensure no strong electromagnetic interference nearby.</p> <p>If issues persist, contact EasySMX customer support.</p>
Controller does not charge.	<p>Verify the USB-C cable is securely connected to both the controller and the power source.</p> <p>Try a different USB-C cable or power source.</p> <p>Ensure the power source provides sufficient power.</p>

If you encounter problems due to incorrect use of the item or persistent issues, please contact the seller for assistance before considering a return.

## SPECIFICATIONS

Feature	Detail
Model Number	ESM-T37
ASIN	B0CDLJQ211
Product Dimensions	2.95 x 4.69 x 6.5 inches
Item Weight	0.012 ounces
Battery Capacity	400mAh
Charging Time	Approx. 2 hours
Playtime	Up to 8 hours
Wireless Range	Up to 10 meters
Compatibility	Nintendo Switch, Switch Lite, Switch OLED, Windows PC (wired only)
Date First Available	August 11, 2023

## WARRANTY AND SUPPORT

For any product-related inquiries, technical support, or warranty claims, please contact the EasySMX seller directly through the platform where you purchased the product. They will be able to provide the most accurate and timely assistance regarding your specific purchase.

Please retain your proof of purchase for warranty purposes.

## OFFICIAL PRODUCT VIDEOS

No official seller videos were provided in the product data for embedding in this manual.

© 2024 EasySMX. All rights reserved.

## Related Documents

	<p><a href="#">EasySMX ESM-9124 Wireless Controller User Manual</a></p> <p>This manual provides detailed instructions for the EasySMX ESM-9124 Wireless Switch Pro Controller, covering product description, diagram, connection methods for Android, iOS, PC, and Switch, light management, turbo function settings, dual vibration adjustment, key programming, controller reset, charging indicators, and packing list.</p>
	<p><a href="#">EasySMX T37 Wireless Controller User Manual</a></p> <p>User manual for the EasySMX T37 Wireless Controller, detailing connection methods, features, troubleshooting, and specifications for use with Nintendo Switch, Android, and Windows.</p>
	<p><a href="#">EasySMX S10 Gaming Controller User Manual</a></p> <p>Comprehensive user manual for the EasySMX S10 gaming controller, covering setup, features, connectivity, customization, and safety information for Switch, PC, and mobile devices.</p>
	<p><a href="#">EasySMX-X05 Wireless Controller User Manual</a></p> <p>Comprehensive user manual for the EasySMX-X05 Wireless Controller, detailing setup, features, specifications, and troubleshooting for PC, Switch, Android, and iOS devices.</p>