

KLIM KLIM Nomad

KLIM Discover Portable CD Player User Manual

Model: KLIM Nomad



1. INTRODUCTION

Welcome to the user manual for your KLIM Discover Portable CD Player. This device combines classic CD playback with modern features such as Bluetooth connectivity, FM radio, FM transmission, and SD card support. This manual will guide you through the setup, operation, and maintenance of your new portable CD player to ensure an optimal listening experience.



Image 1.1: The KLIM Discover Portable CD Player, showcasing its compact design and included headphones.

2. PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- KLIM Discover CD Player
- KLIM Fusion Wired Headphones
- Ear Accessories (various sizes)
- USB-C Charging Cable
- Carry Pouch

RECUERDA LOS BUENOS VIEJOS TIEMPOS



Image 2.1: All components included with the KLIM Discover Portable CD Player.

3. PRODUCT OVERVIEW

Familiarize yourself with the buttons and ports on your KLIM Discover CD Player:



Radio FM/AM
Reproductor de CD
Lector micro SD/TF
Bluetooth
Transmisor FM
Función de grabación

Image 3.1: The KLIM Discover Portable CD Player, showing its front panel and connected headphones.

The KLIM Discover features a clear LCD display and intuitive controls on its front panel. Key components include:

- **LCD Display:** Shows track information, mode, battery status, and settings.
- **Playback Controls:** Buttons for Play/Pause, Stop, Next/Fast Forward, and Previous/Rewind.
- **Mode Buttons:** Buttons for changing playback modes (e.g., Repeat, Random), activating FM Radio, FM Transmitter, and Bluetooth.
- **EQ/Record Button:** For cycling through equalizer presets and initiating recording.
- **DIR/Speed Buttons:** For changing directories on MP3 CDs and adjusting playback speed.
- **Volume Control:** A dedicated control for adjusting audio output.
- **HOLD Switch:** A physical switch, typically on the side, to lock all buttons.

Additional ports (typically on the side or back):

- **USB-C Charging Port:** For connecting the charging cable.
- **3.5mm Audio Output (Headphone Jacks):** Two ports for connecting headphones or external speakers, allowing two users to listen simultaneously.

- **SD Card Slot:** For inserting an SD/TF memory card.

4. SETUP

4.1. Charging the Device

The KLIM Discover has a built-in rechargeable battery. Before first use, fully charge the device.

1. Connect the supplied USB-C charging cable to the USB-C port on the player.
2. Connect the other end of the cable to a USB power adapter (not included) or a computer's USB port.
3. The charging indicator on the display will show charging status. A full charge typically provides over 12 hours of playback.



Image 4.1: The KLIM Discover features a long-lasting rechargeable battery.

4.2. Powering On/Off

To power on the device, slide the power switch (usually located on the side) to the "ON" position. To power off, slide it to "OFF".

4.3. Using the HOLD Function

The HOLD switch locks all buttons to prevent accidental operation. Slide the switch to "HOLD" to activate, and slide it back to deactivate.

5. OPERATING INSTRUCTIONS

5.1. CD Playback

1. Open the CD compartment cover.
2. Carefully place a CD (CD, CD-R, CD-RW, HDCD, MP3 CD) onto the spindle, label side up.
3. Close the CD compartment cover firmly until it clicks.
4. Press the **Play/Pause** button to start playback.
5. Use the **Next Track/Fast Forward** and **Previous Track/Rewind** buttons to navigate tracks.
6. Adjust volume using the volume control.

Anti-Shock Protection: The KLIM Discover features an anti-shock chip that buffers 100 seconds of audio to prevent interruptions during movement. This also helps protect your CDs from damage.

5.2. Bluetooth Connectivity

The KLIM Discover can connect to Bluetooth headphones or speakers.

1. Ensure your Bluetooth headphones/speaker are in pairing mode.
2. Press the **Bluetooth** button on the KLIM Discover. The Bluetooth icon on the display will flash, indicating it's searching for devices.
3. Once connected, the Bluetooth icon will become solid.

Note on Car Bluetooth: Bluetooth compatibility varies with car infotainment systems. While the device strives for broad compatibility, some car systems may experience connection issues due to software updates. If you encounter problems, consider using the FM Transmitter or AUX connection options.

5.3. FM Radio

1. Press the **FM Radio/Speed -** button to enter FM radio mode.
2. Use the **MODE/FM (+)** and **PROG/FM (-)** buttons to tune to desired frequencies.
3. The included headphones act as the antenna for better reception.

5.4. FM Transmitter (Car Connectivity)

The FM transmitter allows you to play audio from the KLIM Discover through your car's FM radio.

1. Press the **FM Transmitter** button to activate the feature.
2. The display will show an FM frequency.
3. Tune your car's FM radio to the same frequency displayed on the KLIM Discover.
4. Play your CD or SD card audio, and it will transmit wirelessly to your car's speakers.



Image 5.1: Connection options for car audio systems: Bluetooth, FM Transmitter, and AUX cable.

Other Car Connection Options:

- **AUX Cable:** If your car has an AUX input, connect the KLIM Discover using a 3.5mm audio cable (not included).
- **Car Bluetooth:** Attempt to pair the KLIM Discover with your car's Bluetooth system as described in section 5.2.

5.5. SD Card Playback

1. Insert a formatted SD/TF card (up to 32GB) into the SD card slot.
2. The player will automatically switch to SD card mode or you may need to press the **MODE** button to select it.
3. Supported audio formats include MP3 and WMA.
4. Use the navigation buttons to select and play tracks.

5.6. Recording Function

The KLIM Discover supports recording audio onto an inserted SD card. Refer to the on-screen prompts or specific instructions for initiating recording using the **EQ/Record** button.

5.7. Equalizer (EQ)

Press the **EQ/Record** button repeatedly to cycle through different equalizer presets (e.g., Pop, Jazz, Rock, Classic, Bass, Flat) to customize your audio experience.

5.8. Playback Speed Control

Use the **DIR/Speed +** and **FM Radio/Speed -** buttons to adjust the playback speed of your audio.

6. MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the player. For the lens inside the CD compartment, use a specialized CD lens cleaner.
- **Storage:** Store the player in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** To prolong battery life, avoid fully discharging the battery frequently. Charge it regularly, even if not in use for extended periods.
- **CD Handling:** Always handle CDs by their edges. Keep them clean and free of scratches to ensure optimal playback.

7. TROUBLESHOOTING

Problem	Possible Cause	Solution
Device does not power on.	Low battery; Power switch in OFF position.	Charge the device; Slide power switch to ON.
CD does not play or skips.	CD is dirty, scratched, or inserted incorrectly; CD compartment not closed properly.	Clean the CD; Ensure CD is inserted correctly; Close compartment firmly.
No sound from headphones.	Headphones not connected; Volume too low; Headphones faulty.	Ensure headphones are fully plugged in; Increase volume; Test with different headphones.
Bluetooth connection issues.	Device not in pairing mode; Target device too far or not in pairing mode; Car infotainment system incompatibility.	Ensure both devices are in pairing mode and close to each other; Refer to car manual; Use FM Transmitter or AUX as alternatives.
FM Transmitter not working.	Car radio not tuned to correct frequency; Interference.	Ensure car radio matches player's FM frequency; Try a different, clear frequency.
SD card not recognized.	Card inserted incorrectly; Card not formatted or corrupted; Unsupported file format.	Reinsert card; Ensure card is formatted correctly (FAT32); Check for MP3/WMA files.

If you continue to experience issues, please contact KLIM customer service for assistance.

8. SPECIFICATIONS







Feature	Detail
Brand	KLIM
Model Name	Discover
Model Number	KLIM Nomad (KLDIS5373)
Connectivity Technology	Bluetooth
Special Features	Bluetooth, FM radio, FM transmitter, SD card reader, Recorder
Compatible Media Types	CD, SD Card, MP3, WMA
Supported Audio Formats	MP3, WMA
Memory Storage Capacity	Up to 32 GB (SD/TF Card)
Tuner Technology	FM
Display Technology	LCD
Power Source Type	Battery Powered (Rechargeable Lithium-Cobalt)
Battery Average Life	12+ Hours
Product Dimensions	14 x 14 x 2.8 cm
Item Weight	250 g
Included Components	KLIM Discover CD Player, KLIM Fusion Wired Headphones, Ear Accessories, USB-C Charging Cable, Carry Pouch

9. WARRANTY AND SUPPORT

The KLIM Discover Portable CD Player comes with a **5-year product support** from KLIM Technologies. This ensures long-term assistance for any issues you may encounter. Additionally, you are covered by a **30-day return window**, allowing you to return the product for a full refund if you are not satisfied with your purchase. For technical support, warranty claims, or any questions, please visit the official KLIM website or contact their customer service directly. Contact details can typically be found on the KLIM website or in the packaging materials.



Related Documents - KLIM Nomad

	<p>KLIM Discover Portable CD Player User Manual</p> <p>Comprehensive user manual for the KLIM Discover portable CD player, covering setup, playback options, features, FM transmitter, Bluetooth connectivity, and troubleshooting.</p>
	<p>KLIM Speaker User Manual: High-Fidelity Portable CD Player with Rechargeable Battery</p> <p>Comprehensive user manual for the KLIM Speaker, a portable CD player offering high-fidelity sound reproduction. Learn about its features, operation, charging, playback options, and troubleshooting. Includes package contents, technical specifications, and safety guidelines.</p>
	<p>KLIM Nomad Portable CD Player User Manual</p> <p>Comprehensive user manual for the KLIM Nomad portable CD player, covering safety instructions, product features, specifications, operation, troubleshooting, and more. Includes multilingual support.</p>
	<p>KLIM Journey CD Player User Manual</p> <p>Comprehensive user manual for the KLIM Journey portable CD player, covering setup, operation, features, and troubleshooting. Learn how to play CDs and TF cards, connect Bluetooth devices, use the FM transmitter, and more.</p>
	<p>KLIM Discman User Manual: Portable CD Player Guide</p> <p>Comprehensive user manual for the KLIM Discman portable CD player, covering setup, operation, features, and troubleshooting. Includes safety instructions and technical specifications.</p>
	<p>KLIM Boombox User Manual: Features, Setup, and Operation</p> <p>Comprehensive user manual for the KLIM Boombox, covering safety warnings, controls, specifications, setup, CD playback, Bluetooth connectivity, FM radio, AUX input, USB playback, and troubleshooting.</p>