

Jocca PARENT FREIDORA

JOCCA 5L Digital Air Fryer Instruction Manual

Model: PARENT FREIDORA

INTRODUCTION

Thank you for choosing the JOCCA 5L Digital Air Fryer. This appliance is designed to cook your favorite foods with little to no oil, providing a healthier alternative to traditional frying. Please read this instruction manual carefully before using the appliance to ensure safe operation, optimal performance, and to extend the product's lifespan. Keep this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electric shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Contact customer service for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Ensure the appliance is placed on a stable, heat-resistant surface, away from walls and other appliances, with at least 10 cm of free space on the back, sides, and above.
- The appliance features an automatic shut-off function.

PRODUCT OVERVIEW

Familiarize yourself with the components of your JOCCA Digital Air Fryer before first use.



Figure 1: Front view of the JOCCA 5L Digital Air Fryer, showing the digital control panel and handle.



Figure 2: The air fryer with its cooking basket partially pulled out, revealing the interior.



Figure 3: Rear view of the air fryer, highlighting the air outlet vent. Ensure this area is not obstructed during operation.

Components:

- **Main Unit:** Houses the heating element and fan.
- **Digital Control Panel:** Touchscreen interface for setting time, temperature, and selecting presets.
- **Cooking Basket:** Removable, non-stick basket for holding food.
- **Basket Handle:** For safely pulling out and inserting the cooking basket.
- **Air Outlet Vent:** Located at the rear, releases hot air during cooking.

Digital Control Panel Functions:

- **Power Button:** Turns the appliance on/off and starts/pauses cooking.
- **Temperature Control (Up/Down Arrows):** Adjusts cooking temperature.

- **Time Control (Up/Down Arrows):** Adjusts cooking time.
- **Preset Icons:** Pre-programmed settings for common foods (e.g., fries, chicken, fish).

SETUP

1. **Unpacking:** Carefully remove the air fryer and all packaging materials. Ensure all components are present and undamaged.
2. **Initial Cleaning:** Before first use, clean the cooking basket and pan with hot water, dish soap, and a non-abrasive sponge. Wipe the interior and exterior of the main unit with a damp cloth. Ensure all parts are completely dry before use.
3. **Placement:** Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is adequate air circulation around the appliance, with at least 10 cm (4 inches) of clear space on all sides, especially around the air outlet vent at the back. Do not place it directly against a wall or under cabinets.
4. **Power Connection:** Plug the power cord into a grounded electrical outlet.

OPERATING INSTRUCTIONS

General Operation:

1. **Prepare Food:** Place your ingredients into the cooking basket. Do not overfill the basket to ensure even cooking.
2. **Insert Basket:** Slide the cooking basket back into the main unit until it clicks securely into place.
3. **Power On:** Press the Power button on the digital control panel. The display will illuminate.
4. **Set Temperature and Time:**
 - Use the temperature up/down arrows to set the desired cooking temperature.
 - Use the time up/down arrows to set the desired cooking time (up to 60 minutes).
5. **Use Presets (Optional):** Alternatively, select one of the preset icons for common foods. The air fryer will automatically set the recommended time and temperature for that food type. You can adjust these settings manually if needed.
6. **Start Cooking:** Press the Power button again to start the cooking process. The fan and heating element will activate.
7. **Shake Basket (Mid-Cycle):** For many recipes, especially fries or smaller items, it is recommended to shake the basket halfway through the cooking time to ensure even browning. Pull out the basket by its handle (the air fryer will pause automatically), shake the contents, and then reinsert the basket. Cooking will resume.
8. **Cooking Completion:** The air fryer will beep when the cooking time is complete and automatically shut off.
9. **Remove Food:** Carefully pull out the cooking basket using the handle. Use heat-resistant tongs to remove the cooked food. Avoid tipping the basket directly as excess oil may collect at the bottom.
10. **Power Off:** Press and hold the Power button to turn off the appliance completely. Unplug the air fryer from the wall outlet after use.

Preheating:

For best results, especially with certain foods, preheating the air fryer for 3-5 minutes at the desired cooking

temperature is recommended. Simply set the temperature and time (e.g., 5 minutes), start the cycle, and then add your food once the preheating is complete.

MAINTENANCE AND CLEANING

Regular cleaning will help maintain the performance and longevity of your air fryer.

1. **Unplug and Cool:** Always unplug the air fryer and allow it to cool completely before cleaning.
2. **Clean Cooking Basket and Pan:**
 - The cooking basket and pan have a non-stick coating. Clean them with hot water, dish soap, and a non-abrasive sponge.
 - For stubborn food residue, soak the basket and pan in hot water with dish soap for about 10 minutes before cleaning.
 - **Note:** The cooking basket and pan are **NOT** dishwasher safe. Hand wash only.
3. **Clean Interior:** Wipe the interior of the air fryer with a damp cloth. If necessary, use a mild detergent. Ensure no water enters the heating element area.
4. **Clean Exterior:** Wipe the exterior of the air fryer with a damp cloth. Do not use abrasive cleaners or scouring pads, as they may damage the surface.
5. **Heating Element:** If necessary, gently clean the heating element with a soft brush to remove any food residue.
6. **Storage:** Ensure all parts are clean and dry before storing the air fryer in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance is not plugged in. Power outlet is not working. Basket is not inserted correctly.	Plug the power cord into a grounded wall outlet. Check the power outlet by plugging in another appliance. Push the cooking basket firmly into the main unit until it clicks.
Food is not cooked evenly.	Basket is overcrowded. Food was not shaken during cooking.	Cook food in smaller batches. Shake the basket halfway through the cooking process.
White smoke comes from the appliance.	Grease residue from previous use. Cooking fatty food.	Clean the basket and pan thoroughly after each use. Remove excess oil from food before air frying.
Food is not crispy.	Too much moisture in food. Not enough oil (if applicable).	Pat food dry before cooking. Lightly brush or spray food with a small amount of oil.

SPECIFICATIONS



Figure 4: Dimensions of the JOCCA 5L Digital Air Fryer: 25.81 cm (width) x 29.11 cm (depth) x 31.8 cm (height).

- **Model Name:** PARENT FREIDORA
- **Brand:** Jocca
- **Capacity:** 5 Liters
- **Power:** 1450 Watts
- **Voltage:** 240 Volts
- **Control Method:** Touch
- **Special Features:** Automatic Shut-off, Temperature Control
- **Non-stick Coating:** Yes
- **Dishwasher Safe:** No (for basket/pan)
- **Product Dimensions (L x W x H):** 25.8 x 29.1 x 31.8 cm
- **Weight:** 4.6 kilograms

WARRANTY AND SUPPORT

This JOCCA appliance is manufactured with high-quality materials and undergoes strict quality control. For information regarding warranty terms and conditions, please refer to the warranty card included with your purchase or contact your retailer. For technical support or service inquiries, please contact JOCCA customer

service or the authorized distributor in your region.
Keep your purchase receipt as proof of purchase for warranty claims.