

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Philips](#) /

› [Philips Steamer 3000 Series with XL StyleBoard STE3180/30 User Manual](#)

Philips STE3180/30

Philips Steamer 3000 Series with XL StyleBoard STE3180/30 User Manual

Model: STE3180/30

INTRODUCTION

Thank you for choosing the Philips Steamer 3000 Series with XL StyleBoard STE3180/30. This garment steamer is designed to provide efficient and convenient wrinkle removal for your clothes. Please read this manual carefully before using the appliance and keep it for future reference.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Ensure the voltage indicated on the appliance corresponds to your local mains voltage before connecting.
- Do not immerse the appliance, power cord, or plug in water or other liquids.
- Keep the steam head away from your body and hands during operation to avoid steam burns.
- Always unplug the appliance before filling or emptying the water tank, and during cleaning or maintenance.
- Do not operate the appliance with a damaged cord or plug, or if it has been dropped or damaged.
- Keep out of reach of children.

PACKAGE CONTENTS

Verify that all items are present in the package:

- Philips Steamer 3000 Series Base Unit
- XL StyleBoard
- Steam Head with Hose
- Adjustable Pole
- Water Tank

- MyEssence Fragrance Infuser (if included)
- User Manual (this document)



Image: Retail box showing the Philips Steamer 3000 Series with XL StyleBoard.

SETUP AND ASSEMBLY

1. Assembling the Steamer

1. Place the base unit on a stable, flat surface.
2. Insert the adjustable pole into the designated slot on the base unit until it clicks into place.
3. Attach the XL StyleBoard to the adjustable pole. Ensure it is securely fastened.
4. Connect the steam hose to the steam outlet on the base unit.
5. Hang the steam head on the hanger provided on the adjustable pole.







Image: Fully assembled Philips Steamer 3000 Series, showing the base, pole, StyleBoard, and steam head.

2. Filling the Water Tank

1. Ensure the appliance is unplugged from the power outlet.
2. Remove the water tank from the base unit.
3. Open the water tank cap and fill it with clean tap water up to the maximum fill line. Do not overfill.
4. Close the cap securely and place the water tank back into the base unit.



OPERATING INSTRUCTIONS

1. Powering On and Selecting Steam Settings

1. Plug the power cord into a suitable electrical outlet.
2. Turn the power dial on the base unit to the desired steam setting. The appliance features 5 steam settings for various fabric types.
3. Wait for the appliance to heat up. The indicator light will show when it is ready to use.





Image: Close-up of the steamer head, showing the steam control button.

2. Steaming Garments

1. Hang your garment on a hanger on the adjustable pole or place it directly on the XL StyleBoard.
2. Hold the steam head close to the fabric, ensuring not to touch delicate materials directly unless specified.
3. Move the steam head slowly downwards over the fabric, allowing the steam to relax the fibers and remove wrinkles.
4. Utilize the pointed metal steam plate tip for hard-to-reach areas like collars, cuffs, and pleats.



Image: A person using the Philips Steamer to remove wrinkles from a shirt placed on the XL StyleBoard.

3. Using MyEssence Fragrance Infuser

The MyEssence feature allows you to refresh your clothes with your favorite scents.

1. Locate the MyEssence fragrance infuser compartment (refer to appliance diagram if available).

2. Add a few drops of your preferred essential oil or fragrance to the infuser pad.
3. Close the compartment securely. The steam will carry the fragrance to your garments.

MAINTENANCE AND CLEANING

1. General Cleaning

- Always unplug the appliance and allow it to cool completely before cleaning.
- Wipe the exterior of the base unit and steam head with a soft, damp cloth.
- Do not use abrasive cleaners or solvents.

2. Descaling (Calc-Clean)

Regular descaling is essential to maintain optimal performance and extend the life of your steamer. The frequency depends on water hardness and usage.

1. Ensure the appliance is unplugged and cool.
2. Remove the water tank and empty any remaining water.
3. Refer to the specific descaling instructions in the full manual or on the Philips support website for detailed steps, as procedures may vary.
4. Rinse the water tank thoroughly after descaling.

3. Storage

When not in use, store the steamer in a dry, safe place. Ensure the water tank is empty and the appliance is cool before storing.

TROUBLESHOOTING

If you encounter issues with your steamer, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No steam or low steam output.	Water tank empty, appliance not heated, calcification.	Fill water tank, allow to heat up, perform descaling.
Water leaking from steam head.	Condensation, overfilling water tank, calcification.	Allow appliance to heat fully, do not overfill, descale.
Appliance not turning on.	Not plugged in, power outlet issue.	Check power connection, try a different outlet.

If the problem persists, please contact Philips customer support.

SPECIFICATIONS

- **Model Number:** STE3180/30
- **Brand:** Philips
- **Power/Wattage:** 2000 watts

- **Voltage:** 240 Volts
- **Water Tank Capacity:** 2 Liters
- **Product Dimensions (L x W x H):** 31 x 32 x 172 cm
- **Item Weight:** 2.33 Kilograms
- **Auto Shutoff:** Yes
- **Product Benefits:** Remove Wrinkle
- **Features:** XL StyleBoard, 5 Steam settings, Pointed metal steam plate tip, MyEssence fragrance infuser

WARRANTY AND SUPPORT

Philips products are designed and manufactured to the highest quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, product registration, or to find a service center, please visit the official Philips website or contact their customer service helpline in your region.

You may also consider purchasing extended warranty options for additional coverage, if available.

© 2025 Philips. All rights reserved.