



[Manuals.plus](#) /

> [TEANDE](#) /

> TEANDE Pressure Washer 4500 1.8GPM 1800W High Electric Pressure Washer Power Washer Cleaner with All-in-one Spray Nozzle, Hose Reel, 20 Ft Hose & 35 Ft Wire for Cleaning Cars, Driveways, Patios User Manual

TEANDE T5310-BL22

TEANDE Pressure Washer 4500 User Manual

Model: T5310-BL22

INTRODUCTION

Thank you for choosing the TEANDE Pressure Washer 4500. This electric pressure washer is designed for efficient and powerful cleaning of various surfaces, including cars, driveways, patios, and more. This manual provides essential information for safe operation, assembly, maintenance, and troubleshooting to ensure optimal performance and longevity of your unit.

IMPORTANT SAFETY INFORMATION

Always read and understand all safety warnings and instructions before operating the pressure washer. Failure to follow these instructions may result in electric shock, fire, and/or serious injury.

- **WARNING:** Do not direct spray at people, pets, or electrical devices.
- **WARNING:** Always wear appropriate personal protective equipment, including eye protection, when operating the pressure washer.
- **WARNING:** Ensure the power cord and plug are in good condition. Do not use if damaged.
- **WARNING:** Always disconnect the power supply before performing any maintenance or cleaning.
- **WARNING:** This appliance is equipped with a GFCI (Ground Fault Circuit Interrupter) for your safety. Do not bypass or disable this device.
- Keep children and bystanders away from the operating area.
- Use only clean water with the pressure washer.
- Do not operate the pressure washer in an explosive atmosphere, such as in the presence of flammable liquids, gases, or dust.

WHAT'S INCLUDED

Verify that all components are present before assembly. If any parts are missing or damaged, contact customer support.

LIST OF CONTENTS



Figure 1: Overview of all components included with the TEANDE Pressure Washer. This includes the main pressure washer unit, high-pressure hose, spray gun, extension wand, adjustable nozzle, soap bottle, cleaning pin, cord hook, gun hook, and the user manual.

- TEANDE Pressure Washer Main Unit
- High Pressure Hose (20 ft)
- Spray Gun
- Extension Wand
- Adjustable Nozzle
- Soap Bottle (500ml Foam Cannon)
- Cleaning Pin
- Cord Hook
- Gun Hook
- User Manual

SETUP AND ASSEMBLY

Follow these steps to assemble your pressure washer before first use.



Figure 2: Visual guide for the 5-step assembly process of the pressure washer. This shows connecting the nozzle to the extension wand, then the wand to the spray gun, connecting the high-pressure hose to the spray gun, connecting the other end of the high-pressure hose to the pressure washer unit, and finally connecting the water supply hose to the unit's inlet.

1. **Attach Nozzle:** Insert the adjustable nozzle into the end of the extension wand until it clicks securely into place.
2. **Attach Extension Wand:** Connect the extension wand (with nozzle attached) to the spray gun. Ensure a firm connection.
3. **Connect Spray Gun to High Pressure Hose:** Screw the high-pressure hose onto the spray gun handle. Tighten by hand.
4. **Connect High Pressure Hose to Unit:** Connect the other end of the high-pressure hose to the outlet port on the pressure washer unit.
5. **Connect Water Supply:** Attach your garden hose (not included) to the water inlet on the pressure washer. Ensure the water supply is turned on before starting the unit.

Before plugging in the unit, ensure all connections are secure and there are no kinks in the hoses.

OPERATING INSTRUCTIONS

Starting the Pressure Washer

1. Ensure the unit is connected to a suitable power outlet with GFCI protection.
2. Turn on the water supply completely.
3. Squeeze the trigger on the spray gun to purge air from the pump and hose until a steady stream of water emerges.
4. Turn the power switch on the pressure washer to the "ON" position.
5. The Total Stop System (TSS) will automatically shut off the pump when the trigger is not engaged, saving energy and extending the life of the pump.

Adjusting the Nozzle and Using the Foam Cannon

ADJUSTABLE NOZZLE

Clean all stain just with our nozzle



VS



Figure 3: The integrated adjustable nozzle allows for easy switching between narrow, wide, and soap spray patterns by simply twisting the nozzle. This eliminates the need for multiple interchangeable tips.

- **Adjustable Nozzle:** The TEANDE Pressure Washer features an integrated adjustable nozzle. Simply twist the nozzle to change the spray pattern from a narrow, high-impact stream to a wider fan spray.
- **Foam Cannon:** To use the foam cannon, fill the included soap bottle with appropriate pressure washer detergent. Attach the soap bottle to the spray gun. Twist the nozzle to the "Soap" setting to apply detergent. After applying soap, remove the soap bottle and switch back to a water spray setting to rinse.



Figure 4: The TEANDE Pressure Washer is versatile for various household cleaning tasks, including washing vehicles, cleaning porches and patios, removing grime from siding, refreshing outdoor furniture, and even gentle cleaning for pets (use caution and appropriate settings).

Safety Lock and Total Stop System (TSS)



Figure 5: Key features of the pressure washer include a safety lock switch on the trigger, a child safety lock button for added security, a convenient hose reel for easy storage, an IPX5 waterproof rating for durability, and a compact design with wheels for easy portability.

- **Safety Lock Switch:** The spray gun features a safety lock switch to prevent accidental operation. Always engage the lock when the pressure washer is not in use.
- **Child Safety Lock Button:** An additional child safety lock button provides extra security, preventing unintended use.
- **Total Stop System (TSS):** The TSS automatically shuts off the pump when the trigger is released, prolonging pump life and conserving energy. The pump restarts automatically when the trigger is pressed again.

MAINTENANCE

Regular maintenance ensures the longevity and optimal performance of your pressure washer.

- **After Each Use:**
 - a. Turn off the power switch and water supply.
 - b. Squeeze the trigger to release any remaining pressure in the system.

- c. Disconnect the garden hose and high-pressure hose.
 - d. Drain all water from the pump and hoses to prevent freezing in cold weather.
 - e. Clean the exterior of the unit with a damp cloth.
- **Nozzle Cleaning:** If the nozzle becomes clogged, use the included cleaning pin to clear any debris from the nozzle opening.
 - **Water Inlet Filter:** Periodically check and clean the water inlet filter to prevent debris from entering the pump.
 - **Storage:** Store the pressure washer in a dry, frost-free environment. Use the hose reel and integrated storage for accessories to keep everything organized.

TROUBLESHOOTING

Refer to this section for common issues and their solutions. If the problem persists, contact customer support.

Problem	Possible Cause	Solution
Pressure washer does not start.	No power supply; GFCI tripped; Power switch off.	Check power connection; Reset GFCI; Turn power switch ON.
Low pressure.	Insufficient water supply; Clogged nozzle; Air in pump.	Ensure full water supply; Clean nozzle with pin; Purge air by squeezing trigger with water on.
Motor stops frequently (TSS).	Normal operation of Total Stop System.	This is normal. The motor stops when the trigger is released and restarts when pressed.
Water leaks from connections.	Loose connections; Damaged O-rings.	Tighten all connections; Inspect and replace O-rings if damaged.
TEANDE pressure washer PSI is true?	Concern about advertised pressure.	TEANDE pressure washers have passed CSA standard pressure tests to ensure accurate pressure ratings.
What to do if my pressure washer doesn't work?	Malfunction or damage.	If caused by accessories, contact us for replacement/reissue. If machine damaged due to non-human reasons, we will provide expert consultation or free replacement. Contact customer support immediately.

SPECIFICATIONS

Technical specifications for the TEANDE Pressure Washer 4500.

- **Brand:** TEANDE
- **Model Number:** T5310-BL22
- **Power Source:** Electric
- **Color:** Blue with All-in-one Spray Nozzle
- **Maximum Pressure:** 3000 PSI (Pound per Square Inch)
- **Maximum Flow Rate:** 2.5 GPM (Gallons Per Minute)
- **Motor:** 1800W
- **Item Weight:** Approximately 17.96 pounds
- **Product Dimensions (L x W x H):** 11.42" x 11.42" x 25.59"
- **High Pressure Hose Length:** 20 Feet
- **Power Cord Length:** 35 Feet (with GFCI plug)

- **Waterproof Rating:** IPX5

WARRANTY AND SUPPORT

TEANDE stands behind the quality of its products.



EASILY WASHING OFF YOUR WASHING PROBLEMS

Whatever your cleaning challenge, type-5284 can help you conquer it easily.
We are committed to being the experts in home pressure washers, all for your convenience.

Figure 6: TEANDE offers a 2-year warranty period for all pressure washer products, emphasizing customer satisfaction and support.

- **Warranty Period:** We provide a 2-year warranty period for all TEANDE pressure washer products.
- **Customer Support:** If you encounter any questions or issues, please contact our customer support team immediately. We aim to reply within 24 hours.
- **Feedback:** We welcome your feedback on the product to help us improve our pressure washers and services, ensuring a better shopping experience for you.

For further assistance, please visit the official TEANDE store or contact us through the platform where you purchased the product.

[Visit the TEANDE Store on Amazon](#)