

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Casio](#) /

› [Casio LK-S450 Premium Keyboard Pack Instruction Manual](#)

Casio LK-S450

Casio LK-S450 Premium Keyboard Pack Instruction Manual

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Casio LK-S450 Premium Keyboard Pack. This pack includes the portable keyboard, a dedicated stand, an AC adapter, and headphones. The LK-S450 features 61 full-size, touch-responsive keys with Casio's Key Lighting system, an easy-to-read LCD display, and intuitive controls designed to enhance your musical experience.



Image: Casio LK-S450 Portable Keyboard with lighted keys, showcasing the full keyboard layout and control panel.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- Casio LK-S450 Portable Keyboard
- Keyboard Stand
- AC Adapter
- Headphones
- Music Rest (often included with keyboard)

SETUP INSTRUCTIONS

1. **Assemble the Keyboard Stand:** Follow the instructions provided with the stand to ensure it is securely assembled. Adjust the height to a comfortable playing position.



Image: A black X-style keyboard stand, ready for keyboard placement.

2. **Place the Keyboard:** Carefully place the Casio LK-S450 keyboard onto the assembled stand, ensuring it is stable and centered.
3. **Connect the AC Adapter:** Insert the AC adapter plug into the DC 9.5V jack on the rear panel of the keyboard. Plug the other end into a standard wall outlet.



Image: Rear view of the Casio LK-S450 keyboard, highlighting the USB ports, audio jacks, and power input.

4. **Connect Headphones (Optional):** For private practice, plug the included headphones into the 3.5mm Headphones Jack located on the rear panel.



Image: A pair of over-ear headphones with silver and black components.

5. **Power On:** Press and hold the Power button on the keyboard's control panel until the LCD display illuminates.

OPERATING INSTRUCTIONS

Power On/Off

To turn on the keyboard, press and hold the **Power** button. To turn off, press and hold the **Power** button again until the display shuts down.

Adjusting Volume

Use the **Volume +** and **Volume -** buttons on the control panel to adjust the overall sound output level.

Selecting Tones and Rhythms

The LK-S450 features a wide variety of tones and rhythms. Use the rotary dial and corresponding buttons on the control panel to browse and select different instrument sounds (tones) and accompaniment patterns (rhythms). The LCD display will show your current selection.



Image: Top view of the Casio LK-S450 keyboard, highlighting the central control panel with its LCD screen, function buttons, and rotary dial for navigation.

Key Lighting System

The integrated Key Lighting system assists in learning by illuminating the keys to be played. Refer to the on-screen prompts and the user manual for specific lesson modes and how to utilize this feature effectively.

Connectivity

The MicroUSB port allows you to connect your LK-S450 to a PC, Mac, iOS, or Android device. This enables MIDI communication for use with music software like Casio Music Space, without requiring additional drivers or complex installation.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to wipe the surface of the keyboard. For stubborn dirt, slightly dampen the cloth with water and a mild, non-abrasive cleaner. Avoid excessive moisture.
- **Storage:** Store the keyboard in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Handling:** Avoid dropping the keyboard or subjecting it to strong impacts. Do not place heavy objects on the keys or control panel.

TROUBLESHOOTING

- **No Sound:** Check if the power is on and the volume is turned up. Ensure headphones are not plugged in

if you intend to use the speakers.

- **Keys Not Responding:** Verify the keyboard is powered on. If specific keys are unresponsive, contact customer support.
- **Connectivity Issues:** Ensure the MicroUSB cable is securely connected to both the keyboard and your device. Check device settings and software for proper MIDI input recognition.
- **Distorted Sound:** Lower the volume. If using external speakers, check their connections and settings.

SPECIFICATIONS

- **Model Name:** LKS450
- **Number of Keys:** 61, touch-responsive
- **Dimensions (Keyboard):** 3.31"D x 10.16"W x 3.31"H (258 mm x 84 mm x 84 mm)
- **Item Weight:** Approximately 21.9 pounds (including accessories in pack)
- **Power Source:** Corded Electric (AC Adapter included)
- **Connectivity Technology:** USB (MicroUSB port to host, USB Type A to device)
- **Headphones Jack:** 3.5mm Jack
- **Supported Software:** Casio Music Space
- **Operating System Compatibility:** Windows, macOS, iOS, Android
- **Special Feature:** Key Lighting System, Portable

WARRANTY AND SUPPORT

Your Casio LK-S450 Premium Keyboard Pack comes with a manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions. For technical support, service, or additional information, please visit the official Casio website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

Online Support: [Visit the Casio Store on Amazon](#)