

Looki LKI-AF1

Looki Dual Airfryer XXL User Manual

Model: LKI-AF1

1. PRODUCT OVERVIEW

The Looki Dual Airfryer XXL is a powerful 2000W hot air fryer designed to make cooking fun, tasty, and healthy. It features two independent cooking zones, allowing you to prepare two different dishes simultaneously without flavor transfer. With a total capacity of 18.4 liters (9.2 liters per basket), it offers ample space for family meals or entertaining.

Key advantages of your Looki Dual Airfryer:

- **Simultaneous Cooking:** Prepare diverse dishes at the same time thanks to the dual cooking zones.
- **Customizable Settings:** Manually adjust temperature (50-200°C) and time (0-60 minutes), or choose from 12 pre-programmed settings for optimal convenience.
- **Generous Capacity:** Each basket has a 9.2L capacity, providing enough room for all your favorite meals.
- **Fast and Efficient:** Offers significantly faster cooking times compared to conventional ovens, ideal for busy schedules.



Image: The Looki Dual Airfryer XXL, showcasing its two independent cooking baskets filled with crispy chicken and golden fries.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using the appliance. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the airfryer on a stable, heat-resistant surface, away from walls or other appliances to allow for proper ventilation.
- Do not immerse the main unit, cord, or plug in water or other liquids.
- Ensure the voltage indicated on the appliance matches your local mains voltage before connecting.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- Close supervision is necessary when any appliance is used by or near children.
- The airfryer generates heat during operation. Do not touch hot surfaces. Use handles or oven mitts.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not block any ventilation openings.
- Do not place food directly into the heating chamber. Always use the removable baskets.

3. SETUP AND FIRST USE

3.1 Unpacking

1. Carefully remove the airfryer and all packaging materials from the box.
2. Remove any stickers or labels from the appliance.
3. Check that all parts are present and undamaged.

3.2 Before First Use

1. Clean the removable baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Do not fill the baskets with oil or any other liquid. This appliance works by hot air circulation.
4. Plug the airfryer into a grounded wall outlet.
5. Run the airfryer empty for about 10 minutes at 200°C to burn off any manufacturing residue. A slight odor may be present, which is normal. Ensure good ventilation.
6. Allow the appliance to cool down completely before cleaning it again.

4. OPERATING INSTRUCTIONS

The Looki Dual Airfryer XXL features an intuitive touch display for easy operation.



Image: Visual representation of the airfryer's key features, including its touch display and dual cooking capability.

4.1 Basic Operation

1. Place the airfryer on a stable, level, heat-resistant surface.
2. Plug the power cord into a grounded electrical outlet. The display will illuminate.
3. Pull out the desired basket(s) and place your ingredients inside. Do not overfill.
4. Slide the basket(s) back into the airfryer until they click into place.
5. Press the Power button to turn on the appliance.

4.2 Setting Time and Temperature

You can set the time and temperature independently for each basket (Zone 1 and Zone 2).



Image: The airfryer with its dimensions clearly marked, illustrating its compact yet spacious design.

1. Select either Zone 1 or Zone 2 on the touch display.
2. Use the temperature control buttons (up/down arrows) to set the desired temperature between 50°C and 200°C.
3. Use the time control buttons (up/down arrows) to set the desired cooking time between 0 and 60 minutes.
4. Repeat for the other zone if cooking two different items.
5. Press the Start/Pause button to begin cooking.

4.3 Using Pre-programmed Programs

The airfryer comes with 12 pre-programmed settings for common dishes. To use them:

1. Select Zone 1 or Zone 2.
2. Press the 'Menu' button repeatedly to cycle through the 12 pre-programmed options. The corresponding icon will light up.
3. Once you've selected a program, the default time and temperature will be displayed. You can adjust these manually if needed.
4. Press the Start/Pause button to begin cooking.

4.4 SMART-FINISH Function

The SMART-FINISH function allows two different foods with different cooking times to finish cooking at the same time. This is ideal for preparing a complete meal.



Image: An aerial view of the airfryer, highlighting its dual basket design for cooking two separate dishes simultaneously.

1. Load both baskets with your desired food.
2. Set the cooking time and temperature for Zone 1.
3. Set the cooking time and temperature for Zone 2.
4. Press the 'SMART-FINISH' button. The airfryer will automatically adjust the start times for each zone so they finish simultaneously.
5. Press the Start/Pause button to begin.

4.5 MATCH-COOK Function

The MATCH-COOK function allows you to easily duplicate the settings from one zone to the other, ensuring both baskets cook with the same time and temperature.

1. Set the desired cooking time and temperature for Zone 1.
2. Press the 'MATCH-COOK' button. The settings from Zone 1 will be copied to Zone 2.
3. Press the Start/Pause button to begin cooking both zones with identical settings.

5. MAINTENANCE AND CLEANING

Regular cleaning will ensure optimal performance and extend the lifespan of your airfryer. Always unplug the appliance and allow it to cool completely before cleaning.

5.1 Cleaning the Baskets and Crisper Plates

The removable baskets and crisper plates have a non-stick coating for easy cleaning.

1. Remove the baskets from the airfryer.
2. Wash the baskets and crisper plates with hot water, dish soap, and a non-abrasive sponge. For stubborn food residue, soak them in warm, soapy water for about 10 minutes.
3. Rinse thoroughly and dry completely before reassembling.
4. The baskets and crisper plates are generally dishwasher safe, but hand washing is recommended to preserve the non-stick coating.

5.2 Cleaning the Main Unit

1. Wipe the exterior of the airfryer with a damp cloth. Do not use abrasive cleaners or scouring pads.
2. Clean the interior of the airfryer with a damp cloth and mild detergent if necessary. Ensure no water enters the electrical components.
3. Never immerse the main unit in water or any other liquid.

6. TROUBLESHOOTING

If you encounter issues with your Looki Dual Airfryer XXL, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Airfryer does not turn on.	Not plugged in; Power outlet issue; Appliance malfunction.	Ensure the power cord is securely plugged into a working outlet. Check your circuit breaker. If the issue persists, contact customer support.
Food is not cooked evenly.	Baskets are overfilled; Food not shaken/flipped; Incorrect temperature/time.	Do not overfill baskets. Shake or flip food halfway through cooking. Adjust temperature and time as needed.
White smoke coming from the appliance.	Grease residue from previous use; Fatty ingredients.	Clean the baskets and interior thoroughly. For fatty foods, drain excess fat during cooking.
Appliance smells during first use.	Manufacturing residue.	This is normal. Run the airfryer empty for 10-15 minutes at 200°C before first use. Ensure good ventilation.

If the problem persists after trying these solutions, please contact Looki customer support.

7. SPECIFICATIONS

Feature	Specification
---------	---------------

Feature	Specification
Brand	Looki
Model Number	LKI-AF1
Color	Black
Product Dimensions (D x W x H)	37.5 x 42 x 39.5 cm
Capacity	9.2 Liters per basket (18.4 Liters total)
Power/Wattage	2000 Watts
Voltage	230V AC
Temperature Range	50°C - 200°C
Timer Range	0 - 60 minutes
Non-stick Coating	Yes
Interior Material	Metal



8. WARRANTY AND SUPPORT




Your Looki Dual Airfryer XXL is designed for durability and performance. For warranty information and customer support, please refer to the warranty card included with your purchase or visit the official Looki website. You can also contact the seller directly for assistance.

For further inquiries or technical support, please retain your proof of purchase.

© 2023 Looki. All rights reserved.

Related Documents - LKI-AF1

	<p>Looki L1 User Manual: Safety, Warranty, and Compliance Information</p> <p>Comprehensive guide to safety precautions, warranty terms, and regulatory compliance for the Looki L1 device, including FCC and EU directives.</p>
	<p>Looki 360° Pro Camera User Manual and Setup Guide</p> <p>Comprehensive guide for setting up and using the Looki 360° Pro Camera, including installation, app connection via QR code or AP mode, and important usage notes.</p>

	<p>LOOKI Tablet Instruction Manual - Setup, Operation, and Troubleshooting</p> <p>Comprehensive instruction manual for the LOOKI Tablet, detailing setup, basic operations, advanced features like Wi-Fi and Bluetooth, troubleshooting common issues, technical specifications, and warranty information.</p>
	<p>LOOKI Carpet Cleaner Instruction Manual</p> <p>Comprehensive instruction manual for the LOOKI Carpet Cleaner, detailing safety instructions, operation, cleaning, maintenance, and troubleshooting. Learn how to effectively use and care for your carpet cleaning device.</p>
	<p>Handleiding Looki BCS0150 V1.2: Installatie, Gebruik en FAQ</p> <p>Gedetailleerde gebruikershandleiding voor de Looki BCS0150 V1.2 smart security camera. Ontdek installatie-instructies, app-functies, tips en veelgestelde vragen voor een optimale beveiliging van uw woning.</p>
	<p>Looki L1 Quick Start Guide</p> <p>A concise guide to setting up and using the Looki L1 smart device, covering app download, power functions, AI assistant, recording, and charging.</p>