



Manuals.plus /

- › Perma Child Safety /
- › Perma Child Safety Retractable Baby Gate (Model 3119) Instruction Manual

Perma Child Safety 3119

Perma Child Safety Ret retractable Baby Gate (Model 3119)

Instruction Manual

INTRODUCTION

This instruction manual provides comprehensive guidance for the safe and effective use of your Perma Child Safety Ret retractable Baby Gate, Model 3119. This versatile gate is designed to create a secure barrier for infants aged 6-24 months and pets weighing 10-40 pounds, suitable for various indoor and outdoor openings.

SAFETY INFORMATION

- **Important Safety Warnings:** Always read and follow all instructions carefully before installation and use.
- This gate is intended for domestic use only.
- Suitable for children from 6 to 24 months. Not suitable for children over 24 months.
- Suitable for pets weighing 10-40 pounds.
- Never leave children unattended. This gate is not a substitute for adult supervision.
- Ensure the gate is securely installed and latched before use.
- Regularly check all parts for wear, damage, or loose components. Replace damaged parts immediately.
- Do not use this gate if any components are missing or damaged.
- This gate meets or exceeds ASTM International Safety Standards.

PACKAGE CONTENTS

Before beginning installation, verify all components are present:

- Ret retractable Mesh Gate Assembly
- Upper Gate Mount (1)
- Lower Gate Mount (1)
- Upper Catch Mount (1)
- Lower Catch Mount (1)
- Mounting Screws (various types for different surfaces)
- Wall Spacers (for baseboards/skirting)

- Installation Template

SETUP & INSTALLATION

The Perma Child Safety Ret retractable Baby Gate is designed for hardware mounting. It can be installed inside or outside of openings, including doorways, hallways, and at the top or bottom of stairs.

Tools Required: Drill, screwdriver, pencil, measuring tape.

1. Determine Placement and Mark Holes

Identify the desired location for your gate. The gate can extend up to 71 inches wide and is 33 inches tall.

Hold the installation guides vertically against the mounting surface, ensuring the end marked 'FLOOR' is even with the floor. Mark the screw hole positions.

Note: Leave at least 20mm (3/4") between the guide and the edge of the opening to ensure the gate won't overhang.


If installing over skirting boards or baseboards, use the provided spacers to ensure a flush fit. Measure the width of your skirting/baseboard and use the closest number of spacers to fit this width. Each spacer is 5mm (3/16") thick.

Multi Use Gate Placement

Install gate inside or outside of openings

Inside frame

71" Wide
(180cm)

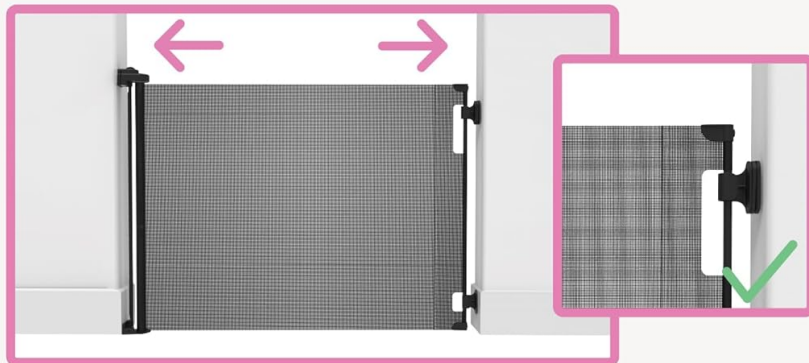

Outside frame

69" Wide
(175cm)

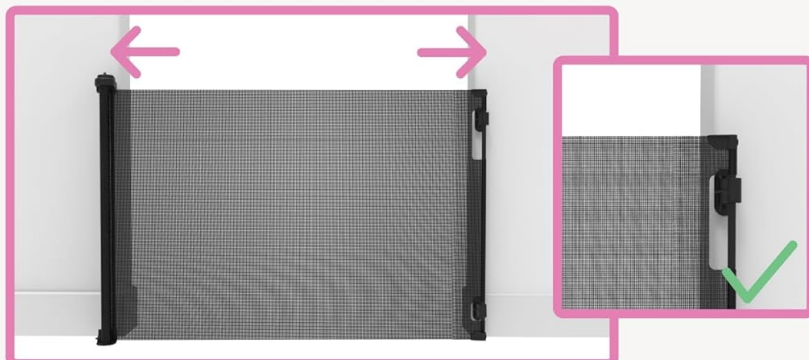 


Image: Multi-use gate placement options, showing installation inside and outside of openings.

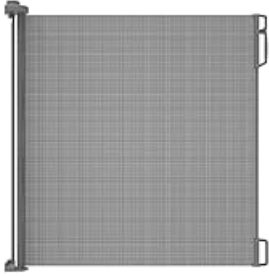 


Image: Close-up of a gate mount spacer, used for adjusting installation around baseboards.



Image: Close-up of a catch mount spacer, used for adjusting installation around baseboards.

2. **Install Gate Mounts**

Align the Upper and Lower Gate Mounts on the side where the gate will retract. Use the countersunk screws to secure each mount firmly.

Easy to Install in Minutes



Mark holes



Drill holes



Gate mounts



Catch mounts



Secure Gate



Finished



Image: Visual guide for easy installation, illustrating steps like marking and drilling holes for mounts.

3. Install Catch Mounts

Align the Catch Mounts on the opposite side where the gate will extend and latch. Use the panhead screws to secure each mount firmly.

4. Attach the Gate Assembly

Align the main gate assembly directly above the installed Gate Mounts. Slide the gate straight down over the mounts until it locks into place with a 'Click'.

5. Remove the Gate Assembly (Optional)

To remove the gate, push and hold the release button located on the top mount while sliding the gate upwards.

Installation Video Guide

Video: Official installation guide for the Perma Ret retractable Gate, demonstrating the setup process.

OPERATING INSTRUCTIONS

Your retractable gate features a 3-way locking system for flexible use:

- **1. Locked Position:** The gate is fully retracted and the button is twisted to the 'Locked' icon. The gate cannot be extended.

- **2. Quick Unlock:** Push and twist the button to align with the 'dot' icon, then release. Pull the handle to extend the gate. When the handle is released, the gate automatically locks the release mechanism, preventing further retraction until manually unlocked.
- **3. Full Unlock:** Twist the button to align with the 'unlocked' icon. This will unlock the gate to freely open and close without automatically locking the release mechanism. Manually re-engage the lock when desired.

3 Function Locking



Image: Detailed view of the 3-function locking mechanism, showing locked, quick unlock, and full unlock positions.

Extending and Retracting the Gate

1. To Extend the Gate:

Ensure the gate is in 'Quick Unlock' or 'Full Unlock' mode.

Grasp the handle and pull the mesh barrier across the opening.

Align the handle with the Catch Mounts and clip it securely into both the upper and lower catches.

Easily retracts No trip hazards



Push +
Twist to Unlock



Pull, No need
to hold button

One Handed Operation



Image: One-handed operation to extend the retractable gate, highlighting ease of use.

2. To Retract the Gate:

Unclip the handle from the Catch Mounts.

Hold the handle and guide the mesh barrier back into the main assembly. Always hold the handle and guide the gate evenly back into its original position to prevent rapid retraction.

MAINTENANCE

- Clean the mesh and plastic components with a damp cloth and mild soap. Do not use abrasive cleaners.
- Regularly inspect all mounting hardware and the gate mechanism for any signs of wear or damage. Tighten screws as needed.
- For outdoor use, periodically check for debris accumulation in the retraction mechanism and clear it to ensure smooth operation.

TROUBLESHOOTING

- **Gate does not retract smoothly:** Check for any obstructions in the retraction mechanism. Ensure the 'Full Unlock' mode is engaged if you desire free movement without automatic locking.
- **Gate does not latch securely:** Verify that the Catch Mounts are aligned correctly and securely fastened. Ensure

the mesh is fully extended and taut when attempting to latch.

- **Gate feels loose after installation:** Re-check all mounting screws and tighten them. Ensure spacers are used correctly if installing over baseboards.

SPECIFICATIONS

Feature	Detail
Model Number	3119
Dimensions	71 inches (W) x 33 inches (H)
Mounting Type	Hardware Mount
Material	Mesh (80% ABS, 15% PVC, 5% Aluminum)
Color	Gray
Age Range	6-24 months
Pet Weight Limit	10-40 pounds
Item Weight	3.42 pounds

WARRANTY AND SUPPORT

Perma Child Safety is committed to providing ultimate safety and quality. All our child safety items meet and exceed ASTM International Safety Standards.

For product support, installation assistance, or warranty inquiries, please visit the Perma Child Safety store or contact our customer service team. Our team is available to provide dutiful support throughout the product's lifecycle.