

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [InSinkErator](#) /

› [InSinkErator Power .75HP Garbage Disposal User Manual](#)

InSinkErator POWER 0.75HP

InSinkErator Power .75HP Garbage Disposal User Manual

Model: POWER 0.75HP

1. PRODUCT OVERVIEW

The InSinkErator Power .75HP 3/4 HP Garbage Disposal is designed to provide a clean, hygienic, and environmentally responsible solution for food waste in your kitchen. It efficiently grinds food scraps into tiny particles that are easily flushed down the drain, making kitchen cleanup simpler and more convenient.

This model is part of the InSinkErator Power Series, engineered to prevent clogs by grinding food scraps finer than standard disposals. It features a robust 3/4 HP Dura-Drive induction motor, offering significant torque to handle tough food waste like peach pits. The rust-resistant, stainless steel grind components ensure lasting durability. Its compact design allows for easy installation under most kitchen sinks, preserving valuable cabinet space.

Key features include reduced sound operation, an EZ Connect Hardwire Adapter for simplified electrical hookup, an EZ Removable Dishwasher Inlet Plug, and Lift and Latch technology for straightforward installation.



Figure 1: InSinkErator Power .75HP Garbage Disposal

2. SAFETY INFORMATION

IMPORTANT SAFETY INSTRUCTIONS

WARNING: Read all instructions thoroughly before installing or using this appliance. Failure to follow these instructions could result in electric shock, fire, or serious injury.

- **DANGER: Electrical Shock Hazard.** Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Consult a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded.
- **WARNING: Personal Injury.** Never put hands, fingers, or any other body parts into the garbage disposal. Always use a stopper or a long-handled utensil to push food into the disposer.
- Always turn off the power switch before attempting to clear a jam or remove an object from the disposer.
- Do not dispose of non-food items, large bones, corn husks, artichokes, or other fibrous materials that can cause jams or damage the unit.
- This appliance must be properly grounded.

3. WHAT'S INCLUDED

Your InSinkErator Power .75HP Garbage Disposal package includes the following components:

- Garbage Disposal Unit
- EZ Connect Hardwire Adaptor
- Discharge Tube
- Sink Stopper
- Sink Flange Assembly
- Wrenchette (for EZ Removable Dishwasher Inlet Plug)

Note: The EZ Connect Power Cord is sold separately and is required for installations where a power outlet is available.

What's Included



Do you have an outlet set-up?
EZ Connect Cord Sold Separately



Stainless Steel
Stopper



Removable
Baffle



Instruction
Manual



Wrenchette



EZ Connect
Hardwire
Adapter



Discharge
Tube
Assembly

Figure 2: Included Components

4. FEATURES

- **Powerful 3/4 HP Dura-Drive Induction Motor:** Provides heavy-duty grinding power and maximum durability to handle tough food scraps.
- **2-Stage MultiGrind Technology:** Designed to prevent clogs by grinding food scraps finer, even challenging items like peach pits.

Handles Tough Food Scraps Like Peach Pits



2-Stage MultiGrind® Technology

Finer Grind Designed to Help Prevent Clogs*

*Compared to InSinkErator® 1-stage grind

Figure 3: 2-Stage MultiGrind Technology

- **EZ Connect Hardwire Adapter:** Simplifies electrical connections for hardwire setups, making installation easier.
- **EZ Removable Dishwasher Inlet Plug:** Can be quickly removed and reinstalled using the included wrenchette, streamlining dishwasher hookup.
- **Lift and Latch Technology:** Simplifies installation, allowing the disposal to be attached with two hands for a faster, hassle-free setup.

INSTALLATION MADE EZ.

Our Easiest Installation Ever!

LIFT AND LATCH® TECHNOLOGY

Simplifies installation so the disposal can be attached with two hands.



REMOVABLE DISHWASHER INLET

Can be quickly removed and reinstalled with the included wrenchette.

EZ CONNECT DISPOSAL

Simplified connections for hardwire and outlet set-ups.



Figure 4: Installation Made EZ

- **Reduced Sound Operation:** Operates with significantly lower noise levels compared to standard disposals, enhancing kitchen comfort.

55% Quieter*



*Compared to Badger® 5

Figure 5: Reduced Sound

- **Compact Design:** Space-saving design fits easily under the kitchen sink, leaving room for other kitchen necessities.
- **Septic Safe:** Suitable for use with properly maintained septic systems.
- **Rust-Resistant Components:** Stainless steel grind components ensure long-lasting durability.

5. SETUP & INSTALLATION

Pre-Installation Checklist

- Ensure power to the disposal circuit is turned OFF at the breaker panel before beginning installation.
- Gather necessary tools: screwdriver, pliers, safety glasses, and a flashlight.
- Verify all included components are present (refer to Section 3).

Removing Old Disposal (if applicable)

1. Disconnect the power to the old disposal at the circuit breaker.

2. Disconnect the drain lines from the old disposal.
3. Support the disposal and twist the mounting ring counter-clockwise to detach it from the sink flange. Carefully lower and remove the old unit.

Installing New Disposal

1. **Mounting Assembly:** If replacing an existing InSinkErator unit, the existing mounting assembly may be compatible. Otherwise, install the new sink flange assembly according to the detailed instructions in the provided manual. The Lift and Latch technology simplifies this process.
2. **Electrical Connection:** This unit features an EZ Connect Hardwire Adapter. Connect the household electrical wires to the adapter: black (live) to black, white (neutral) to white, and green/bare (ground) to green. Secure the connections.



Figure 6: EZ Connect Hardwire Adapter

3. **Dishwasher Connection:** If connecting a dishwasher, remove the EZ Removable Dishwasher Inlet Plug using the included wrenchette. Connect the dishwasher drain hose to the inlet.
4. **Drain Connection:** Attach the discharge tube assembly to the disposal. Connect the disposal to the household drain lines, ensuring all connections are tight and leak-free.
5. **Attach Disposal to Mounting Assembly:** Lift the disposal and align the three mounting tabs on the disposal with the mounting ring. Twist the disposal clockwise until it locks securely into place.

Installation Videos

Your browser does not support the video tag. Please update your browser.

Video 1: InSinkErator Next Generation Garbage Disposals EZ Install. This video demonstrates the simplified installation process for InSinkErator garbage disposals.

Your browser does not support the video tag. Please update your browser.

Video 2: InSinkErator Next Generation Garbage Disposals EZ Connect. This video highlights the EZ Connect features for quick and easy electrical hookup.

6. OPERATING INSTRUCTIONS

Follow these steps for safe and effective operation of your InSinkErator garbage disposal:

1. Remove the sink stopper.
2. Turn on a medium stream of cold water.
3. Turn on the disposal switch.
4. Slowly feed food waste into the disposal opening. Do not overload the unit.
5. Allow the disposal and water to run for a few seconds after grinding is complete to ensure all waste is flushed through the drain.
6. Turn off the disposal switch, then turn off the water.

7. MAINTENANCE

Cleaning

- Regularly flush the disposal with cold water after use to prevent food particles from accumulating.
- For a deeper clean, grind a few ice cubes followed by citrus peels (lemon, orange, lime) to freshen the disposal and remove odors.

Odor Removal

- If odors persist, try pouring a small amount of baking soda into the disposal, let it sit for a few minutes, then flush with cold water while running the disposal.

Clearing Jams

- If the disposal hums but does not grind, it may be jammed. **Immediately turn off the power switch.**
- Insert the wrenchette (included with your disposal) into the center hole on the bottom of the disposal. Rotate it back and forth until the jam is freed.
- If you do not have the wrenchette, use a wooden spoon or broom handle to dislodge the object from the grinding chamber. **NEVER use your hands.**
- Once the jam is cleared, press the red reset button on the bottom of the disposal. Turn the power back

on and test the unit.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Disposal does not start	No power, tripped circuit breaker, tripped reset button	Check power switch, reset circuit breaker, press red reset button on bottom of disposal.
Disposal hums but does not grind	Grinding chamber is jammed	Turn off power. Clear jam using wrenchette or wooden spoon (see Maintenance). Press reset button.
Leaking from disposal	Loose connections, faulty seals, cracked housing	Check and tighten all drain connections. Inspect seals for damage. If housing is cracked, unit may need replacement.
Unpleasant odors	Food particle buildup	Refer to Maintenance section for cleaning and odor removal tips.

9. SPECIFICATIONS

Attribute	Detail
Manufacturer	InSinkErator
Model Number	POWER 0.75HP
Part Number	80019-ISE
Horsepower	3/4 HP (.75HP)
Item Weight	17.9 pounds
Product Dimensions	8.25 x 8.25 x 12 inches
Country of Origin	USA
Voltage	120 Volts
Material	Plastic (body), Stainless Steel (grind components)
Included Components	Garbage Disposal, EZ Connect Hardwire Adaptor, Discharge Tube, Sink Stopper, Sink Flange Assembly

10. WARRANTY & SUPPORT

The InSinkErator Power .75HP Garbage Disposal is backed by a **6-Year "We Come to You" Limited Service Warranty**. This warranty covers parts and in-home service for the specified period.

For warranty claims, technical support, or additional product information, please contact InSinkErator Customer Service directly. Refer to the contact information provided in your product packaging or visit the official InSinkErator website.

You may also consider purchasing additional protection plans for extended coverage, such as the 3-Year Protection Plan or 4-Year Protection Plan, available separately.