

## Aquasonic Proflex

# AquaSonic Proflex Replacement Brush Heads Instruction Manual

## INTRODUCTION

The AquaSonic Proflex Replacement Brush Heads are engineered to provide an effective and gentle cleaning experience, promoting whiter teeth and improved gum health. These brush heads are ADA Accepted, ensuring they meet rigorous standards for safety and efficacy. Designed with advanced DuPont bristles, they feature a unique bristle configuration for comprehensive oral care.

The design incorporates softer bristles around the perimeter to be gentle on gums, while firmer bristles at the center are optimized to polish away surface stains and effectively remove plaque and tartar.

## SETUP: REPLACING BRUSH HEADS

Replacing your AquaSonic Proflex brush head is a simple process that takes only seconds, ensuring your toothbrush maintains optimal performance.

1. **Remove the Old Brush Head:** Gently twist and pull the existing brush head upwards from the toothbrush handle until it detaches.
2. **Attach the New Brush Head:** Align the new Proflex replacement brush head with the metal shaft on the toothbrush handle. Push it down firmly until it clicks securely into place. Do not force it.
3. **Verify Attachment:** Ensure the brush head is fully seated and does not wobble.



Image: AquaSonic Proflex Replacement Brush Heads packaging, showing three brush heads and ADA Accepted logo. For optimal brushing performance, it is recommended to change your brush head every 3 months, or sooner if the bristles appear worn or frayed. Always rinse the bristles thoroughly after each use.

## OPERATING MODES (FOR COMPATIBLE TOOTHBRUSHES)

Compatible AquaSonic toothbrushes typically feature multiple operating modes to cater to various oral care needs. These modes are easily selectable via the mode button on the toothbrush handle:

- **Clean:** Standard mode for daily plaque removal.
- **Soft:** Gentle mode for sensitive teeth and gums.
- **Whiten:** Designed to polish away surface stains for brighter teeth.
- **Massage:** Provides a gentle pulsation to stimulate gums.

## MAINTENANCE AND CARE

Proper maintenance of your AquaSonic Proflex Replacement Brush Heads ensures longevity and effective oral hygiene.

- **Replacement Frequency:** Change your brush head every 3 months for optimal brushing performance. Replace sooner if bristles become worn or splayed.
- **Rinsing:** After each use, rinse the brush head thoroughly under running water to remove toothpaste residue and debris.
- **Storage:** Allow the brush head to air dry between uses. Store in a clean, dry place.

# Recommended

Change your brush head every **3-4 months** for healthier teeth and gums, and fresher breath



Image: Recommendation to change brush head every 3-4 months for healthier teeth and gums.

## COMPATIBILITY

---

AquaSonic Proflex Replacement Brush Heads are designed for compatibility with a range of AquaSonic electric toothbrush handles. Ensure your toothbrush model is listed below for proper fit and function:

- AquaSonic Black Series
- AquaSonic Black Series Pro
- AquaSonic Vibe Series
- AquaSonic Vibe Series Pro
- AquaSonic HDC Pro
- AquaSonic Duo Series Pro
- AquaSonic Elite



# Compatible

with the following  
**AquaSonic**  
toothbrushes

**Black Series**  
**Black Series Pro**  
**Vibe Series**  
**Vibe Series Pro**  
**HDC Pro**  
**Duo Series Pro**  
**Elite**

Image: Compatible AquaSonic toothbrush models.

## PRODUCT SPECIFICATIONS

Feature	Detail
Brand	Aquasonic
Model	Proflex Replacement Brush Heads
Color	White
Material	Nylon (bristles)
Age Range (Description)	Adult
Package Dimensions	5.35 x 3.78 x 0.94 inches
Item Weight	1.45 ounces

## SAFETY INFORMATION

Adhere to the following safety guidelines for proper use and to prevent injury:

- Replace the brush head every 3 months or sooner if it shows signs of wear.
- Rinse bristles thoroughly after each use.
- Do not use on sensitive areas of the mouth if discomfort occurs.
- This product is not intended for use by children under 3 years of age.

## TROUBLESHOOTING

---

If you experience any issues with your AquaSonic Proflex Replacement Brush Heads, please consider the following:

- **Loose Fit:** Ensure the brush head is pushed down firmly onto the handle until it clicks into place. If it remains loose, check for any debris obstructing the connection.
- **Reduced Effectiveness:** If brushing effectiveness decreases, it may be time to replace the brush head. Worn bristles are less effective at cleaning.
- **Irritation:** If gum irritation occurs, ensure you are using the correct brushing technique and consider switching to a softer brushing mode if available on your toothbrush handle.

For persistent issues, refer to the main AquaSonic toothbrush manual or contact customer support.

## WARRANTY AND SUPPORT

---

For information regarding product warranty, returns, or technical support, please refer to the official AquaSonic website or contact their customer service directly. Keep your purchase receipt as proof of purchase.