Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- BoxWave /
- BoxWave AccuPoint Active Stylus User Manual for JOYING Car Stereo JY-TQ125N4G

BoxWave AccuPoint Active Stylus

BoxWave AccuPoint Active Stylus User Manual

For JOYING Car Stereo JY-TQ125N4G

1. Introduction

This manual provides detailed instructions for the setup, operation, and maintenance of your BoxWave AccuPoint Active Stylus. This stylus is designed to enhance interaction with your JOYING Car Stereo JY-TQ125N4G touchscreen, offering a precise and responsive input method.

2. PRODUCT OVERVIEW

The AccuPoint Active Stylus is engineered to provide a pen-like writing and drawing experience on compatible touchscreens. It features an ultra-fine tip and utilizes electronic pulses for accurate screen interaction.

Key Features:

- Ultra-Fine 2mm Tip: Allows for precise tapping, swiping, drawing, and writing.
- · Active Electronic Pulses: Enables direct screen interaction without requiring Bluetooth pairing.
- Long Battery Life: Provides up to 12 hours of continuous use on a single charge.
- Durable Construction: Features a solid brushed aluminum barrel for strength and stability.
- Ergonomic Grip: Designed for comfortable handling during extended use.



Figure 1: AccuPoint Active Stylus with labeled components including the Accupoint 1.9mm tip, Fingerprint Proof Brushed Aluminum Barrel, 9mm Ergonomic Grip, LED Power Indicator, Easy-On Button, Hidden Micro USB Charging Port, and Removable FiberMesh Tip.

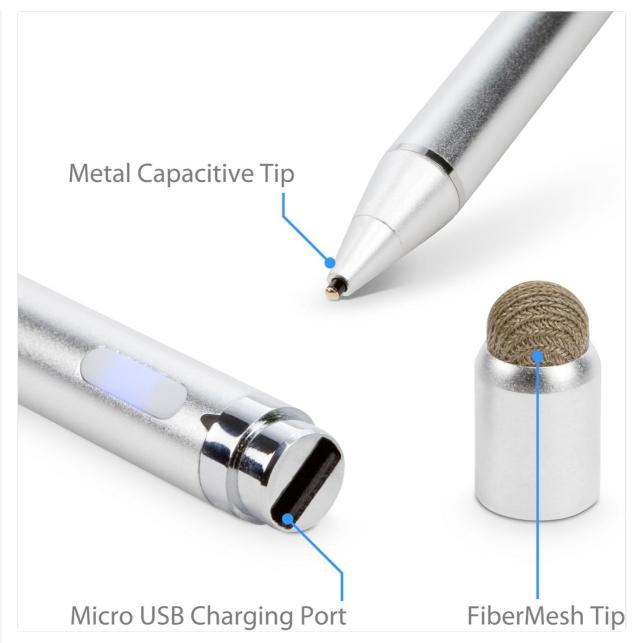


Figure 2: Detailed view of the stylus features, highlighting the Metal Capacitive Tip, Micro USB Charging Port, and FiberMesh Tip.

3. PACKAGE CONTENTS

Verify that all items are present in your package:

- 2 x BoxWave AccuPoint Active Stylus
- 1 x Micro USB Charging Cable



Figure 3: Two AccuPoint Active Styluses included in the package.

4. SETUP

4.1 Charging the Stylus

Before initial use, or when the battery is low, charge the stylus using the provided Micro USB cable.

- 1. Locate the hidden Micro USB charging port on the stylus.
- 2. Connect the Micro USB cable to the stylus charging port.
- 3. Plug the other end of the USB cable into a standard USB power source (e.g., computer USB port, USB wall adapter).
- 4. The LED indicator will illuminate during charging and turn off or change color when fully charged.



Figure 4: The AccuPoint Active Stylus being charged via its Micro USB port.

4.2 Powering On/Off

The stylus does not require Bluetooth pairing. Simply press the power button to activate it.

- **To Power On:** Press the easy-on button located on the stylus barrel. The LED power indicator will light up.
- To Power Off: Press the easy-on button again. The LED power indicator will turn off.

5. OPERATING INSTRUCTIONS

5.1 Basic Operation

Once powered on, the AccuPoint Active Stylus is ready for immediate use with your JOYING Car Stereo JY-TQ125N4G touchscreen.

- Gently touch the 2mm tip to the touchscreen surface.
- Apply light pressure, similar to using a traditional pen on paper, to interact with the screen.
- The stylus supports various functions including drawing, writing, tapping, and swiping.
- Note: The AccuPoint Active Stylus does not support palm rejection or pressure sensitivity.

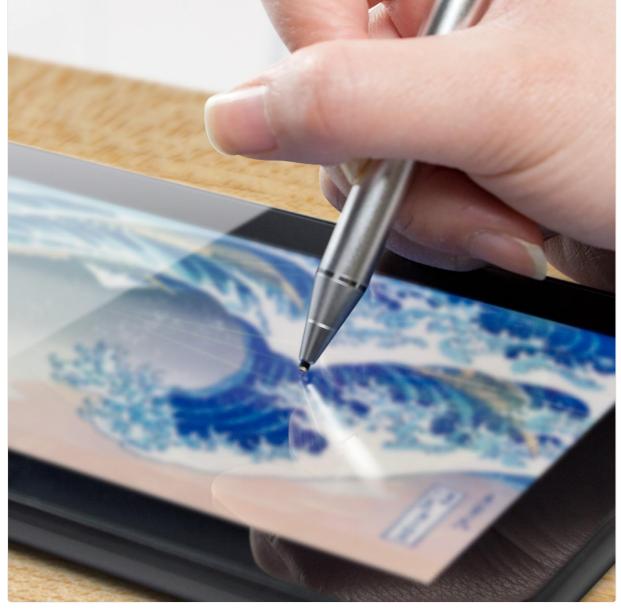


Figure 5: Demonstrating the use of the stylus for precise input on a touchscreen.

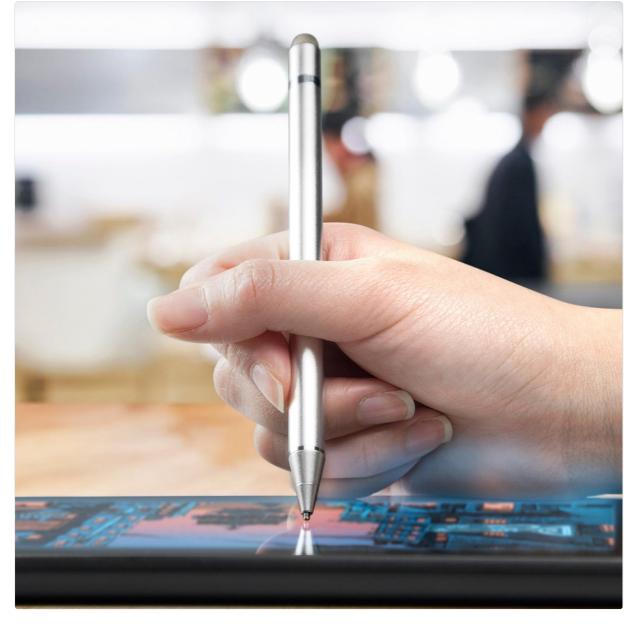


Figure 6: The stylus held in a natural writing position for comfortable use.

6. MAINTENANCE

6.1 Care and Cleaning

- Keep the stylus away from extreme temperatures and direct sunlight.
- Avoid dropping the stylus or subjecting it to strong impacts.
- To clean the stylus body, use a soft, dry cloth. Do not use harsh chemicals or abrasive materials.
- Ensure the tip is free from debris for optimal performance.

7. TROUBLESHOOTING

7.1 Common Issues and Solutions

Issue	Possible Cause	Solution
Stylus not responding	Battery is low or depleted. Stylus is not powered on.	Charge the stylus fully. Press the power button to turn it on.

Issue	Possible Cause	Solution
Stylus not charging	Charging cable is not properly connected. Faulty charging cable or power source.	Ensure the Micro USB cable is securely connected to both the stylus and the power source. Try a different USB cable or power adapter.
Inaccurate input	Stylus tip is dirty or damaged. Screen protector interference.	Clean the stylus tip. Ensure the screen protector (if any) is properly installed and compatible with stylus use.

8. SPECIFICATIONS

Specification	Detail	
Brand	BoxWave	
Model	AccuPoint Active Stylus	
Color	Metallic Silver	
Item Weight	2.7 ounces	
Tip Size	2mm (Ultra Fine)	
Battery Life	Up to 12 hours	
Charging Port	Micro USB	
Compatibility	JOYING Car Stereo JY-TQ125N4G	

9. Support Information

For technical assistance related to the BoxWave AccuPoint Active Stylus when used with the JOYING Car Stereo JY-TQ125N4G, limited third-party technical support is available. This support is provided for up to 3 inquiries via electronic messaging. Please note that this support is not affiliated with or endorsed by JOYING.

For further inquiries, please refer to the contact information provided by your retailer or the BoxWave official website.

Related Documents - AccuPoint Active Stylus



DOUXE S3 Active Stylus Pen Instruction Manual

Comprehensive instruction manual for the DOUXE S3 Active Stylus Pen, detailing features, technical specifications, operating instructions, safety warnings, and warranty information for touchscreen device users.



Penyeah Stylus Pen User Manual - DIY Combinations and Usage Guide

Comprehensive user manual for the Penyeah P1 stylus pen, detailing DIY combinations of tips, usage instructions, and replacement procedures. Learn how to maximize your stylus experience for various devices and applications.



Powerology NÉOTEC Active Stylus Pen - User Manual and Specifications

Comprehensive guide to the Powerology NÉOTEC Active Stylus Pen (SKU: PGBSTPN), covering operation, features, specifications, compatible iPad models, and warranty information.



 
ASUS Pen SA300 Quick Start Guide

This guide provides instructions on how to use and maintain the ASUS Pen SA300 Active Stylus, including package contents, inserting and replacing the battery, and replacing the pen tip and holder.



ASUS Pen 2.0 (SA203H) Active Stylus: Quick Start Guide

Get started with your ASUS Pen 2.0 (SA203H) Active Stylus. This guide covers package contents, LED indicators, hardware interface, charging, and Bluetooth pairing instructions.



How to Use and Change the Disc Tip for Universal Capacitive Stylus Pen

Detailed instructions and safety information for the universal capacitive stylus pen, covering tip replacement and usage on touch screen devices like iPad, iPhone, and Samsung.