

SECURA 6803378

SECURA Ejection Chute (Bottom) Instruction Manual

COMPATIBLE WITH CUB CADET CC 714 TE 13A277DE603 LAWN TRACTOR

1. Introduction

This manual provides essential information for the proper installation, operation, and maintenance of your SECURA Ejection Chute, designed for the Cub Cadet CC 714 TE 13A277DE603 Lawn Tractor. This replacement part is intended to restore or improve the grass ejection function of your lawn tractor.

2. Safety Information

Always prioritize safety when working with machinery. Read and understand your lawn tractor's original operating manual before performing any maintenance or part replacement. Failure to follow safety instructions can result in serious injury.

- Ensure the lawn tractor engine is turned off and the spark plug wire is disconnected before beginning any work.
- Wear appropriate personal protective equipment, including gloves and eye protection.
- Allow the engine and any hot components to cool down completely before handling.
- Keep children and pets away from the work area.
- Use only genuine or approved replacement parts.

3. Product Overview

The SECURA Ejection Chute is a critical component of your lawn tractor's cutting deck, responsible for directing grass clippings away from the cutting area. This specific model is a bottom-mounted chute, ensuring efficient discharge.



Figure 1: Main view of the SECURA Ejection Chute. This image shows the overall shape and design of the replacement part, highlighting its smooth, dark grey surface and the general contour for grass discharge.



Figure 2: Side profile of the SECURA Ejection Chute. This view illustrates the curved design and the angle at which grass clippings are directed, ensuring efficient and unobstructed flow.

4. Setup and Installation

Follow these steps to replace the ejection chute on your Cub Cadet CC 714 TE 13A277DE603 Lawn Tractor. Refer to your tractor's service manual for specific instructions related to your model.

1. **Preparation:** Park the lawn tractor on a flat, stable surface. Turn off the engine, remove the ignition key, and disconnect the spark plug wire to prevent accidental starting. Allow the engine to cool.

2. **Access the Chute:** Depending on your tractor model, you may need to raise the cutting deck or remove it to gain clear access to the existing ejection chute.
3. **Remove Old Chute:** Locate the fasteners (bolts, clips, or pins) securing the old ejection chute to the cutting deck. Carefully remove these fasteners and detach the old chute. Note the orientation and attachment points for reassembly.
4. **Inspect Area:** Clean any grass clippings or debris from the mounting area on the cutting deck. Inspect for any damage or wear that might affect the new chute's installation.
5. **Install New Chute:** Position the new SECURA Ejection Chute onto the cutting deck, aligning it with the mounting holes.



Figure 3: Underside view of the SECURA Ejection Chute. This image highlights the internal structure and potential mounting points or guides for secure attachment to the lawn tractor's cutting deck.

6. **Secure Chute:** Reinstall the fasteners removed in step 3. Ensure they are tightened securely, but do not overtighten, which could damage the chute or deck.
7. **Final Checks:** Verify that the new chute is firmly attached and does not interfere with any moving parts. Reconnect the spark plug wire.



Figure 4: Angled view of the SECURA Ejection Chute, showing the discharge opening. This perspective demonstrates the width and depth of the chute's exit point, crucial for effective grass expulsion.

5. Operating

The ejection chute functions passively during lawn tractor operation. Its primary role is to safely and efficiently direct grass clippings away from the cutting blades and the operator. Ensure the chute is clear of obstructions before and during operation to maintain optimal performance and prevent clogging.

6. Maintenance

Regular maintenance of your ejection chute ensures its longevity and effective performance.

- **Cleaning:** After each use, or as needed, clean the inside and outside of the chute to remove accumulated grass clippings and debris. A stiff brush or scraper can be used. Ensure the engine is off and cool before cleaning.
- **Inspection:** Periodically inspect the chute for cracks, damage, or excessive wear. Check that all mounting fasteners are secure. Replace the chute if it shows signs of significant damage that could impair its function or safety.
- **Storage:** Store the lawn tractor in a clean, dry environment to prevent material degradation of the chute.

7. Troubleshooting

If you experience issues with grass ejection, consider the following:

- **Clogging:** The most common issue is a clogged chute. Turn off the engine, disconnect the spark plug, and carefully clear any blockages. This can be caused by cutting wet or excessively tall grass too quickly.
- **Poor Ejection:** Ensure the chute is correctly installed and securely fastened. Check for any internal damage or deformation that might impede grass flow. Also, verify that the mower blades are sharp and correctly installed.
- **Loose Chute:** If the chute feels loose, check and tighten all mounting fasteners.

If problems persist after troubleshooting, consult a qualified service technician or your lawn tractor's service manual.

8. Specifications

Attribute	Detail
Brand	SECURA
Model Number	6803378
Compatibility	Cub Cadet CC 714 TE 13A277DE603 Lawn Tractor
Part Type	Ejection Chute (Bottom)
ASIN	B0CDN9N9BH
First Available Date	August 3, 2023

9. Warranty Information

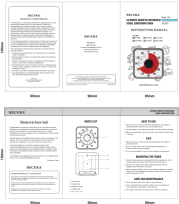

Information regarding specific warranty coverage for this SECURA ejection chute is not available in the provided product details. Please refer to the seller's or manufacturer's official website for any applicable warranty terms and conditions.

10. Support

For technical assistance or further inquiries, please contact the seller, MA-Versand, directly through the platform where the product was purchased. Specific support contact information is not provided in the product details.

© 2023 SECURA. All rights reserved.

Related Documents - 6803378

	<p>Secura T764 60-Minute Magnetic Mechanical Visual Countdown Timer - Instruction Manual</p> <p>Official instruction manual for the Secura T764 60-Minute Magnetic Mechanical Visual Countdown Timer. Learn how to use, mount, and care for your timer. Includes warranty information and product details.</p>
	<p>Secura F280R Automatic Milk Frother and Hot Chocolate Maker Instruction Manual</p> <p>Comprehensive instruction manual for the Secura F280R Automatic Milk Frother and Hot Chocolate Maker. Covers safety guidelines, parts identification, operating instructions, cleaning and maintenance, troubleshooting, technical specifications, disposal, and warranty information.</p>

	<p>Secura SWK-1001DW Double Wall Electric Water Kettle User Instructions</p> <p>User manual and operating instructions for the Secura SWK-1001DW Double Wall Electric Water Kettle. Includes safety precautions, parts description, operating guide, cleaning, troubleshooting, technical specifications, and warranty information.</p>
	<p>Secura TM034 60-Minute Countdown Visual Timer - Instruction Manual and Warranty</p> <p>Official instruction manual and limited warranty details for the Secura TM034 60-Minute Countdown Visual Timer. Learn how to set, use, pause, and clean your Secura timer.</p>
	<p>SECURA V-470 Automatic Soap Dispenser User Manual and Warranty</p> <p>Comprehensive user manual for the SECURA V-470 automatic soap dispenser, covering features, installation, technical specifications, troubleshooting, cleaning, and manufacturer's limited warranty.</p>
	<p>Secura 60-Minute Visual Countdown Timer (Model TM021) - Instruction Manual</p> <p>Instruction manual for the Secura 60-Minute Visual Countdown Timer (Model TM021). Covers setup, usage, parts list, tips, care instructions, and warranty information.</p>