

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [HWWR](#) /

› [HWWR T8 Karaoke Machine Instruction Manual](#)

HWWR T8

HWWR T8 Karaoke Machine User Manual

Model: T8

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your HWWR T8 Karaoke Machine. Please read these instructions carefully before using the product and retain them for future reference. The HWWR T8 is a portable PA system designed for entertainment, featuring Bluetooth connectivity, wireless microphones, and integrated lighting effects.

PACKAGE CONTENTS

Verify that all items listed below are included in your package:

- HWWR T8 Karaoke Machine (Main Unit)
- 2 x Wireless Microphones
- Remote Control
- 3.5mm AUX Cable
- USB Type-C Charging Cable
- User Manual



Image: HWWR T8 Karaoke Machine with two wireless microphones, remote control, and cables.

This image displays the main HWWR T8 Karaoke Machine unit, two wireless microphones, a remote control, and necessary connection cables, illustrating the complete package contents.

PRODUCT OVERVIEW

Control Panel and Ports

The HWWR T8 features an intuitive control panel and various ports for versatile connectivity. Familiarize

yourself with the layout for optimal use.

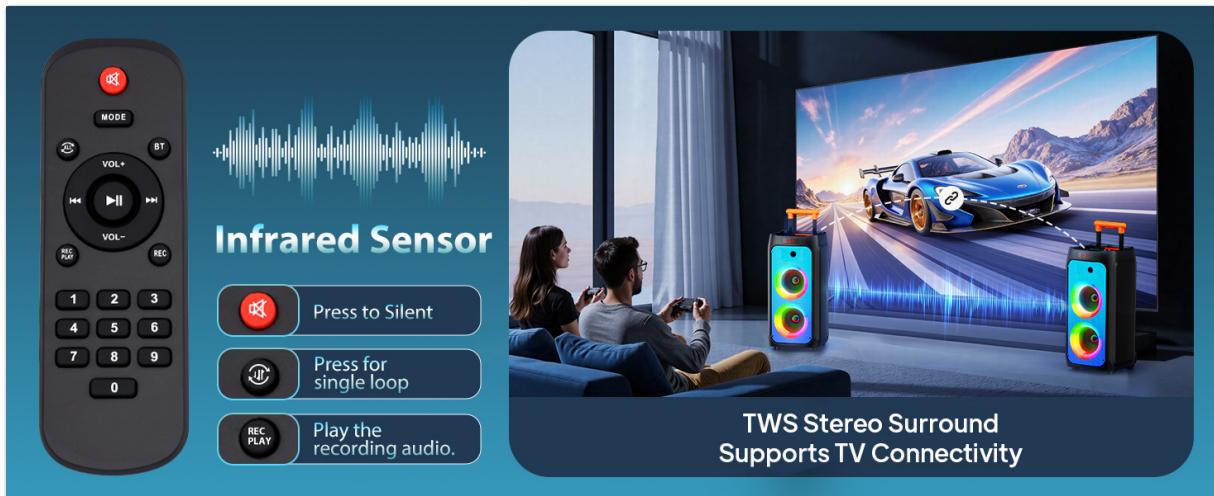


Image: Detailed view of the HWWR T8 control panel and rear ports.

This image highlights the control panel located on the top of the unit, showing buttons for ECHO, REC, MIC VOL, MODE, LED MODE, PLAY/PAUSE, PREV, and NEXT. It also details the rear ports including OUTPUT, TF CARD slot, USB port, AUX IN, MIC 1, MIC 2, and a 12V=1A power input.

Top Key Details:

- ECHO +/-:** Adjusts the echo effect for microphones.
- REC:** Initiates recording function.
- MIC VOL +/-:** Adjusts microphone volume.
- MODE:** Switches between input modes (Bluetooth, AUX, USB, TF Card).
- LED MODE:** Changes the lighting effects.
- PLAY/PAUSE:** Plays or pauses audio playback.
- PREV/NEXT:** Skips to the previous or next track.
- MASTER Volume Knob:** Adjusts the overall volume of the speaker.

Back Face Details:

- OUTPUT:** Audio output port.
- TF CARD:** Slot for TransFlash (MicroSD) cards.
- USB:** Port for USB drives.
- AUX IN:** 3.5mm audio input for external devices.
- MIC 1 / MIC 2:** Additional microphone input jacks (6.35mm).
- 12V=1A:** Power input for charging.

SETUP

1. Charging the Unit

Before first use, fully charge the karaoke machine. Connect the USB Type-C charging cable to the 12V=1A power input on the back of the unit and plug the other end into a compatible power adapter (not included). The charging indicator will show the charging status.

2. Powering On/Off

Locate the power switch on the unit. Slide it to the 'ON' position to power on the device. Slide it to 'OFF' to power off.

3. Preparing Wireless Microphones

The wireless microphones require batteries (not included). Open the battery compartment on each microphone and insert the required batteries, ensuring correct polarity. The microphones will automatically connect to the main unit when both are powered on.

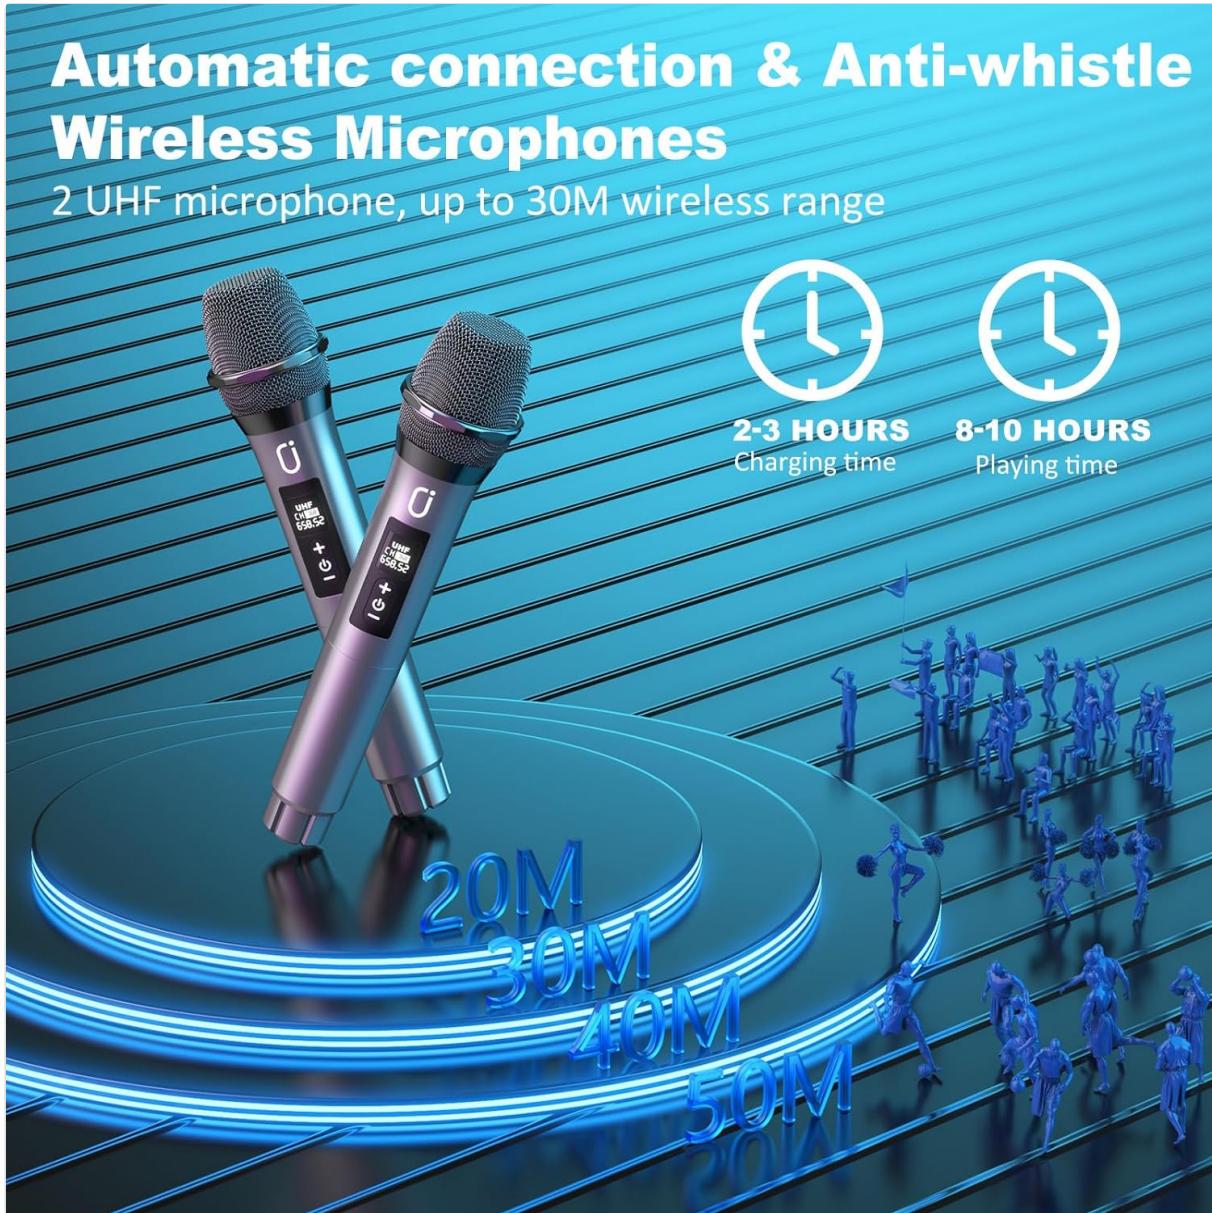


Image: Two wireless microphones with charging and playing time details.

This image illustrates the two wireless microphones, indicating a charging time of 2-3 hours and a playing time of 8-10 hours. It also shows the wireless range capability.

OPERATING INSTRUCTIONS

1. Bluetooth Pairing

1. Power on the HWWR T8 Karaoke Machine. The display will show 'BLUE' or 'BT' indicating Bluetooth mode. If not, press the **MODE** button until Bluetooth mode is selected.
2. Enable Bluetooth on your smartphone, tablet, or other audio device.

3. Search for 'HWWR T8' in the list of available devices and select it to pair.
4. Once paired, a confirmation sound will be heard, and you can now play audio from your device through the karaoke machine.

2. Using Wireless Microphones

The two included wireless microphones automatically connect to the HWWR T8 when both are powered on. Ensure the microphones have sufficient battery power. Adjust microphone volume using the **MIC VOL +/-** buttons and add echo effects with the **ECHO +/-** buttons on the main unit or remote control.

3. TWS (True Wireless Stereo) Pairing

If you have two HWWR T8 units, you can pair them for a stereo sound experience:

1. Ensure both HWWR T8 units are powered on and in Bluetooth mode, but not yet connected to any external device.
2. On one unit (this will be the primary unit), press and hold the **MODE** button for a few seconds until you hear a pairing tone.
3. The two units will automatically connect to each other. Once connected, a confirmation sound will be heard.
4. Now, connect your external audio device to the primary HWWR T8 unit via Bluetooth as described in section 2.1. Audio will play in stereo through both units.



Image: TWS Connection Mode diagram.

This diagram illustrates how two HWWR T8 karaoke machines can be wirelessly connected via TWS (True Wireless Stereo) Bluetooth, enabling a synchronized stereo audio experience from a single source device.

4. Disco Light Show

The HWWR T8 features integrated RGB lights that synchronize with the music. Press the **LED MODE** button on the control panel or remote to cycle through various lighting effects or turn them off.

BEATS DRIVEN DISCO LIGHT SHOW

RGB lights will beat follow the rhythm of the music



Image: HWWR T8 displaying various disco light patterns.

This image showcases the HWWR T8 karaoke machine with its dynamic RGB disco lights active, illustrating different color patterns and their synchronization with music.

5. USB/TF Card/AUX Playback

Insert a USB drive into the **USB** port or a TF card into the **TF CARD** slot. The unit will automatically switch to the corresponding mode and begin playback. For AUX input, connect an external audio device using the 3.5mm AUX cable to the **AUX IN** port and select AUX mode using the **MODE** button.

6. Recording Function

To record your performance, ensure a USB drive or TF card is inserted. Press the **REC** button to start recording. Press it again to stop. Recordings will be saved to the inserted storage device.

7. Remote Control Operation

The included remote control provides convenient access to various functions, including power, mode selection, volume adjustment, track control, mute, and recording playback.



Image: HWWR T8 remote control.

This image displays the remote control for the HWWR T8, highlighting buttons for mute, single loop playback, and playing recorded audio, indicating its infrared sensor functionality.

MAINTENANCE

To ensure the longevity and optimal performance of your HWWR T8 Karaoke Machine, follow these maintenance guidelines:

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the unit. Do not use liquid cleaners or abrasive materials.
- **Storage:** Store the unit in a cool, dry place away from direct sunlight and extreme temperatures.
- **Battery Care:** If the unit will not be used for an extended period, fully charge it before storage and recharge every 3-6 months to maintain battery health. Remove batteries from microphones if not in use for long periods.
- **Avoid Water:** Keep the unit away from water and moisture to prevent damage.

TROUBLESHOOTING

If you encounter issues with your HWWR T8, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
No power	Battery depleted; Power switch off	Charge the unit; Ensure power switch is ON
No sound from speaker	Volume too low; Incorrect input mode; Device not connected	Increase MASTER volume; Select correct MODE; Re-pair Bluetooth or check AUX connection
Microphones not working	Microphone batteries depleted; Microphone volume too low; Microphone not paired	Replace microphone batteries; Increase MIC VOL; Power cycle microphones and unit to re-establish connection
Bluetooth connection unstable	Device too far; Interference; Low battery	Move device closer to speaker; Avoid obstacles; Charge the unit
TWS pairing failed	Units already connected to another device; Incorrect pairing procedure	Disconnect both units from other devices; Follow TWS pairing steps carefully

SPECIFICATIONS

- **Model:** T8
- **Brand:** HWWR
- **Item Weight:** 21.1 pounds
- **Product Dimensions:** 24 x 10 x 11 inches
- **Power Output:** 200W (Size field, likely RMS or similar)
- **Speaker Count:** 2
- **Power Source:** Battery Powered
- **Voltage:** 5 Volts
- **Compatible Devices:** Computer, iPhone, iPad, PC, Smartphone, Television
- **Connector Type:** 3.5 mm Jack, USB Type C
- **Special Features:** Adjustable Microphone Sensitivity, Built-In Handle, Echo Effect, Portable, Stereo Pairing (TWS)
- **Color:** Black

WARRANTY AND SUPPORT

Warranty Information

HWWR provides a 12-month warranty for any quality-related problems with your T8 Karaoke Machine from the date of purchase. Please retain your proof of purchase for warranty claims.

Customer Support

For any questions or problems regarding your HWWR T8 product, please do not hesitate to contact our support team. We are dedicated to assisting you.

Phone: 757-943-7037

Email: service@hwwr.net



Image: HWWR Customer Support Contact Information.

This image provides the contact details for HWWR customer support, including a phone number and email address, for assistance with product inquiries or issues.

