

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [Leotec](#) /

› [LEOTEC SMART TRACKER ANTI-LOSS 4G BLACK GPS User Manual](#)

Leotec LETRACK02K

LEOTEC SMART TRACKER ANTI-LOSS 4G BLACK GPS User Manual

Model: LETRACK02K

INTRODUCTION

Thank you for choosing the Leotec Smart Tracker Anti-Loss 4G Black GPS. This device is designed to provide reliable tracking and communication capabilities, ensuring the safety and location of your valuables or loved ones. Please read this manual carefully before using the device to ensure proper operation and to maximize its features.

WHAT'S IN THE Box

- Leotec Smart Tracker Anti-Loss 4G Black GPS
- Battery (pre-installed or separate)
- Charging Cable
- User Manual (this document)

PRODUCT OVERVIEW

Familiarize yourself with the components and features of your Leotec Smart Tracker.



Figure 1: Front View. This image displays the front of the Leotec Smart Tracker, featuring a large central SOS button, surrounded by '+' and '-' buttons, and two call buttons (labeled 1 and 2). A small indicator light is visible at the top.



Figure 2: SIM Card Slot. This image shows the Leotec Smart Tracker with its SIM card tray partially ejected from the side, indicating where the SIM card is inserted. Blue and red indicator lights are visible near the top of the device.



Figure 3: Charging Contacts. This image provides a view of the bottom of the Leotec Smart Tracker, clearly showing four metallic charging contact points.

- **SOS Button:** Central button for emergency calls/alerts.
- **Call Buttons (1 & 2):** For pre-programmed calls.
- **Volume Buttons (+/-):** Adjust audio volume.
- **SIM Card Slot:** Located on the side for 4G SIM card insertion.
- **Charging Contacts:** On the bottom for connecting to the charging base/cable.
- **Indicator Light:** Provides status information (e.g., power, network, charging).

SETUP

1. Charging the Device

Before first use, fully charge the device. Connect the charging cable to the charging contacts on the bottom of the tracker and plug the other end into a USB power adapter. The indicator light will show charging status.

2. Inserting the SIM Card

1. Ensure the device is powered off.
2. Locate the SIM card slot on the side of the tracker (refer to Figure 2).
3. Gently insert the appropriate size 4G SIM card into the tray, ensuring correct orientation.
4. Push the SIM tray back into the device until it clicks into place.
5. Power on the device. The indicator light will show network connection status.

3. Initial Configuration (via Smartphone App)

To fully utilize the tracker's features, download the dedicated Leotec tracking application on your smartphone. Follow the in-app instructions to pair the device, set up emergency contacts, define geofences, and configure other settings.

OPERATING INSTRUCTIONS

Power On/Off

- **Power On:** Press and hold the SOS button for approximately 3 seconds until the indicator light illuminates.
- **Power Off:** Press and hold the SOS button for approximately 5 seconds until the indicator light turns off.

Real-time Tracking

The device's location can be monitored in real-time through the Leotec smartphone application. Ensure the device has a strong 4G signal for accurate and timely updates.

SOS Emergency Function

In an emergency, press and hold the central **SOS** button for 3 seconds. The device will automatically call the pre-programmed emergency contacts in sequence until one answers. It will also send location alerts to these contacts via the app.

Making Calls

The tracker supports two-way communication with pre-set numbers.

- Press the **Call Button 1** to dial the first pre-programmed contact.
- Press the **Call Button 2** to dial the second pre-programmed contact.
- To adjust call volume, use the + and - buttons during a call.

Receiving Calls

The device can receive calls only from numbers configured as authorized contacts in the smartphone application. When a call comes in, press any call button to answer.

MAINTENANCE

Cleaning

Wipe the device with a soft, dry cloth. Do not use harsh chemicals or abrasive cleaners.

Battery Care

- Charge the device regularly, even if not in frequent use, to maintain battery health.
- Avoid exposing the device to extreme temperatures.
- If the device will not be used for an extended period, charge it to about 50% before storing.

Storage

Store the tracker in a cool, dry place away from direct sunlight and moisture.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Device not powering on	Low battery; Device malfunction	Charge the device for at least 30 minutes. If still unresponsive, contact support.
No network signal	SIM card not inserted correctly; No active SIM plan; Poor network coverage	Reinsert SIM card. Check with your mobile carrier for SIM plan status. Move to an area with better signal.
Inaccurate location tracking	Weak GPS signal; Device indoors/underground; Network congestion	Move the device to an open area. Ensure 4G signal is strong.
Calls not connecting	Incorrectly programmed numbers; No network signal; SIM card issues	Verify programmed numbers in the app. Check network signal. Ensure SIM card is active and has credit/data.

SPECIFICATIONS

Brand	Leotec
Model Number	LETRACK02K
Connectivity Technology	Cellular (4G)
Special Feature	Touchscreen
Map Type	Satellite
Included Components	Battery
Human Interface Input	Buttons
Compatible Devices	Smartphone
Control Method	Touch

WARRANTY AND SUPPORT

Leotec products are designed for reliability and performance. For specific warranty information, please refer to the warranty card included with your purchase or visit the official Leotec website.

If you encounter any issues or have questions regarding your Smart Tracker, please contact Leotec customer support through their official channels.

- **Online Support:** Refer to the Leotec official website for FAQs and support contact information.
- **Email Support:** (Specific email not provided, general instruction)
- **Phone Support:** (Specific phone number not provided, general instruction)

© 2024 Leotec. All rights reserved.