

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [LOCKWOOD](#) /

› [Lockwood 005/B2LSCDP Paradigm Double Cylinder Deadbolt User Manual](#)

LOCKWOOD 005/B2LSCDP

Lockwood 005/B2LSCDP Paradigm Double Cylinder Deadbolt User Manual

Model: 005/B2LSCDP | Brand: LOCKWOOD

PRODUCT OVERVIEW

The Lockwood 005/B2LSCDP Paradigm Square Rose Universal Satin Chrome Double Cylinder Deadbolt is designed to provide enhanced security and convenience for both residential and architectural applications. This deadbolt features a high-security cut-resistant stainless steel bolt and a slimline design. It incorporates innovative features such as safety release, LockAlert, and DualSelect for improved functionality and user awareness.



Image: The Lockwood 005/B2LSCDP Paradigm Double Cylinder Deadbolt, showing its square rose design and the key cylinder on the exterior side. The internal mechanism with the bolt is also visible.

SETUP AND INSTALLATION

Proper installation is crucial for the optimal performance and security of your Lockwood deadbolt. It is recommended that installation be performed by a qualified professional.

Tools Required:

- Phillips head screwdriver
- Tape measure
- Pencil
- Drill with appropriate bits (if pre-drilled holes are not present)
- Chisel (for mortising, if required)

Installation Steps:

- Prepare the Door:** Ensure the door is properly prepared with the correct bore holes and backset. Refer to the template provided with the product packaging for precise measurements.
- Install the Latch Bolt:** Insert the latch bolt into the edge of the door, ensuring the bevel faces the door frame. Secure it with the provided screws.
- Install the Exterior Cylinder:** Place the exterior cylinder assembly through the bore hole from the outside of the door.
- Install the Interior Assembly:** Align the interior assembly with the exterior cylinder and secure it using the through-bolts. Ensure the deadbolt operates smoothly before fully tightening.
- Install the Strike Plate:** Mark and chisel out the recess for the strike plate on the door frame. Secure the strike plate with the provided screws, ensuring the bolt extends fully into the strike when locked.
- Test Operation:** Test the deadbolt with the key from both the interior and exterior sides to ensure smooth locking and unlocking.

For detailed diagrams and specific measurements, please consult the full installation guide included in the product packaging.

OPERATING INSTRUCTIONS

The Lockwood Paradigm deadbolt offers secure and convenient operation.

Locking the Deadbolt:

- From Exterior:** Insert the key into the cylinder and rotate it to extend the deadbolt. Remove the key.
- From Interior:** Insert the key into the cylinder and rotate it to extend the deadbolt. Remove the key.

Unlocking the Deadbolt:

- From Exterior:** Insert the key into the cylinder and rotate it to retract the deadbolt. Remove the key.
- From Interior:** Insert the key into the cylinder and rotate it to retract the deadbolt. Remove the key.

Special Features:

- LockAlert:** This feature provides a visual indication of the deadbolt's status (locked/unlocked). Refer to the product's specific LockAlert indicator for details.
- DualSelect:** Allows for different locking modes. Consult your product's specific instructions for how to engage and disengage DualSelect modes.
- Safety Release:** Designed for emergency egress, this feature allows for quick unlocking from the inside.

MAINTENANCE

Regular maintenance ensures the longevity and smooth operation of your deadbolt.

- Cleaning:** Clean the exterior finish with a soft, damp cloth. Avoid abrasive cleaners or harsh chemicals, as these can damage the finish.
- Lubrication:** Periodically apply a small amount of graphite-based lubricant or a silicone-based spray specifically designed for locks into the keyway. Do not use oil-based lubricants as they can attract dirt and debris.
- Check Screws:** Occasionally check and tighten any loose mounting screws to ensure the deadbolt remains securely fastened to the door.

TROUBLESHOOTING

If you encounter issues with your deadbolt, refer to the following common troubleshooting steps:

Problem	Possible Cause	Solution
Key is difficult to insert or turn.	Dirt/debris in keyway, worn key, or misaligned cylinder.	Clean keyway with compressed air, lubricate with graphite, try a new key, or check cylinder alignment.
Deadbolt does not extend or retract fully.	Misaligned strike plate, loose screws, or internal mechanism issue.	Adjust strike plate, tighten mounting screws, or contact customer support if mechanism is faulty.
Deadbolt rattles or feels loose.	Loose mounting screws or worn components.	Tighten all visible screws. If issue persists, professional inspection may be needed.

If these steps do not resolve the issue, please contact Lockwood customer support.

SPECIFICATIONS

Attribute	Detail
Model Number	005/B2LSCDP
Brand	LOCKWOOD
Manufacturer	Assa Abloy
Product Dimensions	17 x 8.5 x 6.5 cm
Item Weight	1 kg
Colour	Silver
Style	Modern
Finish	Polished
Material	Stainless Steel
Shape	Square
Special Features	Cut Resistant
Lock Type	Double Cylinder Deadbolt

WARRANTY INFORMATION

Lockwood products are manufactured to the highest standards and are backed by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the warranty card included with your product or visit the official Lockwood website. Keep your proof of purchase for warranty claims.

CUSTOMER SUPPORT

For further assistance, technical support, or to inquire about replacement parts, please contact Lockwood customer service. Contact details can typically be found on the product packaging or the official Lockwood website.

Online Resources: Visit the official Lockwood website for FAQs, additional product documentation, and support contact information.

© 2023 LOCKWOOD. All rights reserved.

This manual is for informational purposes only. Specifications are subject to change without notice.