

[Manuals.plus](#) /

> [SIBRILLE](#) /

> SIBRILLE Remote Controlled LED Floor Lamp 36W 2500LM User Manual

SIBRILLE H107607

SIBRILLE Remote Controlled LED Floor Lamp 36W 2500LM User Manual

Model: H107607

INTRODUCTION

Thank you for purchasing the SIBRILLE Remote Controlled LED Floor Lamp. This manual provides essential information for the safe and efficient use of your new lamp. Please read it thoroughly before installation and operation, and keep it for future reference.



Image: The SIBRILLE LED Floor Lamp (Model H107607) illuminating a modern living room, showcasing its elegant design and warm light output.

SAFETY INSTRUCTIONS

- Ensure the power supply voltage matches the lamp's requirements before connecting.
- Do not disassemble or modify the lamp. This may cause damage and void the warranty.

- Keep the lamp away from water and high humidity environments.
- Do not cover the lamp with any materials while it is in operation to prevent overheating.
- Unplug the lamp from the power outlet before cleaning or performing any maintenance.
- This lamp is designed for indoor use only.

PACKAGE CONTENTS

Please check the package contents upon opening to ensure all parts are present and undamaged:

- SIBRILLE LED Floor Lamp (Main Body)
- Remote Control
- Power Adapter
- User Manual (this document)

SETUP INSTRUCTIONS

Follow these steps to assemble and set up your SIBRILLE LED Floor Lamp:

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Assemble Lamp Pole:** Screw the lamp pole sections together clockwise until securely tightened. Ensure no wires are pinched during assembly.
3. **Attach Base:** Connect the assembled lamp pole to the heavy base, twisting clockwise until firm.
4. **Connect Power:** Insert the power adapter into the lamp's power input port, then plug the adapter into a standard wall outlet.
5. **Remote Control Pairing (Initial Setup):**

Upon first use, the remote control may need to be paired with the lamp. Follow these steps:

- Ensure the lamp is plugged in and powered off (unplug and plug back in if unsure).
- Within 5 seconds of plugging in the lamp, press and hold the power button  on the remote control until the lamp flashes, indicating successful pairing.
- If pairing fails, unplug the lamp, wait 10 seconds, and repeat the process.

OPERATING INSTRUCTIONS

Your SIBRILLE LED Floor Lamp is controlled by the included remote. Familiarize yourself with the remote's functions:



Image: The dedicated remote control for the SIBRILLE LED Floor Lamp, featuring buttons for power, brightness adjustment, color temperature control, and preset scene modes.

Remote Control Functions

Button	Function
(Power)	Turns the lamp On or Off.
1H	Activates a 1-hour timer, after which the lamp will automatically turn off.
BRT+ / BRT-	Increases / Decreases brightness.
WARM / WHITE	Adjusts color temperature between warm white and cool white.
M (Mode)	Cycles through preset lighting modes (e.g., reading, relaxation).
1, 2, 3	Customizable scene buttons. Press and hold to save current settings; short press to recall.
(Reading Mode)	Activates a bright, neutral white light suitable for reading.
(Night Light Mode)	Activates a very dim, warm light for a soft night ambiance.

Note: Some remote controls may have pairing instructions printed on a sticker on the back. Refer to these instructions if you encounter difficulties with initial pairing.

MAINTENANCE

Proper maintenance ensures the longevity and optimal performance of your lamp:

- **Cleaning:** Before cleaning, always unplug the lamp from the power outlet. Use a soft, dry cloth to wipe down the lamp's surface. Do not use abrasive cleaners, solvents, or harsh chemicals, as these can damage the finish.
- **Light Source:** The LED light source is integrated and not user-replaceable. Do not attempt to replace the LEDs.
- **Storage:** If storing the lamp for an extended period, unplug it and store it in a cool, dry place, away from direct sunlight and moisture.

TROUBLESHOOTING

If you encounter issues with your SIBRILLE LED Floor Lamp, refer to the following common problems and solutions:

Problem	Possible Cause / Solution
Lamp does not turn on.	◦ Ensure the power adapter is securely plugged into both the lamp and the wall outlet. ◦ Check if the wall outlet is functional by plugging in another device. ◦ Verify the remote control batteries are not depleted. Replace if necessary.

Problem	Possible Cause / Solution
Remote control does not work or connect.	◦ Ensure the remote control batteries are correctly inserted and have sufficient charge. ◦ Re-pair the remote control with the lamp (refer to "Remote Control Pairing" in the Setup section). ◦ Ensure there are no obstructions between the remote and the lamp. ◦ The remote control operates via radio frequency; ensure no strong interference sources are nearby.
Lamp flickers or brightness is inconsistent.	◦ Check for loose connections at the power adapter or wall outlet. ◦ Ensure the lamp is not exposed to extreme temperatures. ◦ If the issue persists, contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	SIBRILLE
Model Number	H107607
Power	36W
Luminous Flux	2500LM
Connectivity Technology	High Frequency (RF)
Controller Type	Remote Control
Maximum Range	10 Meters
Product Dimensions	3.8 x 1.4 x 15 cm (Remote Control); 40 Grams (Remote Control)
Compatible Devices	LED Floor Lamp (specific SIBRILLE models)
UPC	799408477780

WARRANTY AND SUPPORT

SIBRILLE products are manufactured to high-quality standards. For warranty information or technical support, please refer to the warranty card included with your purchase or visit the official SIBRILLE website. Please have your model number (H107607) and purchase details ready when contacting support.

For further assistance, you may also contact the retailer where you purchased the product.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question