

Timex TW2W22100

Timex Legacy 42mm Watch (Model TW2W22100) Instruction Manual

Model: TW2W22100VQ

INTRODUCTION

This manual provides detailed instructions for the setup, operation, and maintenance of your Timex Legacy 42mm Watch, model TW2W22100. Please read this manual thoroughly to ensure proper use and care of your timepiece.



Image: Front view of the Timex Legacy 42mm watch with gold-tone case and bracelet, and a black dial.

SETUP

1. Setting the Time

1. Pull the crown (the small knob on the side of the watch) out to position 2.
2. Turn the crown clockwise or counter-clockwise to move the hands and set the correct time.
3. Once the time is set, push the crown back into position 1 (normal operating position).



Image: Side view of the watch, highlighting the crown and chronograph pushers on the right side of the case.

2. Adjusting the Bracelet

The watch features an 8-inch gold-tone bracelet. For proper fit, the bracelet may need to be adjusted by adding or removing links. This procedure typically requires specialized tools and is best performed by a qualified jeweler or watch technician to avoid damage.



Image: Close-up of the watch's gold-tone bracelet and foldover clasp mechanism.

OPERATING THE WATCH

1. Basic Timekeeping

Your Timex Legacy watch is a quartz movement timepiece, providing accurate time display through its analog hands. Ensure the crown is fully pushed in for normal operation.

2. Chronograph Function

This watch includes a chronograph feature for measuring elapsed time. The specific operation of the chronograph (start, stop, reset) is typically controlled by the two pushers located on either side of the crown. Refer to the detailed instructions below for common chronograph functions:

- **Start/Stop:** Press the top pusher to start the chronograph. Press it again to stop.

- **Reset:** With the chronograph stopped, press the bottom pusher to reset all chronograph hands to zero.

3. Water Resistance

Your watch is water resistant up to 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers while the watch is wet or submerged to prevent water ingress.



Image: A watch partially submerged in water, illustrating its water resistance capability.

MAINTENANCE

1. Cleaning Your Watch

To maintain the appearance of your watch, wipe the case and bracelet regularly with a soft, dry cloth. For stubborn dirt, a slightly damp cloth can be used, followed by immediate drying. Avoid using harsh chemicals or abrasive materials.

2. Battery Replacement

The watch is powered by a battery. When the watch stops running or the second hand begins to jump erratically (indicating a low battery), it is time for a battery replacement. It is recommended to have the battery replaced by a professional watchmaker to ensure the water resistance seal is properly maintained.

3. Water Resistance Care

The water resistance of your watch is not a permanent feature and may decrease over time due to wear and tear, or impact. It is advisable to have the water resistance checked periodically, especially after battery replacement or if the watch has been subjected to significant impact. Always ensure the crown is fully pushed in before exposing the watch to water.

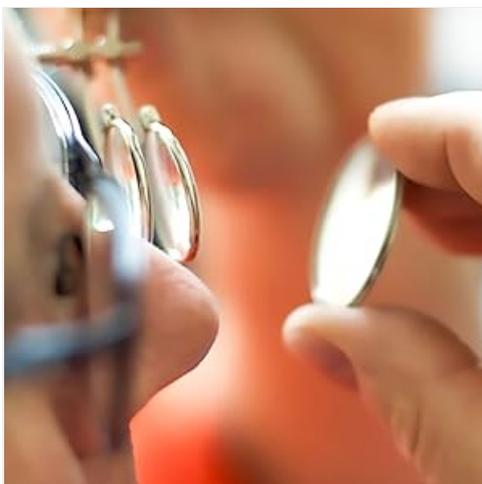


Image: Close-up view of a watch crystal, emphasizing the scratch-resistant mineral glass.

TROUBLESHOOTING

- **Watch Not Running:** Check if the crown is fully pushed in. If the watch still does not run, the battery may need replacement.
- **Incorrect Time:** Ensure the crown is fully pushed in after setting the time. If the time consistently deviates, the watch may require servicing.
- **Water Inside Watch:** If you notice condensation or water inside the watch, immediately take it to a qualified watch repair center. Do not attempt to open the watch yourself.

SPECIFICATIONS

Model Name	Legacy 42mm
Model Number	TW2W22100VQ
Case Diameter	42 Millimeters
Case Thickness	11 Millimeters
Band Length	8 Inches
Band Width	22 Millimeters
Band Material Type	Stainless Steel
Case Material Type	Stainless Steel
Crystal	Mineral Glass
Display Type	Analog
Watch Movement Type	Quartz
Water Resistance Depth	50 Meters (5 ATM)
Additional Features	Chronograph, Water Resistant
Power Source	Battery Powered

Clasp Type	Foldover Clasp
Dial Color	Black
Band Color	Gold
Item Weight	0.32 Kilograms (11.11 ounces)

WARRANTY & SUPPORT

Warranty Information

Your Timex Legacy watch comes with a limited warranty. Please refer to the warranty card included with your purchase for specific terms, conditions, and duration. The warranty typically covers manufacturing defects but does not cover damage resulting from improper use, accidents, or unauthorized repairs.

Customer Support

For further assistance, service, or warranty claims, please contact Timex customer support. You can usually find contact information on the official Timex website or through the retailer where the watch was purchased. When contacting support, please have your model number (TW2W22100VQ) and purchase details available.

You can visit the official Timex Store for more information: [Timex Store on Amazon](#)