

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Timex](#) /

› [Timex Men's Chicago 45mm Watch \(Model TW2W13200VQ\) Instruction Manual](#)

Timex TW2W13200VQ

Timex Men's Chicago 45mm Watch

MODEL: TW2W13200VQ

Introduction

This manual provides instructions for the proper use and care of your Timex Men's Chicago 45mm Watch, Model TW2W13200VQ. Inspired by the character-rich architectural and cultural language of Chicago, from its modern skyscrapers to its historic cityscape, this Chicago collection watch is designed to be both strong and refined. It features a sizeable 45mm brass case, a beautifully textured dial, and a brown natural leather strap with quick-release spring bars.



Image: Front view of the Timex Men's Chicago 45mm Watch with a black dial and brown leather strap.

Setup

1. Setting the Time

1. Pull the crown (the small knob on the side of the watch) out to position 2.
2. Turn the crown clockwise or counter-clockwise to move the hands to the correct time.
3. Once the time is set, push the crown back into position 1 (normal operating position).

2. Adjusting the Strap

The watch features a natural leather strap with a buckle closure. To adjust the fit, simply move the buckle pin to the desired hole on the strap. Ensure the watch is snug but comfortable on your wrist.





Image: Side view of the watch, highlighting the crown and chronograph pushers.

Operating the Chronograph

Your Timex Chicago watch is equipped with a chronograph function for measuring elapsed time.

1. Starting and Stopping the Chronograph

- Press the top pusher (button) to start the chronograph. The chronograph second hand will begin to move.
- Press the top pusher again to stop the chronograph. The elapsed time will be displayed.

2. Resetting the Chronograph

- While the chronograph is stopped, press the bottom pusher to reset all chronograph hands to zero.

3. Water Resistance

This watch has a water resistance depth of 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers while the watch is wet or submerged to prevent water intrusion.



Image: A watch partially submerged in water, demonstrating its water resistance capabilities.

Maintenance

1. Cleaning Your Watch

Wipe the watch case and crystal regularly with a soft, dry cloth. For the leather strap, avoid prolonged exposure to water and direct sunlight to prevent damage and discoloration. If the strap gets wet, allow it to air dry naturally.

2. Battery Replacement

Your watch is powered by a quartz movement and requires a battery. When the battery runs low, the watch may stop or the second hand may skip. Battery replacement should be performed by a qualified watch technician to ensure proper sealing and water resistance.

3. Crystal Care

The watch features a scratch-resistant mineral glass crystal. While durable, it is not entirely scratch-proof. Avoid contact with abrasive surfaces to maintain its clarity.



Image: Close-up view of a watch crystal, illustrating its scratch-resistant mineral glass.

Troubleshooting

- **Watch Not Running:** Check if the crown is fully pushed in to position 1. If the watch still does not run, the battery may need replacement.
- **Incorrect Time:** Ensure the crown is not accidentally pulled out. Reset the time as described in the Setup section.
- **Chronograph Hands Not Resetting to Zero:** If the chronograph hands do not return to the 12 o'clock position after resetting, consult a service center.
- **Water Inside the Watch:** If you notice condensation or water inside the watch, immediately take it to a qualified watch technician for inspection and repair to prevent further damage.

Specifications

Feature	Detail
Model Number	TW2W13200VQ
Case Diameter	45 Millimeters
Case Thickness	11 Millimeters
Band Width	20 Millimeters
Band Length	8 Inches
Case Material	Brass
Band Material	Stainless Steel (referring to buckle/hardware, strap is leather)
Crystal Type	Mineral Glass
Movement Type	Quartz

Feature	Detail
Power Source	Battery Powered
Water Resistance Depth	50 Meters
Closure Type	Buckle
Item Weight	0.23 Kilograms (7.94 ounces)
Display Type	Analog



Image: Rear view of the Timex Chicago watch, showing the stainless steel case back with engravings and the brown leather strap.

Warranty Information

Your Timex watch comes with a Limited Warranty. Please refer to the official Timex website or the warranty card included with your purchase for specific terms and conditions regarding coverage and duration. This warranty typically covers manufacturing defects but does not cover normal wear and tear, battery life, or damage caused by improper use or accidents.

Support

For further assistance, product registration, or to find authorized service centers, please visit the official Timex

website or contact their customer support. You can also visit the [Timex Brand Store on Amazon](#) for more product information and offerings.