

VINABTY Hama 00054813 Dir-3000 Replacement Remote

VINABTY Infrared Replacement Remote Control for Hama 00054813 Dir-3000 Digital Radio

Instruction Manual

INTRODUCTION

This manual provides instructions for the VINABTY Infrared Replacement Remote Control, designed specifically for the Hama 00054813 Dir-3000 Digital Radio. This remote control offers a direct replacement solution, requiring no complex programming or pairing procedures. Simply install the batteries, and it is ready for use.

The package includes one VINABTY Infrared Replacement Remote Control.

SETUP

Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide open the battery compartment cover.
3. Insert two new AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Close the battery compartment cover securely.

Note: This remote control operates using infrared technology and does not require any programming or pairing with your Hama 00054813 Dir-3000 Digital Radio. It is ready for use immediately after battery installation.



Image: Angled view of the VINABTY replacement remote control. This image illustrates the general shape and button arrangement of the remote.

OPERATING INSTRUCTIONS

Point the remote control directly towards your Hama 00054813 Dir-3000 Digital Radio. Ensure there are no obstructions between the remote and the radio for optimal performance. The maximum effective range is approximately 10 meters.

Button Functions





Image: Front view of the VINABTY replacement remote control. This image displays the layout and labels of the 15 control buttons.

- **Power Button** (): Turns the radio on or off.
- **MODE**: Switches between different operating modes (e.g., DAB, FM, Internet Radio).
- **MENU**: Accesses the radio's main menu.
- **MUTE**: Mutes or unmutes the audio.
- **INFO**: Displays information about the current station or track.
- **SNOOZE**: Activates or deactivates the snooze function for alarms.
- **SLEEP**: Sets the sleep timer.
- **MEMORY**: Accesses stored presets or memory functions.
- **ALARM**: Sets or manages alarms.
- **Navigation Buttons** (◀, ▶, ▲, ▼): Used to navigate through menus and lists.
- **SELECT**: Confirms a selection in menus.
- **Playback Controls** (, ,): For media playback functions (e.g., skip track, play/pause).
- **VOLUME (+/-)**: Adjusts the audio volume up or down.

Note: Specific button functionalities may vary slightly based on the Hama 00054813 Dir-3000 Digital Radio's firmware and features.

MAINTENANCE

Battery Replacement

When the remote control's performance degrades or it stops responding, replace the batteries. Always use new alkaline batteries of the specified type (AAA). Do not mix old and new batteries, or different types of batteries.

Cleaning

To clean the remote control, wipe it with a soft, dry cloth. Do not use abrasive cleaners, solvents, or chemical agents, as these can damage the surface or internal components.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity.
 - Replace old batteries with new alkaline batteries.
 - Ensure there are no obstructions between the remote control and the Hama radio.
 - Verify that you are within the effective operating range (up to 10 meters).
- **Buttons not working:**
 - Ensure the remote is pointed directly at the radio.
 - Clean the remote control surface, especially around the buttons, to remove any dirt or debris.



Image: Comparison of original and replacement remotes. This image shows the VINABTY remote (left) as a replacement for the original Hama remote (right).

SPECIFICATIONS

Brand	VINABTY
Model Compatibility	Hama 00054813 Dir-3000 Digital Radio
Connectivity Technology	Infrared (IR)
Number of Buttons	15
Controller Type	Button Control
Maximum Range	10 Meters

Battery Type	2 x AAA Alkaline Batteries (not included)
Product Dimensions (L x W x H)	15 cm x 8 cm x 0.8 cm

WARRANTY AND SUPPORT

This product has been tested prior to shipment to ensure functionality. For any questions, issues, or support needs regarding your VINABTY replacement remote control, please contact the seller or manufacturer directly through your purchase platform. Please refer to your purchase documentation for specific warranty details, if applicable.

