

Timex TW2W10300VQ

Timex Marlin 40mm Chronograph Watch Instruction Manual

Model: TW2W10300VQ

INTRODUCTION

Welcome to the instruction manual for your Timex Marlin 40mm Chronograph Watch. This guide provides essential information on setting up, operating, maintaining, and troubleshooting your new timepiece. Please read it carefully to ensure optimal performance and longevity of your watch.



Front view of the Timex Marlin 40mm Chronograph Watch, showcasing its classic design.

SETUP

Setting Time and Date

1. Pull the crown (middle knob on the side of the watch) out to position 2.
2. Rotate the crown clockwise or counter-clockwise to set the desired time. Ensure the AM/PM is correctly set if your watch has a 24-hour indicator.
3. Push the crown back to position 1 to engage the date quick-set function. Rotate the crown to adjust the date.
4. Push the crown fully back to position 0 to start the watch and secure the settings.

Adjusting the Strap / Quick-Release Spring Bars

Your Timex Marlin watch features a natural leather strap with quick-release spring bars, allowing for easy strap changes without tools.

- To remove the strap: Locate the small lever on the underside of the strap where it connects to the watch case. Slide the lever inwards to compress the spring bar and gently pull the strap away from the watch lug.
- To attach a new strap: Insert one end of the spring bar into the lug hole. Slide the quick-release lever inwards, align the other end of the spring bar with the opposite lug hole, and release the lever. Gently tug on the strap to ensure it is securely fastened.



The engraved case back and quick-release spring bar for easy strap changes.

OPERATING THE CHRONOGRAPH AND TACHYMETER

Your watch is equipped with a chronograph movement and a tachymeter scale for measuring elapsed time and speed.

Chronograph Functions

- **Start/Stop:** Press the top pusher (button above the crown) to start the chronograph. Press it again to stop.
- **Reset:** With the chronograph stopped, press the bottom pusher (button below the crown) to reset all chronograph hands to zero.

Using the Tachymeter

The tachymeter scale on the outer rim of the dial allows you to measure speed over a known distance (e.g., 1 kilometer or 1 mile).

1. Start the chronograph as an object (e.g., a car) passes a starting point.
2. Stop the chronograph when the object completes the measured distance (e.g., 1 kilometer).
3. The chronograph second hand will point to a number on the tachymeter scale, indicating the average speed in units per hour (e.g., km/h or mph).



Detailed view of the chronograph subdials and tachymeter scale for measuring speed.

Official video showcasing the Timex Marlin Chronograph Tachymeter Collection, highlighting key design elements and features of the watch.

MAINTENANCE

Water Resistance Guidelines

Your Timex Marlin watch has a water resistance rating of 50 meters (5 ATM). This means it is suitable for short periods of recreational swimming, but not for diving or snorkeling. Avoid operating the crown or pushers when the watch is wet to prevent water intrusion.

Caring for the Acrylic Crystal

The watch features a domed acrylic crystal, which contributes to its retro aesthetic. Acrylic crystals are durable but can be prone to minor scratches. Small scratches can often be buffed out using a specialized acrylic polish (not included).

General Cleaning and Storage

- Clean your watch regularly with a soft, dry cloth. For the case and metal parts, a slightly damp cloth can be used, followed by immediate drying.
- Avoid exposing the watch to extreme temperatures, direct sunlight for prolonged periods, or strong magnetic fields.
- Store your watch in a cool, dry place when not in use, preferably in its original packaging or a watch box to protect it from dust and impacts.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not running	Depleted battery	Replace the battery (1 Lithium Metal battery required). It is recommended to have this done by a professional watchmaker.
Time is inaccurate	Incorrect setting, exposure to magnetic fields	Reset the time as per the 'Setting Time and Date' section. Keep the watch away from strong magnets.
Chronograph hands do not reset to zero	Minor misalignment	Consult a professional watchmaker for adjustment if repeated resets do not correct the issue.






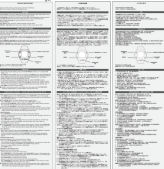
SPECIFICATIONS

- **Model Number:** TW2W10300VQ
- **Brand:** Timex
- **Case Diameter:** 40mm
- **Movement:** Chronograph Quartz
- **Case Material:** Stainless Steel
- **Strap Material:** Natural Leather
- **Crystal:** Domed Acrylic
- **Water Resistance:** 50 meters (5 ATM)
- **Battery:** 1 Lithium Metal battery (included)
- **Lug Width:** 20mm

WARRANTY AND SUPPORT

For warranty information, please refer to the documentation included with your purchase or visit the official Timex website. If you require technical assistance or have questions not covered in this manual, please contact Timex customer support through their official channels.

Related Documents - TW2W10300VQ

	<p>Timex Higher-Function Analog Watch User Manual</p> <p>Comprehensive user manual for Timex Higher-Function Analog watches, covering setup, features, maintenance, and troubleshooting in multiple languages.</p>
	<p>Timex Kids Digital Watch User Guide - Operation and Features</p> <p>Comprehensive user guide for the Timex Kids digital watch (model 791-095007). Covers features, basic operations, setting time and date, chronograph, alarm, timer, INDIGLO night light, water resistance, strap adjustments, battery information, and warranty details.</p>
	<p>Timex Intelligent Quartz Watch User Manual</p> <p>Comprehensive user manual for Timex Intelligent Quartz watches, detailing features, operation, and maintenance. Covers functions like chronographs, compass, altimeter, world time, and more.</p>
	<p>Timex Intelligent Quartz Watch User Manual and Guide</p> <p>Comprehensive user manual for Timex Intelligent Quartz watches, detailing features such as Perpetual Calendar, Fly-back Chronograph, Compass, Altimeter, Tide Temp, World Time, Yacht Racer, and more. Includes setup, operation, and maintenance instructions.</p>
	<p>Timex T100 User Guide: Operation, Features, and Maintenance</p> <p>Official user guide for the Timex T100 watch, detailing how to set time, date, use the chronograph, timer, alarms, Indiglo night-light, and information on water resistance and warranty.</p>
	<p>Timex W-191-AS Watch User Manual and Instructions</p> <p>Detailed instructions and user guide for the Timex W-191-AS digital watch, covering all features including time/date setting, chronograph, timer, interval timer, alarms, and INDIGLO night-light functionality. Includes warranty information.</p>