

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [ECOPAD](#) /

› [ECOPAD Android Tablet User Manual](#)

## ECOPAD JP K-12

# ECOPAD Android Tablet User Manual

Model: JP K-12

## INTRODUCTION

The ECOPAD JP K-12 Android Tablet is a versatile 2-in-1 device designed for both productivity and entertainment. Running on Android 13, it features a 10.1-inch IPS display, 8GB RAM, and 128GB of internal storage, expandable up to 1TB. This package includes a Bluetooth keyboard, wireless mouse, and stylus, transforming your tablet into a portable workstation.



Image: The ECOPAD Android Tablet shown with its accompanying keyboard, mouse, and stylus, highlighting its 2-in-1 functionality.

## PACKAGE CONTENTS

Please verify that all items listed below are included in your package:

- Android Tablet x1
- Bluetooth Keyboard x1
- Wireless Mouse x1
- Stylus x1
- Protective Case x1
- Screen Protector x1
- 5V2A Adapter x1 (Power Adapter)
- Type-C Charging Cable x1
- User Manual x1

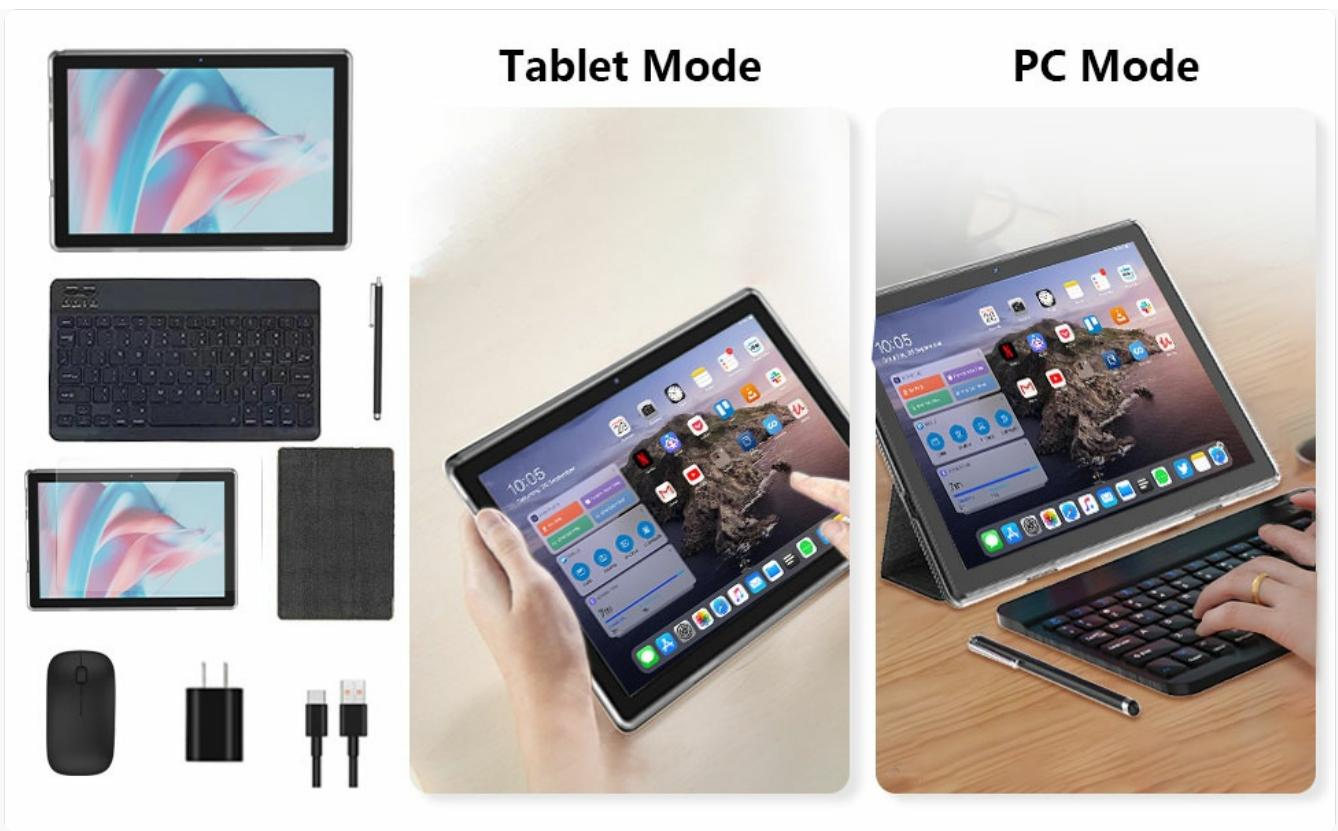


Image: A visual representation of all items included in the ECOPAD Tablet package, neatly laid out.

## SPECIFICATIONS

Feature	Detail
Operating System	Android 13
Screen Size	10.1 Inches IPS
Screen Resolution	1280 x 800 Pixels
Processor	Quad-Core Rockchip (2.0GHz)
RAM	8GB
Internal Storage	128GB ROM
Expandable Storage	Up to 1TB via TF Card Slot
Cameras	Front 2.0MP, Rear 5.0MP
Battery	6000mAh Lithium Polymer (Approx. 10 hours average life)
Connectivity	2.4GHZ/5GHZ Dual Band WiFi, Bluetooth 5.0
Dimensions (LxWxH)	9.7 x 7.3 x 0.4 inches
Item Weight	2.77 pounds

# Store All Your Favourite



8GB RAM



128GB ROM



1TB TF Card  
Expand Support



Image: An infographic displaying the tablet's key features including screen size, resolution, camera, RAM, ROM, OS, CPU, battery, and WiFi capabilities.

## SETUP GUIDE

### 1. Initial Charging

Before first use, fully charge your tablet using the provided 5V2A adapter and Type-C charging cable. Connect the Type-C cable to the tablet's charging port and the adapter to a power outlet. The charging indicator will show the charging status.

### 2. Powering On/Off

- **To Power On:** Press and hold the Power button (usually located on the side) for a few seconds until the ECOPAD logo appears.
- **To Power Off:** Press and hold the Power button until the power options menu appears, then select "Power off".
- **To Restart:** From the power options menu, select "Restart".

### 3. Connecting Accessories (Keyboard & Mouse)

The included keyboard and mouse connect via Bluetooth.

1. **Enable Bluetooth on Tablet:** Go to *Settings > Connected devices > Bluetooth* and turn Bluetooth ON.

#### 2. Pair Keyboard:

- Turn on the keyboard.
- Press the "Connect" button on the keyboard (or a combination like Fn + C, refer to keyboard's specific instructions if different) to enter pairing mode.
- On your tablet, select the keyboard from the list of available devices (e.g., "Bluetooth Keyboard"). Follow any on-screen prompts to complete pairing.

#### 3. Pair Mouse:

- Turn on the mouse.
- On your tablet, select the mouse from the list of available devices (e.g., "Bluetooth Mouse").

### 4. Inserting a TF (MicroSD) Card

To expand storage, locate the TF card slot on the side of the tablet. Gently insert a TF card (up to 1TB) into the slot until it clicks into place. Ensure the card is oriented correctly.

## OPERATING YOUR TABLET

### Tablet Mode vs. PC Mode

Your ECOPAD tablet offers two primary modes of operation:

- **Tablet Mode:** Ideal for touch-based navigation, media consumption, and casual browsing. Use your fingers or the included stylus for interaction.
- **PC Mode:** When connected to the Bluetooth keyboard and mouse, the tablet functions like a mini-laptop, suitable for typing, document editing, and more precise navigation.

# ECOPAD

 
## Android 13 Tablet



10.1 Inch large Screen,  
Powerful Quad-core Processor



Android 13 OS



Quad-core  
Processor



1280\*800 HD  
Resolution



6000mAh  
Battery

Image: A split image showing the ECOPAD tablet being used in its handheld tablet mode and then transformed into PC mode with the keyboard and mouse attached, demonstrating its versatility.

### Basic Navigation (Android 13)

- Home Screen:** Tap the home button or swipe up from the bottom (if using gesture navigation) to return to the home screen.
- App Drawer:** Swipe up from the home screen to access all installed applications.
- Notifications & Quick Settings:** Swipe down from the top of the screen to view notifications and quick settings toggles (Wi-Fi, Bluetooth, etc.).
- Multitasking:** Swipe up and hold from the bottom of the screen, or tap the square recent apps button, to see recently opened applications.

### Using the Stylus

The included stylus can be used for more precise input, drawing, or handwriting. Simply touch the stylus tip to the screen as you would with your finger.

### MAINTENANCE

#### Screen Care

To clean the screen, gently wipe it with a soft, lint-free cloth. For stubborn smudges, slightly dampen the cloth with water or a screen-cleaning solution. Avoid harsh chemicals or abrasive materials.

#### Battery Longevity

- Avoid extreme temperatures, both hot and cold, as they can degrade battery life.
- Do not let the battery completely drain frequently. Charge it before it reaches very low levels.
- Use only the provided charger or a certified compatible charger.

# Package Contents



Android Tablet \*1



Stylus \*1



Mouse \*1



Bluetooth Keyboard \*1



Protective Case \*1



Screen Protector \*1



User Manual \*1



5V2A Adapter \*1



Type C Charging Cable \*1

Image: An illustration highlighting the tablet's 6000mAh battery capacity, 5V/2A charging, and Type-C charging port, emphasizing long-lasting power.

## Software Updates

Periodically check for system updates to ensure optimal performance and security. Go to *Settings > System > System update*.

## TROUBLESHOOTING

### Tablet Not Powering On

- Ensure the tablet is sufficiently charged. Connect it to the charger for at least 30 minutes.

- Press and hold the Power button for 10-15 seconds to perform a forced restart.

## Wi-Fi Connectivity Issues

- Toggle Wi-Fi off and on in Quick Settings.
- Restart your Wi-Fi router.
- Forget the network in Wi-Fi settings and reconnect.

## Bluetooth Pairing Problems

- Ensure both the tablet and the accessory (keyboard/mouse) have Bluetooth enabled and are in pairing mode.
- Make sure the accessory is charged.
- Move the devices closer to each other.
- Remove previously paired devices from the tablet's Bluetooth settings and try pairing again.

## Slow Performance

- Close unused applications running in the background.
- Clear cache data for frequently used apps in *Settings > Apps*.
- Ensure sufficient free storage space.
- Restart the tablet periodically.

## WARRANTY AND SUPPORT

Your ECOPAD tablet comes with a standard manufacturer's warranty. Please refer to the warranty card included in your package for specific terms and conditions.

For technical support, troubleshooting assistance, or any product-related inquiries, please contact ECOPAD customer service. Most questions are answered within 24 hours.

You can typically find contact information on the ECOPAD official website or through the platform where you purchased the product.

*"Please don't hesitate to send us a message, most questions will be answered within 24 hours, ensuring your good experience with our products."* - ECOPAD Customer Support FAQ.

© 2023 ECOPAD. All rights reserved.

Model: JP K-12

## Related Documents - JP K-12

 <p>Tablet Teclast T60Plus 12" 8/256 GB Instrukcja obsługi</p> <p>TECLAST IPad (Android)</p>	<p><a href="#"><u>Teclast T60Plus 12-inch Tablet User Manual and Specifications</u></a></p> <p>Comprehensive user manual and specifications for the Teclast T60Plus 12-inch tablet, covering setup, features, connectivity, safety, and compliance.</p>
 <p><b>MESWAO MES-B3</b> User Manual <a href="http://www.meswao.com">www.meswao.com</a> Email: support@meswao.com</p>  <p>Get the user manual MESWAO OFFICIAL SITE Scan QR code to get the user manual MESWAO OFFICIAL SITE Scan QR code to get the user manual</p>	<p><a href="#"><u>MESWAO MES-B3 User Manual</u></a></p> <p>User manual for the MESWAO MES-B3 tablet, covering introduction, specifications, getting started, user interface, basic operations, apps and features, connectivity, settings, safety, warranty, and disclaimer.</p>
	<p><a href="#"><u>OSCAL Tablet PAD70 User Manual and Safety Guide</u></a></p> <p>Comprehensive guide for the OSCAL PAD70 tablet, covering setup, usage, safety precautions, and maintenance. Learn how to insert SIM/TF cards, boot the device, send SMS/MMS, change languages, and understand safety guidelines for optimal and secure operation.</p>
 <p><b>Azpen</b> USER MANUAL 8" Android 12 tablet Model: G800 Azpen Innovation <a href="http://www.azpenpc.com">www.azpenpc.com</a></p>	<p><a href="#"><u>Azpen G800 8-inch Android 12 Tablet User Manual</u></a></p> <p>Comprehensive user manual for the Azpen G800 8-inch Android 12 tablet. This guide covers device overview, buttons, power management, screen lock, text input, internet browsing, applications, system settings, detailed specifications, FCC compliance, and contact information.</p>
 <p><b>Product Manual</b> Car Stereo System</p>	<p><a href="#"><u>Car Stereo System Product Manual</u></a></p> <p>A comprehensive guide to the features and operation of the car stereo system, including navigation, Bluetooth, audio settings, and more.</p>
	<p><a href="#"><u>Blackview Tab 5 User Guide</u></a></p> <p>User guide for the Blackview Tab 5, an 8-inch Android 12 tablet featuring a Quad-Core processor, 5GB RAM, 64GB ROM, and a 5580mAh battery.</p>