

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Manuals.plus /

› [magicplux](#) /

› magicplux MDW4CW01 Mini Tabletop Dishwasher User Manual

magicplux MDW4CW01

magicplux MDW4CW01 Mini Tabletop Dishwasher User Manual

Model: MDW4CW01

1. INTRODUCTION

Thank you for choosing the magicplux MDW4CW01 Mini Tabletop Dishwasher. This appliance is designed to provide efficient and convenient dishwashing for small kitchens, offices, or even camping environments. Its compact size and versatile features aim to simplify your daily routine. Please read this manual thoroughly before operating the dishwasher to ensure safe and optimal performance.



Figure 1: magicplux MDW4CW01 Mini Tabletop Dishwasher

This image displays the magicplux MDW4CW01 Mini Tabletop Dishwasher in a kitchen setting, showcasing its compact design and modern aesthetic. The front panel features a viewing window and touch controls.

2. IMPORTANT SAFETY INSTRUCTIONS

To reduce the risk of fire, electric shock, or injury when using your dishwasher, follow these basic precautions:

- Read all instructions before using the dishwasher.
- Use the dishwasher only for its intended function.
- Do not touch the heating element during or immediately after use.
- Do not operate the dishwasher if the power cord or plug is damaged.
- Keep children away from the dishwasher, especially when the door is open.
- Use only detergents and rinse aids specifically designed for dishwashers.
- Be careful when opening the door during or after a wash cycle, as hot steam may escape.
- Ensure the dishwasher is properly grounded.



Figure 2: Child Lock Function

This image illustrates the child lock function, showing a family with young children near the dishwasher, emphasizing safety. The child lock ensures the appliance cannot be accidentally operated by children.

3. PACKAGE CONTENTS

The magicplux MDW4CW01 Mini Tabletop Dishwasher package includes the following items:

- Mini Tabletop Dishwasher Unit
- Cutlery Basket
- Drain Hose
- Inlet Hose
- Water Filling Funnel
- Measuring Cup
- Salt Filling Funnel
- Adapter (if applicable)

4. PRODUCT OVERVIEW

The magicplux MDW4CW01 is designed for convenience and efficiency in compact spaces. Its dimensions are 420 x 435 x 435 mm (Length x Width x Height), making it suitable for various settings.



270mm max

FORMAT COMPACT

Ce lave-vaisselle portable peut s'adapter à n'importe quel petit espace de vie

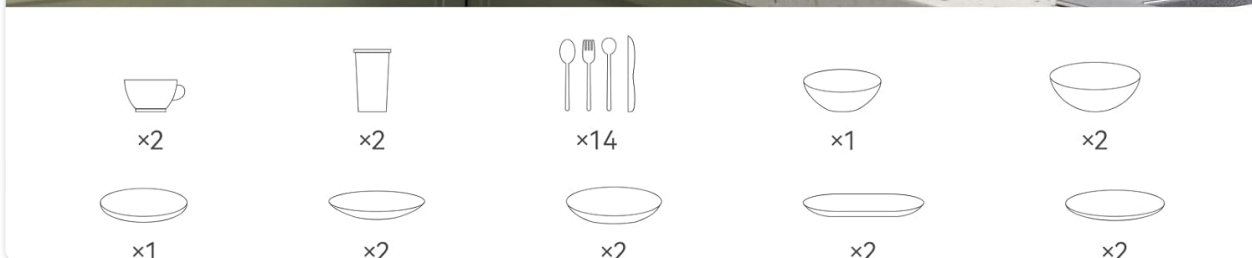 
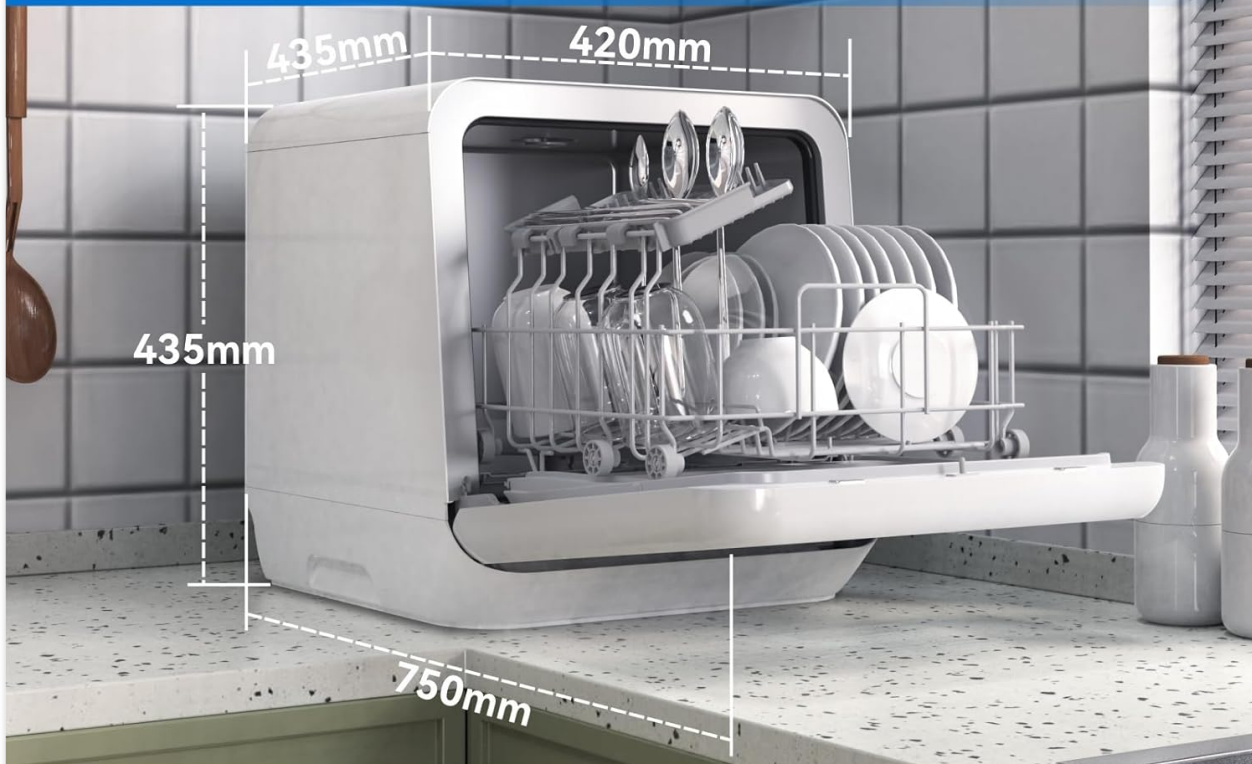 


Figure 3: Compact Size and Dimensions

This image illustrates the compact dimensions of the magicplux MDW4CW01 dishwasher, showing its measurements (420mm L x 435mm W x 435mm H) and how it fits into a small kitchen space. It also indicates the capacity for 4 place settings.

5. SETUP

5.1 Water Supply Modes

The dishwasher offers two convenient water supply options:

1. **Manual Filling:** Use the provided measuring cup and funnel to manually pour water into the designated inlet on top of the dishwasher. The appliance will signal when the water tank is full.
2. **Direct Connection:** Connect the inlet hose to a kitchen faucet for automatic water supply. Ensure the connection is secure to prevent leaks.



Figure 4: Two Modes of Water Supply

This image demonstrates the two methods for water supply: manual filling using a pitcher and funnel into the top inlet, and direct connection to a kitchen faucet via the inlet hose.

5.2 Salt Addition

To reduce water hardness and prevent limescale buildup, add dishwasher salt to the dedicated salt dispenser. This helps improve cleaning performance and prolong the appliance's lifespan.

RÉDUIT LA DURETÉ DE L'EAU

Réduit les dépôts de calcaire et évite les blocages de canalisations



Figure 5: Salt Addition for Water Softening

This image shows the process of adding dishwasher salt into the appliance using a funnel, which helps to reduce water hardness and prevent limescale deposits.

5.3 Loading the Dishwasher

Before loading, remove large food scraps from dishes to prevent drain blockage. Arrange dishes in the basket as shown in the illustrations below, ensuring proper water circulation.



Figure 6: Proper Placement of Plates

This close-up image demonstrates how to correctly load plates into the dishwasher basket for optimal cleaning.



Figure 7: Proper Placement of Cups

This close-up image demonstrates how to correctly load cups into the dishwasher basket for optimal cleaning.

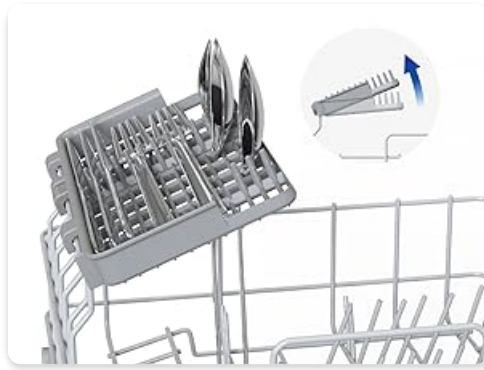 


Figure 8: Proper Placement of Cutlery

This close-up image demonstrates how to correctly load cutlery into the dishwasher basket for optimal cleaning.

6. OPERATING INSTRUCTIONS

6.1 Control Panel

The dishwasher features an intuitive LED touch control panel for easy operation. The panel displays cycle status and allows selection of various programs and functions.

6.2 Wash Programs

Choose from 6+1 wash programs to suit your needs:

6+1 PROGRAMMES

6 programmes de lavage et stockage différents, fonction extra sec pour répondre à vos besoins de lavage

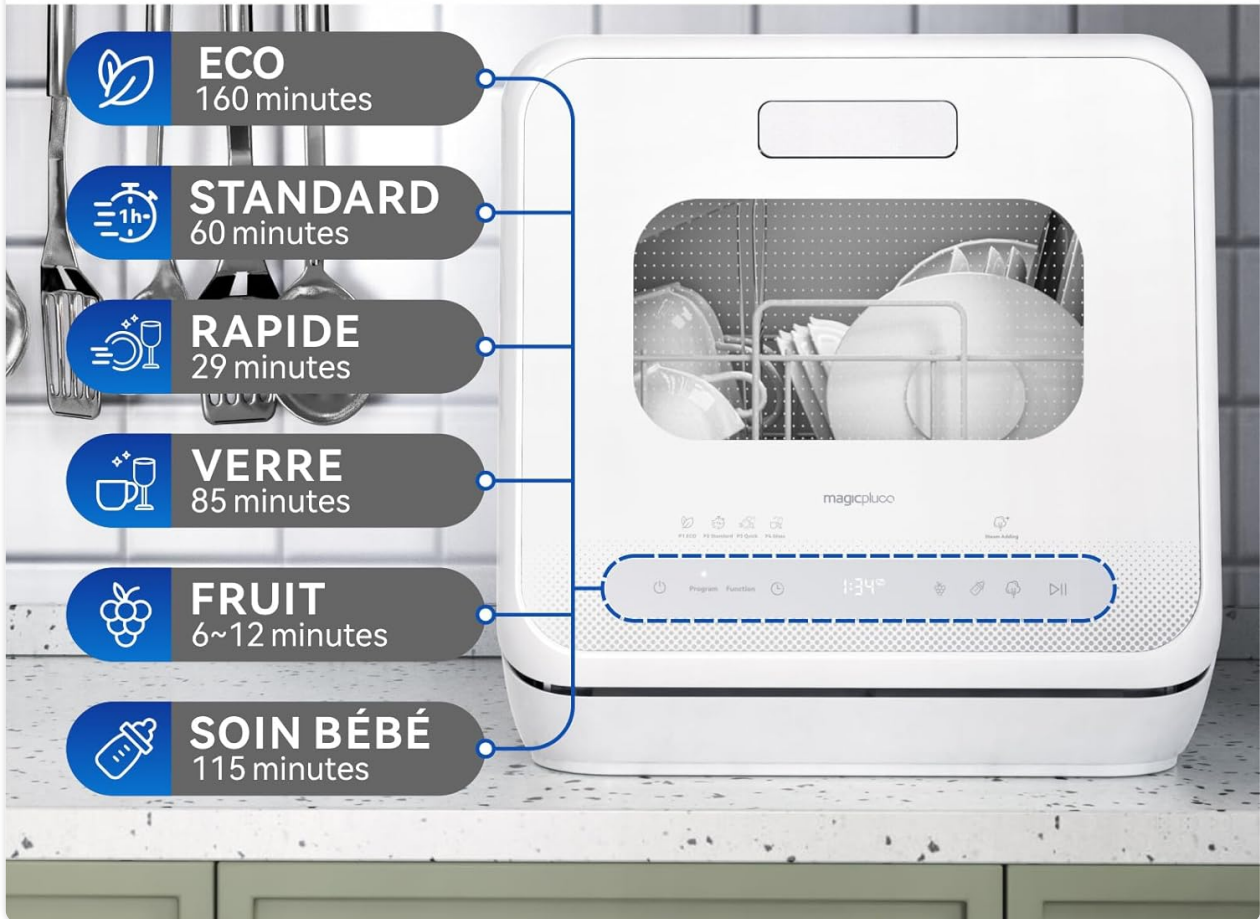 


Figure 9: Available Wash Programs

This image displays the 6+1 wash programs available on the magicplux MDW4CW01 dishwasher, including ECO (160 min), Standard (60 min), Rapid (29 min), Glass (85 min), Fruit (6-12 min), and Baby Care (115 min).

- **ECO (160 minutes):** Energy-saving program for normally soiled dishes.
- **Standard (60 minutes):** Regular program for daily use.
- **Rapid (29 minutes):** Quick wash for lightly soiled dishes.
- **Gentle (Glass) (85 minutes):** For delicate items like glassware.
- **Fruit (6-12 minutes):** Specialized program for washing fruits.
- **Baby Care (115 minutes):** High-temperature wash for baby bottles and items.
- **Extra Dry Function:** Provides enhanced drying performance.

6.3 Steam Function

The steam function helps to soften and dissolve hardened food residues on dishes before the main wash cycle, improving overall cleaning effectiveness.



Figure 10: Steam Addition

This image visually represents the steam addition feature within the dishwasher, showing steam circulating to pre-treat dishes and loosen stubborn food particles.

6.4 Delayed Start

The delayed start mode allows you to program the dishwasher to begin a wash cycle at a later time (1-24 hours). This feature can be used to take advantage of off-peak electricity rates or to have dishes ready at a convenient time.



Figure 11: Delayed Start

This image illustrates the delayed start function, showing the dishwasher operating at night, suggesting energy savings during off-peak hours.

6.5 LED Interior Light

The transparent door combined with the LED interior light allows you to observe the washing process and easily load or unload dishes.

RÉCIPIENT À SEL

Ajoutez du sel pour lave-vaisselle pour réduire la dureté de l'eau



Figure 12: LED Interior Light

This image highlights the LED interior lighting of the dishwasher, providing visibility into the washing chamber through the transparent door.

7. MAINTENANCE

7.1 Cleaning the Filters

Regularly clean the dishwasher filters to ensure optimal performance and prevent odors. Refer to the appliance diagram for filter location and removal instructions.

7.2 Exterior Cleaning

Wipe the exterior of the dishwasher with a soft, damp cloth. Do not use abrasive cleaners or solvents.

7.3 Interior Cleaning

Periodically run a self-clean cycle or use a dishwasher cleaner to remove any buildup and maintain hygiene.

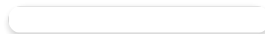 


Figure 13: Before and After Cleaning

This image visually compares a dirty plate before washing with a clean, sparkling plate after being processed by the dishwasher, demonstrating its cleaning effectiveness.

8. TROUBLESHOOTING

If you encounter issues with your dishwasher, consult the table below for common problems and solutions:

Problem	Possible Cause	Solution
Dishwasher does not start	Power supply issue, door not closed properly, program not selected.	Check power connection, ensure door is latched, select a wash program.
Dishes are not clean	Improper loading, clogged spray arms, insufficient detergent, water hardness.	Reload dishes correctly, clean spray arms, use appropriate detergent, add dishwasher salt.
Water remaining in the tub	Clogged drain hose or filter.	Clean the drain filter, check for kinks in the drain hose.

Problem	Possible Cause	Solution
Unusual noise during operation	Dishes interfering with spray arm, foreign object in pump.	Rearrange dishes, inspect pump area for obstructions.

If the problem persists after attempting these solutions, please contact customer support.

9. SPECIFICATIONS

Detailed technical specifications for the magicplux MDW4CW01 Mini Tabletop Dishwasher:

Feature	Value
Model Name	MDW4CW01
Dimensions (L x W x H)	43.5 x 42 x 42.5 cm
Item Weight	12.5 kg (27.56 pounds)
Voltage	220 Volts (AC)
Water Consumption	5 Liters (per cycle)
Noise Level	58 Decibels
Interior Material	Stainless Steel
Special Features	Extra Drying Function, Cycle Status Indicator, Rapid Wash, LED Interior Lighting, Touch Screen
Color	White
Installation Type	Freestanding

9.1 Energy Label Information

For detailed energy efficiency information, please refer to the official EU energy label:



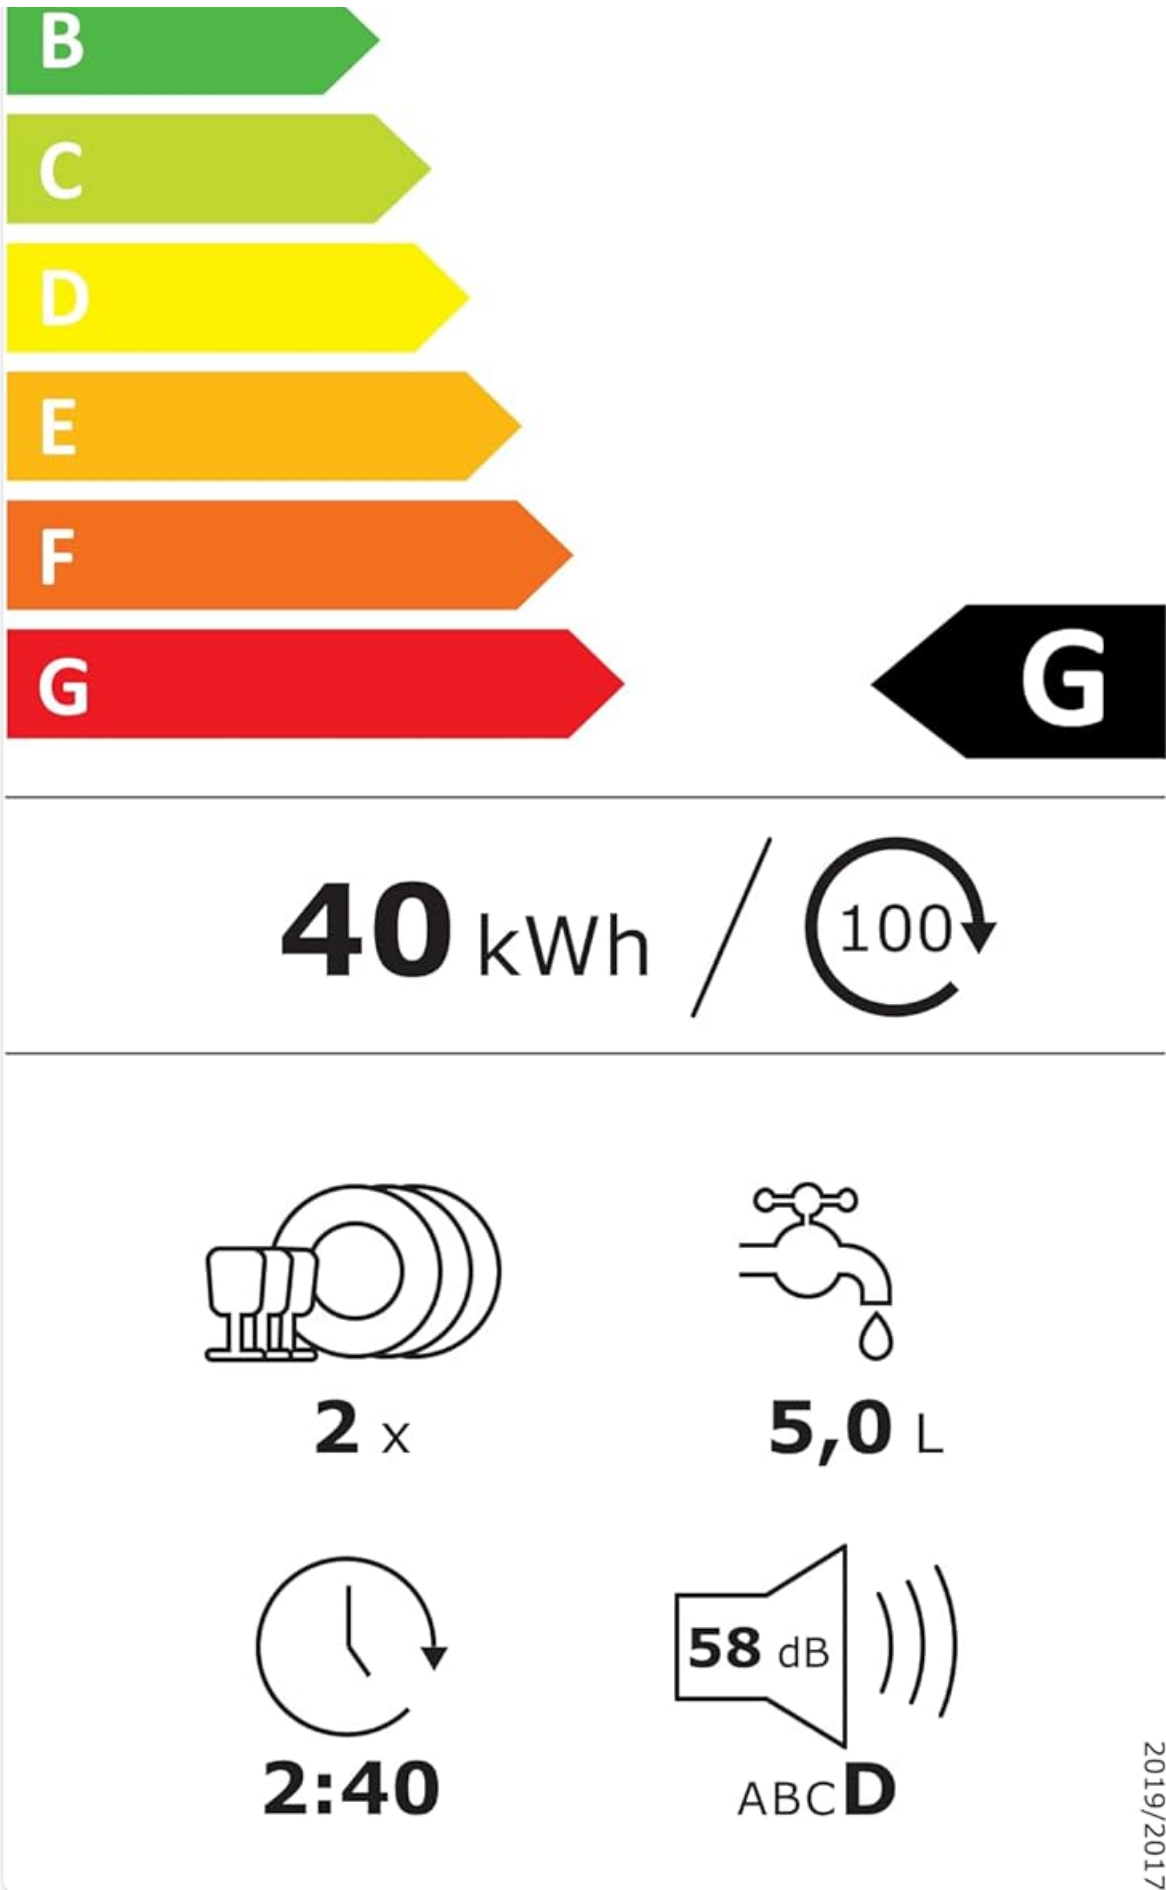 


Figure 14: EU Energy Label for MDW4CW01

This image displays the EU Energy Label for the magicplux MDW4CW01 dishwasher, indicating its energy efficiency class (G), energy consumption (40 kWh/100 cycles), water consumption (5.0 L), and noise level (58 dB).

You can also access the product information sheet and energy label details online: [EPREL Product Information Sheet](#)

10. WARRANTY AND CUSTOMER SUPPORT

magicplux products are covered by a **12-month warranty**. In case of any product issues, magicplux is committed to providing a satisfactory solution. We strive to offer excellent customer service and will do our best to resolve any problems promptly.

For assistance, please contact magicplux customer support through your purchase platform or visit the official magicplux store for more information.